


2006

SRX

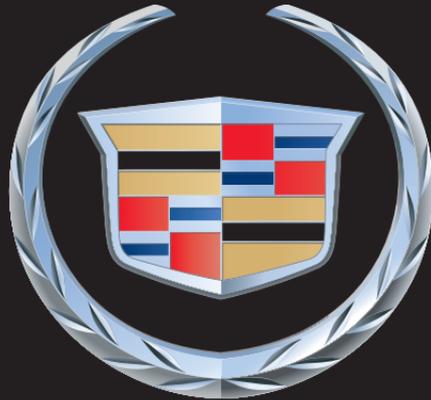

CUSTOMER CONVENIENCE/PERSONALIZATION GUIDE

TABLE OF CONTENTS

DRIVER INFORMATION	Instrument Panel and Courtesy Lights8	Power Adjustable Pedals13
Instrument Panel1	Rear Washer/Wiper8	Cruise Control14
Instrument Panel Cluster2		Dual Climate Control14
Driver Information Center3		Rear Air Conditioning14
	ENTERTAINMENT SYSTEMS	
SEATS, LIGHTS & WIPERS	Standard Audio System9	POWERTRAIN & CHASSIS
Manual Seat Adjustments5	Bose® Audio System9	Engine Fuel15
Power Seat Adjustments5	Navigation System9	Transmission15
Power Lumbar6	Rear Seat Entertainment (RSE) . .11	Traction & Stability15
Heated Front Seats6		
Second-Row Seat6		
Third-Row Access6	CONVENIENCE FEATURES	OWNER PRIVILEGES™
Power Third-Row Seat7	OnStar®12	Roadside Service16
Child Restraints (LATCH)7	XM Satellite Radio12	Customer Assistance16
Memory Seat and Mirrors8	Universal Home Remote12	Cadillac Online16
	Ultrasonic Rear Parking Assist (URPA)13	
	UltraView/UltraView Plus	
	Sunroof13	

Driver Information



INSTRUMENT PANEL

- 1. Air Outlets
- 2. Turn Signal/Multifunction Lever
- 3. Instrument Panel Cluster
- 4. Windshield Wiper Lever


- 5. Hazard Warning Flasher Button
- 6. Audio System/
Navigation System (if equipped)
- 7. Glove Box
- 8. Dual Climate Control

- 9. Automatic Transmission Shift
Lever
- 10. CD Player
- 11. Steering Wheel Controls

Refer to your Owner Manual for more information.

INSTRUMENT PANEL CLUSTER

1. Oil Pressure Light
2. Tire Pressure Light
3. Fog Lamp Light
4. Tachometer
5. Cruise Control Light
6. High Beam On Light
7. Speedometer
8. Malfunction Indicator Lamp (Check Engine Light)
9. Air Bag Readiness Light
10. Fuel Gauge
11. Safety Belt Reminder Light
12. Charging System Light
13. Odometer/Driver Shift Control (DSC) Display
14. Antilock Brake System (ABS) Warning Light
15. Traction Control System (TCS) Warning Light
16. Brake System Warning Light
17. Security Light
18. Engine Coolant Temperature Warning Light
19. Engine Coolant Temperature Gauge

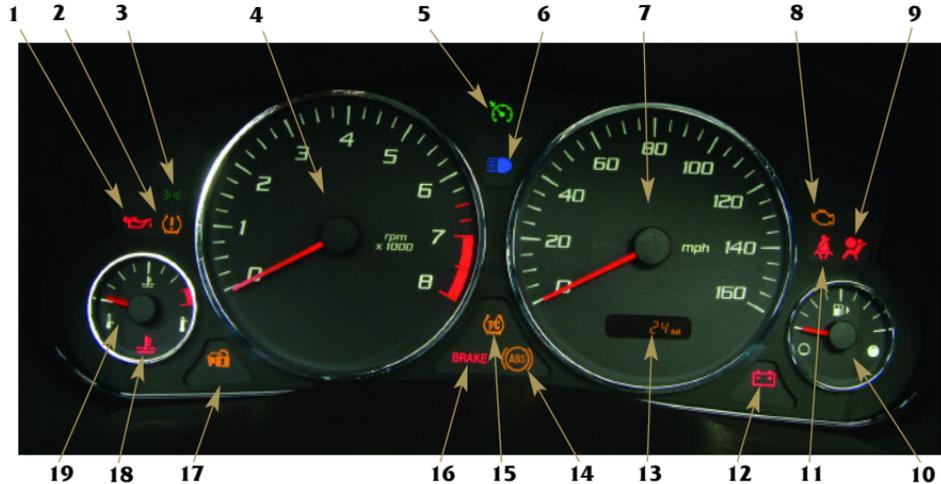

Note: Some of the gauges and indicators may differ from the illustration presented. The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation.

It is important for you to read your Owner Manual and become familiar with the information that is being relayed to you by the lights, gauges and indicators, particularly the message center, as well as what action can be taken to ensure your safety and to prevent damage.

DRIVER INFORMATION CENTER (DIC)

The DIC displays vehicle system status, warning messages, personalization features and the clock.

All information will appear on the audio display or, if the vehicle is equipped with the optional navigation system, it will appear on the navigation display.

The following procedures are provided only to acquaint you with the DIC. It is strongly recommended that you review your Owner Manual to become familiar with the various messages and how to access and/or reset them.

Vehicle System Status

The vehicle system menu provides the following information:

- OUTSIDE TEMPERATURE
- TRIP ODOMETER A
- TRIP ODOMETER B
- FUEL RANGE
- AVERAGE FUEL ECONOMY
- INSTANTANEOUS FUEL ECONOMY
- FUEL USED
- AVERAGE VEHICLE SPEED
- TIMER
- BATTERY VOLTAGE
- TIRE PRESSURES (Requires optional Tire Pressure Monitor)
- ENGINE OIL LIFE
- TRANSMISSION FLUID LIFE

You can view the above information at any time, but only one item at a time. Refer to your Owner Manual for detailed descriptions of the menu items and how to reset them.

Display Status without Navigation

To display the vehicle system status menu in vehicles without navigation, the vehicle must be in RUN.

Use the following controls to access the vehicle system status menu:

1. Push the arrows on the **INFO** button located to the lower right of the audio display to scroll through the vehicle system information.
2. Press the **CLR** button to clear and/or reset DIC items to zero. Refer to your Owner Manual for detailed description.



Refer to your Owner Manual for more information.

Reviewed with Customer (Please Check Box)

Display Status with Navigation (if equipped)

To display the vehicle system status menu in vehicles with navigation, the vehicle must be keyed On. Push the /□ hard key to display the main system menu.

1. The vehicle system status information is displayed on the upper-right corner of the display.

Touch this soft button to cycle through the vehicle system status menu.



2. To view the complete vehicle system status menu, touch and hold this rectangular soft button or touch the soft button on the lower part of the display.
3. Cycle through the menu items with the soft buttons.
4. The **RESET** soft button can be pushed to reset.

Warning Messages

Messages will appear on the audio or navigation/audio display if there is a problem sensed in one of your vehicle's systems. You must acknowledge a message to clear it from the screen for further use.

For vehicles without navigation, press the **CLR** button next to the audio display to clear a message.

To clear a message in vehicles with navigation, press the **OK** soft button.

Note: Removing the message does not remove the sensed problem or condition. Refer to your Owner Manual for a list of messages and accompanying icons, a description of the condition and the recommended action. Be sure to regard seriously any message that appears and take the appropriate action.

Check Warning Lights with OnStar (if equipped)

If your vehicle is equipped with OnStar and your Malfunction Indicator Lamp (Check Engine Light) illuminates, or any other warning message appears, you can press the blue OnStar button and speak to an OnStar Advisor. In many vehicles, OnStar Advisors can access certain diagnostic information and tell you how serious the condition is and what you should do about it.

Personalization

Your vehicle is equipped with personalization capability that allows you to program certain features to a preferred setting for up to two drivers. To personalize programmable features, please refer to the Personalization Instructional CD and booklet or the Owner Manual provided with your vehicle.

Setting the Time

If your vehicle is not equipped with the Navigation System:

1. Press the TUNE/SEL knob to enter the main menu.
2. Turn the TUNE/SEL knob until "SET CLOCK" is displayed.
3. Press the TUNE/SEL knob to select SET CLOCK.
4. Turn the TUNE/SEL knob to adjust the time.

5. Press the TUNE/SEL knob to update the time. "VEHICLE TIME UPDATED" will be displayed.

If your vehicle is equipped with navigation, refer to the Entertainment and Navigation Supplement.

Seats, Lights & Wipers

MANUAL SEAT ADJUSTMENTS (passenger side only)

Use the bar at the front of the seat to adjust seat position. Use the lever at the side of the seat to recline the seat or return it to upright.

POWER SEAT ADJUSTMENTS


If your vehicle has this feature, the power seat controls are located on the outboard sides of the front seats.

1. The front or rear part of the lever will raise or lower the front or rear of the seat cushion.

Move the entire lever up or down to raise or lower the entire seat.

Slide the entire lever forward or rearward to move the seat in that direction.

2. Move the vertical lever rearward to recline, and forward to return, the seatback.

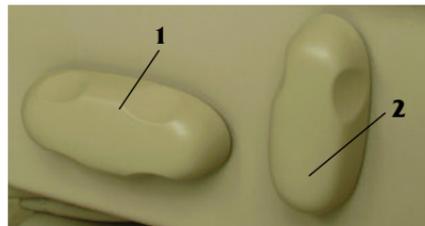

Refer to your Owner Manual for more information.

Reviewed with Customer (Please Check Box)

POWER LUMBAR (if equipped)

If your vehicle has this feature, a two-way switch is located beneath the power seat switch controls. Hold the control forward or rearward to increase or decrease support.

**HEATED FRONT SEATS (if equipped)**

The buttons to heat the driver and front passenger seats are located on the Climate Control panel. The ignition must be on to heat the seats and the heated seats must be turned on again (if desired) after the vehicle has been turned off.



1. Press the button twice for the seat you wish to heat to set the heat to LO (approximately normal body temperature).
2. Press the button once to set the heat at HI (slightly higher than LO setting).
3. Press the button a third time to turn the heat OFF.

The selected setting will appear on the display panel.

SECOND-ROW SEAT**Adjusting the Seat**

An adjustment lever to move the seat forward or rearward is located under each side of the 60/40 seat. After adjustment, move the seat back and forth to make sure it locks into place.

THIRD-ROW ACCESS

The right side of the second-row 60/40 seat has an easy entry feature to make it easier to get into and out of the third-row seat, if equipped.



To operate the easy entry seat:

- Pull the release lever located on the top of the seat upward.
- Tilt the seatback forward by pulling the top of the seat forward.
- Pull upward on the release lever located on the back of the seat and rock forward until it stops.

POWER THIRD-ROW SEAT (if equipped)

If your vehicle has a third-row seat, it includes a power-folding feature to provide additional cargo space. Before the seat can be folded, the headrests must be removed and stored.

Removing Headrests

1. Press the button on top of the seatback below the headrest and pull up on the headrest.
2. Open the storage compartment cover behind the seat and insert the headrest posts through the slats in the carpet.
3. Position and snap the headrests in the storage tray provided.

The seatback will not fold all the way down if the headrests are not removed.

Folding/Unfolding Seat

Before folding or unfolding the third-row seat, *all* of the following conditions must be met:

- The vehicle must be in Park and not have a low battery.

Refer to your Owner Manual for more information.

- The liftgate or right-side rear door must be open.
- The carpet seatback panel must be folded and attached to itself.
- The ignition must be in ON or ACCESSORY. If not, pressing the unlock button on the key fob or door *three* times will enable power folding or unfolding for two minutes.



Two buttons are located on the right-side panel behind the third-row seat. One folds and raises the seat and the other changes the seatback angle.

The other button for folding the seat is located on the right-side trim panel behind the second-row seat.



Press and hold either folding button to fold or unfold the seat.

After the seat is folded, the panel on the back of the seat must be flipped forward to create a flat floor space. Before returning the seat to its upright position, the panel must be returned to its folded position.

CHILD RESTRAINTS (LATCH)

Your vehicle is equipped with LATCH anchors, and may have top tethers for use with a LATCH compatible child restraint. If your child restraint is not compatible with the LATCH system, you may still use it by installing the child restraint with the seat belt system.

Choose a child restraint that is appropriate for the child's age and size (weight and height).

See Section 1 of your Owner Manual.

Reviewed with Customer (Please Check Box)

MEMORY SEAT AND MIRRORS (if equipped)

The buttons to set the seat and mirror memory are located on the driver's armrest. To set the memory, first adjust the driver's seat, including the seatback recliner, both outside mirrors, the throttle and brake pedals, audio settings and HVAC settings.

1. Press and hold button 1 until two beeps are heard to confirm memory setting.
2. Repeat the procedure using button 2 to store memory for a second driver.



Setting Exit Position

1. Press button 1 or the unlock symbol on the keyless entry fob with number 1 on the back. Adjust the driver's seat to the desired exit position.
2. Press and hold the exit button, located above buttons 1 and 2 on the driver door armrest, until two beeps are heard to confirm exit memory setting. Repeat the procedure for a second driver using button 2 and the key fob with 2 on the back.

To recall stored exit positions, press and release the exit button. A beep will sound and the seat will move to the memory exit position for the identified driver. If no exit position is stored, the seat will move all the way back.

Note: The vehicle must be in Park to recall the exit position.

For further programming instructions for seat and mirror memory, refer to your Owner Manual or Personalization Instructional CD and Booklet.

INSTRUMENT PANEL AND COURTESY LIGHTS

Slide the lever in the overhead console forward to brighten the panel lights and past the resistance point to turn the courtesy lights on. Slide the lever in the opposite direction to turn off the courtesy lights or dim the panel lights.



REAR WASHER/WIPER

The rear washer/wiper control is located in the overhead console. Press the center of the switch to wash the rear window. Press the forward part of the switch for delayed wipes. Press the rear part of the switch for steady wipes.



Entertainment Systems

Your SRX is equipped with one of the following audio systems.

STANDARD AUDIO SYSTEM: AM/FM radio with Radio Data System (RDS), a single-disc CD player or optional six-disc CD changer, and seven speakers (shown below).



BOSE® AUDIO SYSTEM: Bose® AM/FM stereo radio with RDS & Digital Signal Processing (DSP), eight speakers and integral six-disc CD changer.

NAVIGATION SYSTEM: Bose premium eight-speaker audio system and integrated DVD navigation system with movie-playing capability when vehicle is in Park.

Refer to your Owner Manual for more information.

Note: The following procedures apply only to audio systems without the navigation system. If your SRX is equipped with the navigation system, a supplemental manual is provided and must be referenced for audio system operating procedures.

Radio Controls

PWR: Press this button to turn the system on and off.

VOL: Rotate this knob to adjust the volume.

BAND: Press this button to select FM1, FM2, AM or XM1 or XM2 (if equipped).

SOURCE: Press this button to select the radio or compact disc.

▲ SEEK ▼: Press this button's up or down arrow to seek the next or previous station.

▲ SCAN ▼: Press this button's up arrow to scan to the next station. The radio will play a station for five seconds and then go to the next receivable station. Press the button again to stop scanning. To scan your

preset stations, press and hold this button for more than two seconds until you hear a beep. Press the button again to stop scanning.

Setting Preset Stations

Your audio system includes six numbered preset buttons (F1 through F6) that allow you to return to your favorite stations. To set a frequency to a preset button:

1. Turn the radio on.
2. Press BAND to select FM1, FM2, AM or XM1 or XM2 (if equipped). Six stations can be preset for each band.
3. Tune in the desired station.
4. Press and hold one of the numbered buttons until you hear a beep. The preset number will appear on the display.
5. Repeat the steps for each pushbutton.

Reviewed with Customer (Please Check Box)

BAND

F1

F2

F3

F4

F5

F6

SOURCE

SCAN

CLR

Single-Disc CD Player Controls

To play a CD, insert the disc, label up, partway into the CD slot. The player will pull it in. Use the following controls to operate the player.

▲ **SEEK** ▼: Press this button's up or down arrow to seek the next or previous track on the CD.

▲ **SCAN** ▼: Press this button to listen to each track for 10 seconds. Press the button again to stop scanning tracks.

△ **EJECT**: Press and release this button to stop a CD when it is playing or to eject a CD that is currently playing.

Six-Disc CD Changer Controls (without Navigation System)

Loading One Disc:

With the ignition on or off, do the following:

- Press and release the LOAD button. "Please Wait" will appear on the display.
- Load the disc when the display reads "INSERT." Insert a disc partway into the slot, label side up. The player will pull the disc in.

Loading Multiple Discs:

With the ignition on or off, do the following:

- Press and hold the LOAD button for two seconds. A beep will be heard and "Please Wait" will appear on the display.
- When the display reads "INSERT," load a disc partway into the slot, label side up. The player will pull it in.

If the radio is on, the last disc loaded will begin to play automatically. Use the SEEK, SCAN and EJECT buttons as described previously to operate the player.

Note: CDs with any labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at one time, or if scratched or damaged CDs are played, the CD player could be damaged. When using the CD player, use only CDs in good condition without added labels; load one CD at a time; and keep the CD player and the loading slot free of foreign materials, liquids and debris.

Digital Signal Processing (DSP) (if equipped with Bose® Audio System)

The Digital Signal Processing (DSP) system provides a choice of five different listening experiences:

- **DSP Normal:** This setting provides the best overall audio performance for all passengers.

- **Talk:** This setting should be used when listening to non-musical entertainment, such as news, talk shows, and sports broadcasts. This setting helps make spoken words sound clearer.
- **Spacious:** This setting makes the listening space seem larger.
- **Rear Seat:** This setting adjusts the audio to give the rear seat passenger(s) the best possible sound qualities.
- **Driver Seat:** This setting adjusts the audio to give the driver the best possible sound qualities.

To select a DSP setting, perform the following:

1. Press the **TUNE/SEL** knob to enter the main menu.
2. Turn the **TUNE/SEL** knob until one of the five settings appears on the display.
3. Press the **TUNE/SEL** knob to select a DSP setting.
4. Press **CLR** to exit the display.

Refer to your Owner Manual for more information.

REAR SEAT ENTERTAINMENT (RSE)

The available RSE system (for rear seat passengers only) includes a DVD player, video display screen, two sets of wireless headphones and a remote control. DVD power may be turned on using the remote control or by controls on the unit itself with the ignition in the ON, ACC, or Retained Accessory Power position.

The audio portion of a DVD program can be played through the wireless headphones or the vehicle radio speakers. Use the SOURCE button on the RSE to select HEADSETS or SPEAKERS for the RSE audio. A movie in the navigation DVD player may also be viewed on the RSE. Use the SOURCE button to select FRONT. See Section 3 of your Owner Manual for full RSE operating instructions.



Parental Control: Press this button while a DVD or CD is playing to freeze the video and mute the audio. Press the button again to restore normal operation.

RSE Lock: Press this button to prevent rear passengers from operating the front seat audio controls, such as Source and Volume.

RSE On: Press this button to give rear passengers control of all audio operations of the radio (BAND, CDX, DVD, etc.) as well as the volume for all vehicle speakers.

RSE Off: Press this button to turn off the Rear Seat Entertainment system. When this button is pressed, rear seat passengers can only eject the disc from the Rear Seat Entertainment device.



Reviewed with Customer (Please Check Box)

Convenience Features

ONSTAR®

The OnStar system provides in-vehicle safety, security and phone services, available 24 hours a day, 7 days a week. These services are easily accessed through the three OnStar buttons in your vehicle. For more information about OnStar features, refer to the OnStar Owner's Manual and Audio CD, located in your glove box.

XM SATELLITE RADIO

Two subscription service bands are available: XM1 and XM2. To access them on equipped radios, press the BAND button until "XM1" or "XM2" appears on the display. An extra-cost subscription to XM Satellite Radio service brings you the quality of digital audio and text reception from coast to coast.

Available only in the 48 contiguous states and Canada (if available), XM offers more than 120 channels of music, news, sports, talk and children's programming. For more information, contact XM on the Internet at www.XMradio.com or call 1-800-852-XM (9696).

UNIVERSAL HOME REMOTE

This programmable remote can store three frequencies for items such as a garage door opener, entry door lock or security system. With the ignition



OFF, program the remote as follows:

- Press and hold down the two outer buttons on the unit until the indicator light flashes (about 20 seconds — do not hold for more than 30 seconds).
- Hold the end of your hand-held transmitter up to three inches from the remote and press its button and the remote button you wish to program.
- Release both buttons when the indicator light flashes rapidly.
- Press and release the remote button again. If the indicator light stays lit constantly, programming is complete.
- Continue programming additional devices using the remote, but do not press the two outside buttons on the remote again.

See Section 2 of your Owner Manual for complete Universal Home Remote operating instructions.

ULTRASONIC REAR PARKING ASSIST (URPA)


This feature helps you determine how close an object is to your rear bumper. URPA operates only at speeds less than 3 mph (5 km/h) and detects objects at distances between 5 ft. (1.5 m) and 1 ft. (.03 m). Both a variable audible chime and a visual display located above the rear window convey distance to an object.

ULTRAVIEW/ULTRAVIEW PLUS SUNROOF

On vehicles equipped with UltraView or UltraView Plus sunroofs, the switches are located in the overhead console and operate as follows:

UltraView

1. This switch operates the front sunroof. Press the rear of the switch to the first detent to open partially and press to the second detent for express open. The express feature opens to a comfort stop. Press again to express-open all the way. Press the front of the switch to the first detent to partially close, and press to the second detent to express-close.
2. This switch operates the front sunshade. Press the rear of the switch to the first detent to open partially and to the second detent for express-open. Press the front of the switch to the first detent to partially close, and to the second detent to express-close.

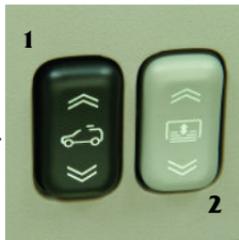

UltraView Plus (if equipped)

There is a third switch located below button 2. This switch operates the rear sunshade. Press the rear of the switch to open; press the front of the switch to close.

POWER ADJUSTABLE PEDALS

If your vehicle is equipped with this feature, you can change the position of the throttle and brake pedals. The switch is located on the side of the steering column. Push the switch rearward to move the pedals closer to you or forward to move the pedals away from you.



Refer to your Owner Manual for more information.

Reviewed with Customer (Please Check Box)

CRUISE CONTROL

Use the Cruise Control for steady driving on relatively straight, uncrowded

roads. The controls are located on the end of the multifunction lever.

The symbols function as follows:

○ **(Off):** This position turns the system off.

I **(On):** This position turns the system on.

+ **(Resume/Accelerate):** Push the lever to this position to resume a previously set speed or to accelerate when Cruise Control is already active.

⊖ **(Set/Decrease):** Pressing this button sets the speed or decreases vehicle speed when cruise is already active.



DUAL CLIMATE CONTROL

Your vehicle's Dual Climate Control system allows the driver and front passenger to set his/her own temperatures. Key operating features include:

AUTO: Press this button to automatically control the inside temperature, the air delivery mode and the fan speed.

⏴/⏵ **(Mode):** Press this button to control the system manually. To clear fog from your windshield, press this button until the Floor/Defog icon (⏴/⏵) appears on the display. The Floor/Defog mode directs air between the windshield, floor outlets

and side windows. Press AUTO again to return to automatic operation.

PWR: Press this button on either side of the control panel to turn the driver or passenger climate control system on. Press the up or down arrow to increase or decrease the temperature for that system.

See your Owner Manual for complete operating instructions.

REAR AIR CONDITIONING

If equipped, your Rear Air Conditioning system provides air conditioning to the second- and third-row occupants. The system includes four air outlets: two over the outboard second-row seats and two more near the cargo area or third-row seat (if equipped). The system can be controlled from the front overhead console or it can be placed in the AUX mode to allow rear passengers to control the system from the second-row overhead console.

Powertrain & Chassis

ENGINE FUEL

For normal driving, use regular unleaded fuel rated at 87 octane or higher. If the octane rating is less than 87, you may experience engine knock when driving. For optimum acceleration and performance, use premium unleaded fuel with an octane rating of 91 or higher.

TRANSMISSION

Automatic Overdrive

Automatic Overdrive is best used for normal driving. For further information regarding gear selection for various driving conditions, refer to your Owner Manual.

Driver Shift Control (DSC)/ Sport Mode

When Driver Shift Control (DSC) is activated, your SRX transmission will allow you to change gears similar to a manual transmission for more control. It will also provide firmer shifting and increased performance.

1. Slide the shift lever over from AUTOMATIC OVERDRIVE (D) to the right DSC area. The Sport Mode light (⚙️) in the instrument panel will illuminate.
2. Push the shift lever forward to upshift or rearward to downshift. The intended gear number will appear in place of the odometer display.

TRACTION & STABILITY

Traction Control System

The Traction Control System comes on automatically every time you start your vehicle. When one or more of the drive wheels begin to spin from traction loss, the system will apply braking to the spinning wheel(s) and

may reduce engine power until traction is regained.

If your vehicle becomes stuck, and rocking the vehicle is required, the system should be turned off.

- Press the button located near the shift lever to turn the system off or back on.



StabiliTrak® – Stability Control System

StabiliTrak is an advanced computer-controlled system that assists with directional control of the vehicle during sudden maneuvers or low traction situations. It is normal to hear the system working, and the system will automatically disengage Cruise Control when activated.

Refer to your Owner Manual for more information.

Reviewed with Customer (Please Check Box)

Owner Privileges™

To make your ownership experience as satisfying and rewarding as possible, we are proud to provide you with Cadillac's exceptional Owner Privileges, designed to accommodate you anytime and anywhere.

ROADSIDE SERVICE 1-800-882-1112

Roadside Service provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services:

- Towing Service
- Battery Jump-Starting
- Lockout Assistance
- Fuel Delivery
- Flat Tire Assistance

Roadside Assistance and OnStar (if equipped)

If your vehicle is OnStar-equipped, press the blue OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your condition, contact Roadside Assistance and relay your exact

location so you will get the help you need.

Trip Interruption: If your trip is interrupted due to a component failure covered under warranty, incidental expenses may be reimbursed, including hotel, meals and rental car.

Courtesy Transportation may also be provided for warranted repairs, including shuttle service for same-day repairs and loaner transportation for overnight repair.

Roadside Service is also available to Cadillac customers beyond the warranty period for a charge.

CUSTOMER ASSISTANCE 1-800-458-8006

In Canada, call 1-888-446-2000

Should you need to ask a question, make a comment, or request additional information, the Cadillac Customer Assistance Center is staffed around the clock with professionals to serve you.

When you call Cadillac Roadside Service or Customer Assistance, when possible, please provide the phone advisor with:

- Your telephone number
- Your location
- Your Cadillac's location
- A description of the problem
- Vehicle Identification Number
- Year and model of your Cadillac
- Delivery date
- Current mileage

CADILLAC ONLINE

For more information about your Cadillac, including access to the Cadillac owner Center at My GMLink, visit www.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice.

SRX is a registered trademark of Cadillac Motor Car Division and General Motors Corporation. Copyright 2005 by Cadillac Motor Car Division. All rights reserved.



06SRXGTK A

Refer to your Owner Manual for more information.

Reviewed with Customer (Please Check Box)

Driver
Information

Seats, Lights
& Wipers

Entertainment
Systems

Convenience
Features

Powertrain
& Chassis

Owner
Privileges™

Cadillac

