



Getting to Know Your 2007 Avalanche



Table of Contents

DRIVER INFORMATION

Instrument Panel	2
Instrument Panel Cluster	3
Driver Information Center	4

SAFETY & SECURITY

Remote Keyless Entry	6
Content Theft-Deterrent System	6
OnStar®	6

COMFORT

Power Seat Controls	7
Heated Seats	7
Memory Settings	8
Adjustable Pedals	8
Sun Visor Adjustment	8
Manual Climate Controls	8
Automatic Climate Controls	9

ENTERTAINMENT

Audio System Features	10
Multiple-Disc CD Player	13
Touch Screen Navigation Infotainment System	13
XM Satellite Radio	14
Rear Seat Audio and DVD Rear Seat Entertainment Systems	14
Audio Steering Wheel Controls	15

CONVENIENCE

Automatic Dimming Rearview Mirror with Compass and Temperature Display	15
Remote Vehicle Start	16
Auto Turn Signal	16
Cruise Control	17
Rainsense™ II Windshield Wipers	17
Heated Windshield Washer Fluid	18
Rear Vision Camera	18
Automatic Headlamp System	18
Sunroof	19
Ultrasonic Rear Parking Assist	19
Universal Home Remote	19
Folding the Rear Seats	20
Lowering the Midgate™	20
Rear Window Removal and Storage	21

PERFORMANCE & MAINTENANCE

StabiliTrak® – Stability Control System	22
Tire Pressure Monitor	23
Tighten Gas Cap	23
Resetting the Engine Oil Life System	23

OWNER INFORMATION

Roadside Assistance	24
My GMLink	24

Congratulations on your purchase of a Chevrolet Avalanche. Please read this information about your vehicle's features and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

DRIVER INFORMATION


Instrument Panel



- | | | |
|--|------------------------------------|--|
| A. Air Outlets | G. Audio System | N. Audio Steering Wheel Controls |
| B. Turn Signal/Multifunction Lever | H. Exterior Lamps Control | O. Climate Controls |
| C. Instrument Panel Cluster | I. Dome Lamp Override Button | P. Accessory Power Outlets |
| D. Shift Lever | J. Automatic Transfer Case Control | Q. StabiliTrak Button
(if equipped) |
| E. Tow/Haul Selector Button
(if equipped) | K. Cruise Control Buttons | R. Glove Box |
| F. Driver Information Center Controls | L. Tilt Steering Wheel Lever | |
| | M. Horn | |

See Section 3 of your Owner Manual.

Instrument Panel Cluster

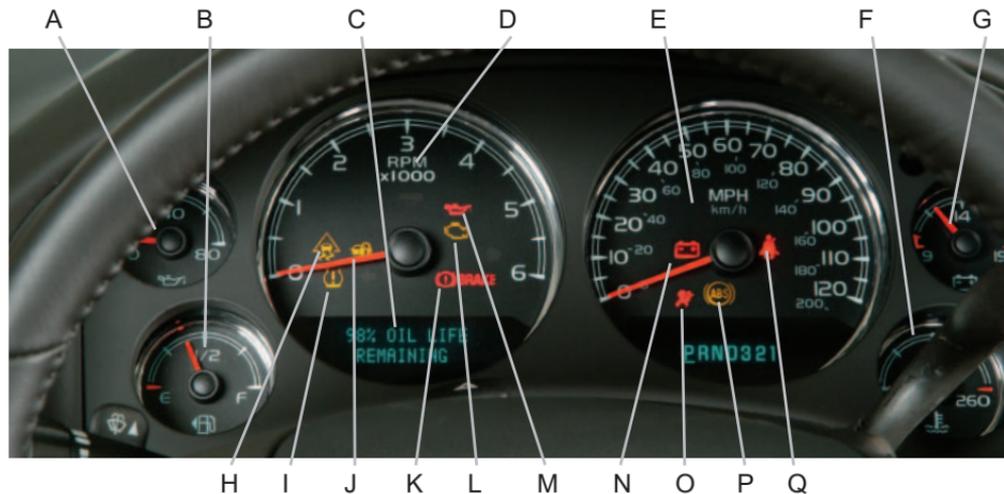

Your vehicle's instrument panel is equipped with this cluster or one very similar to it. The instrument panel cluster includes these key features:

- A. Oil Pressure Gauge
- B. Fuel Gauge
- C. Driver Information Center Display/Odometer

- D. Tachometer
- E. Speedometer
- F. Engine Coolant Temperature Gauge
- G. Voltmeter
- H. StabiliTrak Indicator Light
- I. Tire Pressure Light
- J. Security Light
- K. Brake System Warning Light

- L. Check Engine Light
- M. Oil Pressure Light
- N. Charging System Light
- O. Air Bag Readiness Light
- P. Antilock Brake System Warning Light
- Q. Safety Belt Reminder Light

See Section 3 of your Owner Manual.


Note: The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

Driver Information Center



Your vehicle's Driver Information Center (DIC) provides vehicle information, vehicle warning messages and vehicle feature customization. The DIC messages will be shown on your instrument panel cluster display. To operate the DIC, the ignition switch must be on.

DIC Buttons

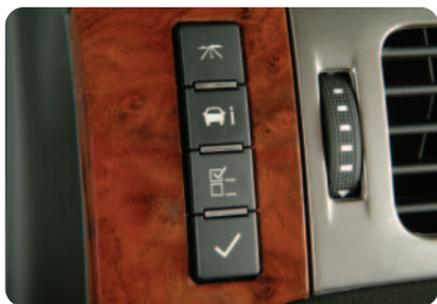

The DIC buttons are located on the right side of the instrument panel cluster.

Trip/Fuel: Press this button to display the odometer, trip odometer, fuel range, average economy, fuel used, timer, transmission temperature, instantaneous economy (if equipped) and Active Fuel Management™ indicator (if equipped).

Vehicle Information: Press this button to display the oil life, English/Metric units, tire pressure and tire pressure system programming (if equipped), engine hours and Remote Keyless Entry programming.

Customization: Press this button to customize certain vehicle features to your preference.

Set/Reset: Press this button to set or reset certain vehicle functions as well as acknowledge DIC messages.

Customization Features

To customize features:

1. With the vehicle in Park, turn on the ignition.
2. Press the  (Customization) button to display available customization features.
3. With the desired customization feature displayed, press the  (Set/Reset) button to access the feature settings.
4. Press the  button to scroll through the available settings.
5. With the desired setting displayed, press the  button to select it.
6. To exit the Feature Settings menu, press the  button until EXIT FEATURE SETTINGS is displayed and then press the  button, or press the  button or the  button.

Customization features include:

- Display Language — DIC information can be displayed in several languages
- Auto Door Lock — Automatically locks the vehicle doors
- Auto Door Unlock — Automatically unlocks the vehicle doors
- Remote Door Lock — Type of feedback from Remote Keyless Entry locking
- Remote Door Unlock — Type of feedback from Remote Keyless Entry unlocking
- Delay Door Lock — Delays locking doors after exiting
- Exit Lighting — Amount of time the exterior lamps remain on after exiting
- Approach Lighting — Exterior lamps turn on when using Remote Keyless Entry
- Chime Volume — Increases the volume level
- Park Tilt Mirrors (if equipped) — Automatically tilts down the outside mirrors when in Reverse
- Easy Exit Seat (if equipped) — Automatically moves back the driver's seat when the key is removed from the ignition
- Memory Seat Recall (if equipped) — Automatically recalls the driver's seat position when using Remote Keyless Entry
- Remote Start (if equipped) — Enables remote vehicle start
- Factory Settings — Sets all features to the factory default
- Exit Feature Settings

Warnings and Messages

The DIC provides a variety of vehicle messages (depending on optional equipment) as well as warnings if a problem is sensed in a vehicle system.

To acknowledge a message and clear it from the display, press any of the DIC buttons. Some urgent messages cannot be cleared from the DIC display.

If you have a current OnStar subscription and your Check Engine Light or any other warning message appears, you can press the blue OnStar button and speak to an OnStar Advisor. In many vehicles, OnStar Advisors can access certain diagnostic information and can tell you how serious the problem is and what you should do about it.

Note: Your vehicle's warnings and messages provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information displayed and the action required.

See *Section 3 of your Owner Manual*.

SAFETY & SECURITY

Remote Keyless Entry

The Remote Keyless Entry (RKE) transmitter includes the following functions:

(Remote Vehicle Start)

(if equipped): If your vehicle has this feature, it can be used to start the engine (see Remote Vehicle Start).

 (Lock): Press this button to lock all the doors and the tailgate. If enabled through the Driver Information Center (DIC), the parking lamps will flash once and/or the horn will chirp to indicate locking has occurred.

 (Unlock): Press this button to unlock the driver's door. If the button is pressed again within five seconds, all remaining doors and the tailgate will unlock. If enabled through the DIC, the parking lamps will flash once to indicate unlocking has occurred.

 (Vehicle Locator/Panic Alarm): Press this button to locate your vehicle. The parking lamps will flash and the horn will sound three times.

Press and hold the button to activate the panic alarm. The parking lamps will flash and the horn will sound for 30 seconds. Press the button again or turn the ignition to Run to cancel the panic alarm.

See Section 2 of your Owner Manual.

Content Theft-Deterrent System

To arm the content theft-deterrent alarm system, lock the doors using the RKE transmitter. The security light on the instrument panel cluster will flash for approximately 30 seconds to indicate the alarm is activated. To disarm the system, unlock the doors using the RKE transmitter.

The alarm system will not be armed or disarmed if the doors are locked or unlocked with a key, the manual door lock or the power door lock switch.

See Section 2 of your Owner Manual.

OnStar® (if equipped)


If you have a current OnStar subscription, the OnStar system provides in-vehicle safety, security and phone services, available 24 hours a day, 7 days a week. These services are easily accessed using the three OnStar buttons located on the inside rearview mirror.

For more information about OnStar features, refer to the OnStar Owner's Guide and enclosed Audio CD located in your glove box.

See Section 2 of your Owner Manual.

COMFORT

Power Seat Controls (if equipped)

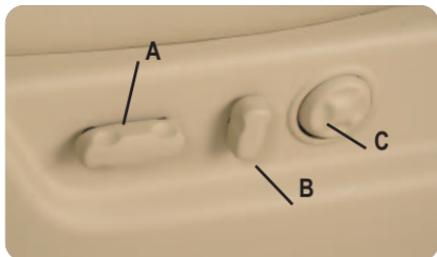

The power seat controls for the driver and front passenger are located on the outboard side of their seats.

Power Seat: Use the control (A) to move the seat forward/rearward and up/down as well as to raise/lower the front or rear of the seat cushion.

Power Recline (if equipped): Use the control (B) to recline/raise the seatback.

Power Lumbar (if equipped): Use the control (C) to increase/decrease lumbar support and to raise/lower the height of the support.

See Section 1 of your Owner Manual.

Heated Seats (if equipped)



To operate the heated seats, the engine must be on. The heated seat operation turns off when the ignition is turned off.

The heated front seat controls are located on the front doors.

 **(Heated Seatback):** Press the top button to turn on the heated seatback.

 **(Heated Seat/Seatback):** Press the bottom button to turn on the heated seat and seatback.

Continue to press the desired button to cycle through the temperature settings of High (three indicator lights), Medium (two indicator lights), Low (one indicator light) and Off (all indicator lights are off).

See Section 1 of your Owner Manual.

Memory Settings (if equipped)

The memory buttons are located on the driver's door. Settings can be programmed for the driver's seat, outside mirrors and the adjustable pedals (if equipped) for two drivers.

To save memory settings:

1. Adjust the driver's seat, outside mirrors and pedals to a comfortable position.
2. Press and hold button 1 or 2 until two beeps sound.

Repeat these steps for a second driver.

To recall the settings, press memory button 1 or 2 with the vehicle in Park. If the Remote Keyless Entry transmitter is used to enter the vehicle and the memory seat recall feature is on (see Customization Features), the settings will be recalled automatically.

Easy-Exit Seat

The easy-exit seat button is located between the two memory buttons. Press the exit button, with the vehicle in Park, to move the driver's seat to the exit position.

If the easy-exit seat feature is on (see Customization Features), automatic seat movement will occur when the key is removed from the ignition.

See *Section 2 of your Owner Manual*.

Adjustable Pedals (if equipped)

The accelerator and brake pedals can be adjusted to a comfortable and safe operating position by using the switch located on the center console below the climate controls.



Press the top arrow on the switch to move the pedals away from you and the bottom arrow on the switch to move the pedals toward you.

The pedals cannot be adjusted when the vehicle is in Reverse or when cruise control is activated.

See *Section 3 of your Owner Manual*.

Sun Visor Adjustment

To help block the glare of the sun, the sun visor can be detached from the center mount and moved along the slide rod.

See *Section 2 of your Owner Manual*.

Manual Climate Controls

The climate control system includes the following functions:

 **(Fan):** Turn the fan control knob to increase or decrease fan speed.

 **(Off):** Turn the fan knob to the Off position to turn off the system.

 **(Air Conditioning):** Press this button to turn the air conditioning system on or off.

 **(Recirculation):** Press this button to circulate inside air through the vehicle. This mode keeps outside air from entering the vehicle.

Temperature Control: Rotate the thumbwheels to raise or lower the temperature setting(s).

Airflow Modes

Turn the airflow control knob to change the direction of the airflow. The knob can be positioned between two modes for a wide range of airflow adjustments.

 **(Vent):** This mode directs air to the instrument panel outlets.

 **(Bi-Level):** This mode directs air to the instrument panel outlets and floor outlets.

 **(Floor):** This mode directs most of the air to the floor outlets and some air to the side window outlets and windshield. Recirculation cannot be selected in this mode.

 **(Defog):** This mode directs air to the windshield, floor outlets and side window outlets. Recirculation cannot be selected in this mode.

 **(Defrost):** This mode directs most of the air to the windshield and some air to the side window outlets. Recirculation cannot be selected in this mode.

 **(Rear Window Defogger):** Press this button to activate the rear window defogger. The defogger will shut off automatically or can be turned off by pressing the button again.

See Section 3 of your Owner Manual.

Automatic Climate Controls (if equipped)



The automatic climate control system maintains the desired individual temperature for the driver and front seat passenger. The system adjusts the airflow mode, fan speed, air conditioning and recirculation functions to reach the set temperature(s) as quickly as possible.

Automatic Operation

To set the automatic mode:

1. Press the AUTO button.
2. Set the driver's and front passenger's temperature using the + or – temperature buttons.

Manual Operation

To operate the system manually, use the following controls:

⏻ (On/Off): Press this button to turn the system on or off.

+ – (Temperature Control): Press the + or – temperature button(s) to raise or lower the temperature setting(s).

⬆️ ⬆️ (Fan): Press the up or down arrow to increase or decrease fan speed.

↻ ↻ (Mode): Press the up or down button to change the direction of the airflow as well as to select the defog mode.

PASS (Passenger Temperature Control): Press this button to turn off the passenger temperature setting.

🚗 (Recirculation): Press this button to circulate inside air through the vehicle. This mode keeps outside air from entering the vehicle.

☀️ (Air Conditioning): Press this button to turn the air conditioning system on or off.

↔️ (Outside Air): Press this button to allow outside air to enter the vehicle.

🌬️ (Defrost): Press this button to direct most of the air to the windshield and some air to the side window outlets.

🪞 (Rear Window Defogger): Press this button to activate the rear window defogger and the heated outside rearview mirrors (if equipped). The defogger and heated mirrors will shut off automatically or can be turned off by pressing the button again.

See Section 3 of your Owner Manual.

ENTERTAINMENT

Audio System Features



While most of the features on your radio will look familiar, following are some that may be new.

⏻ (Power/Volume): Press this knob to turn the system on or off. Turn the knob to adjust the volume.

i (Information): Press this button to display additional text information related to the current FM-RDS or XM station, or MP3 song.

🎵 (Tune): Turn this knob to select radio stations or, when a CD is playing, to select a track or MP3 file.

Press the knob to display the tone control (bass/treble) or speaker control (balance/fade) label. Press the pushbutton under the desired label and then turn the knob to adjust the setting. To adjust all tone and speaker controls to the middle position, press and hold the Tune knob for more than two seconds. A beep will sound.

FAV (Favorite): Press this button to go through up to six pages of any combination (AM; FM; or XM, if equipped) of pre-set favorite radio stations. On each page, up to six stations are available by using the six pushbuttons below the radio station frequency labels on the radio display.

BAND: Press this button to switch to AM; FM; or XM (if equipped). With a CD loaded or a portable audio player connected, press this button to switch between radio and CD/portable audio player operation.

◀ ▶ (Seek/Scan): Press the right or left arrow button to go to the next or previous radio station or, when a CD is playing, to the next track or MP3 file or the start of the current track or MP3 file.

To enter the scan mode, press and hold either arrow button for a few seconds (a beep will sound). Radio stations will be scanned. Press either arrow button again to stop scanning.

◀◀ (Reverse): Press and hold this button to reverse playback quickly within a track or MP3 file.

▶▶ (Forward): Press and hold this button to advance playback quickly within a track or MP3 file.

CD/AUX: Press this button to play a CD instead of the radio. Press again and the system will automatically search for an auxiliary input device such as a portable audio player.

EQ (Automatic Equalization): Press this button to select preset equalization settings.

CAT (Category): Press this button to find XM stations (if equipped) within a desired category.

Auxiliary Input Jack: A portable audio player can be connected to the auxiliary input jack located on the radio.

Setting Favorite Stations

Before setting your favorite stations, shift the vehicle into Park.

Note: Choosing to engage in extended searching for specific audio stations or songs by using buttons and knobs — or to give extended attention to entertainment tasks — can lead you to look away from the road frequently or longer than usual. Looking away from the road for prolonged periods may cause you to miss seeing things on the road that you need to see. Be sure to keep your eyes on the road and mind on the drive — and avoid engaging in extended searching for specific items while driving.

To set up the number of favorite station pages:

1. Press the MENU button to display the radio setup menu.
2. Press the pushbutton located below the FAV 1–6 label on the radio display.
3. Select the desired number of favorite station pages.
4. Press the FAV button. You may now begin storing your favorite stations for the chosen number of pages.

To store favorite stations:

1. Press the BAND button to select the band (AM; FM; or XM, if equipped).
2. Tune in the desired radio station.
3. Press the FAV button to display the page where the station is to be stored.
4. Press and hold one of the six push-buttons until a beep sounds.
5. Repeat the steps for each pushbutton on each page.

Setting the Speed Compensated Volume (if equipped)

With Speed Compensated Volume, the radio automatically adjusts the volume to compensate for road noise as vehicle speed changes.

To set Speed Compensated Volume:

1. Set the radio volume to the desired level.
2. Press the MENU button to display the radio setup menu.
3. Press the pushbutton below the auto volume label on the radio display.
4. Press the pushbutton under the desired setting (Off, Low, Medium or High) to select the level of compensation.
5. The compensation will be set once the display times out after 10 seconds.

Setting the Time

To set the time:

1. Press the  (Clock) button. Or, if equipped, press the MENU button until the clock option is displayed; and then press the pushbutton located under the clock option label. The HR, MIN, MM, DD, YYYY labels will appear on the display.
2. Press the pushbutton under any of the labels to be changed.
3. Press the pushbutton again, the right SEEK arrow or the FWD button to increase the numbers. Press the left SEEK arrow or the REV button to decrease the numbers. Rotating the Tune knob also will increase or decrease the selected label.
4. Press the Clock or MENU button again to set the currently displayed time and date.

MP3 Capability

Your audio system has MP3 playing capability. A CD-R containing MP3 audio tracks will play automatically when inserted into the CD player. An MP3 symbol will be displayed.

Portable Audio Player

A portable audio player, such as an MP3 player or cassette player, can be connected to the auxiliary input jack located on the radio. When connected, the radio automatically begins playing audio from the player over the vehicle speakers.

Radio Data System (if equipped)

When you tune to a Radio Data System (RDS) station, the station name and call letters will appear on the display instead of the frequency. RDS stations may also provide the time of day, a program type for current programming and the name of the program being broadcast.

RDS features are available for use only on FM stations that broadcast RDS information. RDS relies on receiving specific information from these stations and will work only when the information is available.

See Section 3 of your Owner Manual.

Multiple-Disc CD Player (if equipped)



With the in-dash 6-Disc CD Player, note that you cannot directly load a CD as in single-play systems.

To load a single CD:

- Press and release the  (LOAD) button. Wait for the display prompt before loading the CD.

To load multiple CDs:

- Press and hold the LOAD button for two seconds. Follow the display prompts to load each CD. Press the LOAD button again to cancel loading more CDs.

To play a specific CD:

- Press the pushbutton below the arrow label on the display to select the desired CD number.

To eject a CD:

- To eject the CD that is currently playing, press the  (EJECT) button once.
- To eject all CDs, press and hold the EJECT button for two seconds.

If a CD is not removed after several seconds, it will automatically be pulled back into the player.

Note: CDs with any affixed labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at one time, or if scratched or damaged CDs are played, the CD player could be damaged. When using the CD player, use only CDs in good condition without labels; load one CD at a time; and keep the CD player and the loading slot free of foreign materials, liquids and debris.

See *Section 3 of your Owner Manual.*

Touch Screen Navigation Infotainment System (if equipped)

Your vehicle's Navigation Infotainment System provides you with detailed maps of all major highways and roads throughout the United States. After you enter a destination, the system provides turn-by-turn instructions for reaching your destination. In addition, the system can help you locate a variety of points of interest, such as banks, airports, restaurants and more.

See your Navigation Infotainment System Owner Manual for operating instructions.

See *Section 3 of your Owner Manual.*

XM Satellite Radio (if equipped)

XM Satellite Radio offers 160 channels of digital-quality sound that goes wherever you go — coast to coast. XM displays song title, artist and entertainment genre.

Activation fee and service subscription are extra. Service is based in the 48 U.S. contiguous states, and in Canada. For more information, visit XM online at www.XMradio.com or call 1-800-852-XXMX (9696).

See *Section 3 of your Owner Manual*.

Rear Seat Audio and DVD Rear Seat Entertainment Systems (if equipped)

Rear Seat Audio

The Rear Seat Audio (RSA) system allows front seat and rear seat passengers to listen to different entertainment sources at the same time using the rear seat controls and wired (not supplied) or wireless headphones. The vehicle's rear speakers will be muted when the rear control panel is turned on.

- To select an entertainment source — radio, CD or DVD (if equipped), press the SRCE (Source) button.
- Turn the left volume knob to adjust the volume of the left wired headphones and the right volume knob to adjust the volume of the right wired headphones.

Rear Seat Entertainment (DVD)

The Rear Seat Entertainment (RSE) system has all of the functions of the RSA system, with the added features of

a CD/DVD player as part of the front radio, flip-down video screen, wireless headphones and a remote control.

To play a DVD:

1. Turn the ignition to the Accessory or Run position.
2. Push the release button on the DVD display console and pull down the video screen.
3. Insert a DVD into the DVD slot in the radio. It will turn on the video screen and begin playing automatically. It may be necessary to press the Play button on the RSE system or the remote control to start playing the movie if the DVD stops at a menu screen.

Note: Aim the remote control at the video screen, not the DVD player, for proper operation.

4. To listen to the DVD through the vehicle speakers, press the DVD/CD AUX button. Adjust volume using the radio volume control.

To listen to the DVD through the headphones, select channel 1 and push the power button on the headphones. Adjust volume using the headphone volume control.

5. To control DVD playback, use the remote control or the buttons under the labels on the front radio display.
6. To turn off the RSE system, press the power button for two seconds on the front radio, eject the DVD or press the power button on the remote control.

See *Section 3 of your Owner Manual*.

Audio Steering Wheel Controls

A number of audio controls can be adjusted at the steering wheel.

+ – (Volume): Pull up on the + or – button to increase or decrease the volume.



△▽ (Next/Previous): Press the up or down arrow to go to the next or previous radio station stored as a favorite or, when a CD is playing, to the next or previous track.

SRCE (Source): Press this button to switch between AM, FM, XM (if equipped), CD and AUX.

▷ (Seek): Press this button to go to the next radio station.

⏸ (Mute/Voice Recognition): Press this button to silence the system. Press the button again to turn on the sound.

Press and hold the button for one second to interact with the OnStar system.

See Section 3 of your Owner Manual.

CONVENIENCE

Automatic Dimming Rearview Mirror with Compass and Temperature Display (if equipped)



Automatic Dimming

The automatic dimming feature is turned on each time the vehicle is started. To turn the feature off or back on, press and hold the  (On/Off) button for approximately six seconds.

Compass and Temperature Display Operation

To turn the compass and temperature display on or off, briefly press the On/Off button.

To switch between Fahrenheit and Celsius readings:

1. Press and hold the On/Off button for approximately four seconds until the display blinks F and C.
2. Briefly press the On/Off button again to select Fahrenheit or Celsius. Your selection will be set once the display stops blinking.

To adjust for compass variance when traveling on a long-distance trip or to calibrate the compass, refer to your Owner Manual.

See Section 2 of your Owner Manual.

Remote Vehicle Start (if equipped)

This feature allows you to start the engine from outside the vehicle by using the Remote Keyless Entry (RKE) transmitter. (Remote Vehicle Start transmitter range is within approximately 200 feet of the vehicle.)

After a remote start, the engine will run for about 10 minutes before turning itself off, but can be extended 10 minutes by performing another remote start sequence at any time. After two consecutive remote starts, no additional remote starts are allowed until the vehicle has been started with the ignition key.

The vehicle's climate control system may automatically heat or cool the vehicle interior, depending on equipment, or will turn on at the same setting as when the vehicle was last turned off.



Starting the Vehicle

To remote start the vehicle:

1. Aim the RKE transmitter at the vehicle.
2. Press and release the  (Lock) button on the transmitter.
3. Immediately press and hold the  (Remote Vehicle Start) button for about four seconds.
4. When the vehicle starts, the parking lamps will light and remain on while the engine is running.
5. Repeat these steps for a 10-minute time extension.

When you enter the vehicle after a remote start, the key must be inserted in the ignition and turned to the Run position before driving.

Note: The Remote Vehicle Start feature will not operate if the key is in the ignition, a door or the hood is open, or the Check Engine light is illuminated on the instrument panel cluster.

Canceling a Remote Start

If you wish to turn off the engine instead of driving after a remote start, perform one of the following functions:

- Press and hold the  button until the parking lamps turn off.
- Press and release the Hazard Warning Flashers button inside the vehicle. Press the button again to turn off the flashers.
- Turn the key in the ignition switch to On and then Off.
- The engine will automatically stop when time expires.

See *Section 2 of your Owner Manual*.

Auto Turn Signal

The turn signal lever includes an automatic lane change signal feature.

To signal a lane change, raise or lower the lever until the arrow on the instrument panel cluster starts to flash, and then release the lever. The turn signal will automatically flash three times. If the Tow/Haul mode is selected, the turn signal will automatically flash six times.

To signal a turn, move the lever all the way up or down.

See *Section 3 of your Owner Manual*.

Cruise Control (if equipped)

The cruise control buttons are located on the steering wheel.

 **(On/Off):** Press this button to turn the cruise control system on or off.

– **SET (Set):** Press this button to set a speed, or to decrease the speed if the system is set. When the cruise control speed is set, the cruise light will illuminate in the instrument cluster.

+ **RES (Resume):** Press this button to resume a set speed, or to increase the speed if the system is set.

 **(Cancel):** Press this button to cancel the cruise control but retain the set speed in memory.

See Section 3 of your Owner Manual.



Rainsense™ II Windshield Wipers (if equipped)



The Rainsense II windshield wipers use a moisture sensor to automatically operate the wipers when needed, depending on driving conditions and the sensitivity

setting. If the system is left on for long periods, an occasional wipe may occur without any moisture on the windshield to indicate the system is activated.

The headlamps also will be turned on automatically when the Rainsense wipers are active if the exterior lamp control switch is in the AUTO position.

Windshield Wiper Controls

The controls for the windshield wipers are located on the multifunction stalk on the left side of the steering column. The wipers band can be rotated to the following positions:

 **(Mist):** Rotate the band down to this position to turn the wipers on for one wipe.

 **(Off):** Rotate the band to this position to turn off the wipers.

 **(Sensitivity Setting):** Rotate the band up to one of the sensitivity levels to activate the Rainsense function. The position closest to Off is the lowest sensitivity level.

 **(Low):** Rotate the band up to this position to turn on the wipers to the low speed setting.

 **(High):** Rotate the band up to this position to turn on the wipers to the high speed setting.

 **(Washer):** Push the paddle on top of the multifunction lever to spray washer fluid on the windshield.

See Section 3 of your Owner Manual.

Heated Windshield Washer Fluid (if equipped)

Press the  (Heated Washer Fluid) button, located below the climate controls on the instrument panel, to spray heated washer fluid on the windshield. This will help clear ice, tree sap and bugs from the windshield. A light on the switch will flash while the washer fluid is heated, which may take up to 40 seconds. The wipers will automatically turn on for four heated wash cycles or until the button is pressed again.

See *Section 3 of your Owner Manual*.

Rear Vision Camera (if equipped)

The rear vision camera displays a view of the area behind the vehicle on the navigation screen when the vehicle is shifted into Reverse. Once shifted out of Reverse, the navigation screen will return to the last screen displayed after approximately 10 seconds.

To turn the camera on or off:

1. Shift into Park.
2. Press the Menu hard key to enter the Menu options.
3. Press the Menu hard key to select Display, or touch the Display screen button.
4. Touch the Rear Camera Options screen button.
5. Touch the Rear Camera Image in Reverse screen button.

To clean the camera lens, located below the tailgate handle, rinse it with water and wipe it with a soft cloth.

See *Section 2 of your Owner Manual*.

Automatic Headlamp System



Your vehicle is equipped with an Automatic Headlamp System, which turns on the Daytime Running Lamps (DRL) during the day and the headlamps and other exterior lamps at night or when necessary.

The system uses a light sensor, located on top of the instrument panel, to determine light conditions. For proper system operation, avoid placing any objects on or near the sensor.

Exterior Lamp Controls

The exterior lamp control knob is located on the instrument panel to the left of the steering wheel. The knob can be rotated to the following positions:

 (**Off**): When operating in the Auto position, a momentary turn of the switch to this position will turn off the Automatic Headlamp System and all exterior lights, excluding the DRLs.

AUTO (Automatic): Automatically turns on the DRLs in the daytime and the Automatic Headlamp System at night or when necessary.

 (**Parking Lamps**): Manually turns on parking lamps and taillamps.

 (**Headlamps**): Manually turns on the headlamps and other exterior lamps.

 (**Fog Lamps**) (if equipped): Press this button to turn the fog lamps on or off.

 **(Dome Lamp Override):** Press this button to turn the dome lamps on or off when the doors are open.

See Section 3 of your Owner Manual.

Sunroof (if equipped)

The open/close and vent switches for the power sunroof are located on the overhead console. The open/close switch has two detents.



 **(Express-Open):** Press the rear of this switch completely (to the second detent) to express-open the sunroof. To stop the sunroof, press the switch again.

To partially open the sunroof, lightly press and hold the rear of the switch (to the first detent) until the sunroof reaches the desired position.

 **(Express-Close):** Press the front of this switch completely (to the second detent) to express-close the sunroof. To stop the sunroof, press the switch again.

To partially close the sunroof, lightly press and hold the front of the switch (to the first detent) until the sunroof reaches the desired position.

 **(Vent):** Press the rear of this switch  to vent the sunroof. Press the switch again to stop the sunroof.

Press and hold the front of the switch to close the sunroof.

See Section 2 of your Owner Manual.

Ultrasonic Rear Parking Assist (if equipped)

This feature uses ultrasonic sensors on the rear bumpers to help you avoid colliding with objects when parking the vehicle. It operates only at speeds less than 3 mph.

The rear parking assist display is located above the rear window. The lights on the display provide distance information. Low-toned beeps play out of the rear speakers (for objects near the rear bumper).

To turn off the system, press the  (Rear Parking Assist) disable button, located below the climate controls on the instrument panel. The indicator light will illuminate when the system is off.

See Section 3 of your Owner Manual.

Universal Home Remote (if equipped)

The Universal Home Remote is a combined universal transmitter and receiver that can activate up to three devices, such as garage door openers, entry door locks, gates and security systems.

It's recommended that you read the instructions in your Owner Manual completely before attempting to program any of the three channels on the Universal Home Remote. The engine should be turned off when programming the remote.

Note: Do not use the Universal Home Remote with any garage door opener that does not have the "stop and reverse" feature or any opener manufactured before April 1, 1982.

See Section 2 of your Owner Manual.

Folding the Rear Seats

The rear seats flip and fold forward to provide access to the Midgate.

To fold the seat:

1. Make sure nothing is in front of the seat.
2. Pull the strap located at the rear of the seat cushion to flip the cushion forward.
3. Pull down the seatback to fold it flat.

See *Section 1 of your Owner Manual*.

Lowering the Midgate™

The Midgate can be lowered with the rear window in place or while the window is secured in the Midgate storage pocket.

To lower the Midgate with the rear window in place:

1. Fold the rear seats (see Folding the Rear Seats).
2. Standing outside the vehicle, place one hand against the Midgate to prevent it from falling forward unexpectedly. Turn the release handle (located in the center of the crossbar) clockwise, allowing the Midgate to lower.



3. Lower the Midgate until it lies flat against the folded seatbacks.



To lower the Midgate with the rear window stored in the Midgate window storage pocket:

1. Fold the rear seats (see Folding the Rear Seats).
2. Remove and store the window (see Rear Window Removal and Storage).
3. Standing outside the vehicle, place one hand against the crossbar (the bar with the release handle) to prevent the Midgate from falling forward unexpectedly. Turn the release handle clockwise, allowing the Midgate to lower.
4. As you lower the Midgate with the window stored, the entire crossbar will lower with the Midgate. This is normal; however, be prepared for the extra weight of the crossbar.
5. Lower the Midgate until it lies flat against the folded seatbacks.



To return the Midgate to its normal position, raise the Midgate up with a firm, swinging motion to ensure it closes with enough force to latch securely.

See Section 2 of your Owner Manual.

Rear Window Removal and Storage

To remove the rear window:

1. Fold the rear seats (see Folding the Rear Seats).

2. Squeeze, pull down and release the latch levers located near the upper corners of the rear window. The window catch release button will prevent the rear window from falling forward.



3. While holding the rear window in place, press the window catch release button and pull the top of the window toward you using the grab handles located at the top of the window.

4. With the window tilted toward you, use the grab handles to lift it out from the lower frame channel.



5. Load the window into the Midgate window storage pocket by placing the lower edge of the window behind the three retaining tabs. With the grab handles facing you, hold the window flat against the storage pocket.



6. Turn both window lock knobs, located at the top corners of the storage pocket, to the locked position. When both lock knobs are in the locked position, the window is securely stored.

7. Push both latch levers up to the locked position until each clicks, indicating they are locked correctly.



Note: See Section 2 of your Owner Manual for important Midgate operation warnings.

To install the rear window:

1. Squeeze, pull down and release the latch levers.
2. Hold the rear glass against the Midgate with one hand and turn the glass lock knobs to the unlocked position.



3. Pull the window out of the storage pocket using the grab handles.



4. Tilt the glass slightly and guide the bottom edge into the window frame's lower channel.
5. Apply some downward pressure on the window to ensure the bottom edge is properly seated in the channel.



6. Use one hand to push the window flat against the window frame seal and hold it in place. Use your other hand to press each latch lever up until it clicks, indicating it is locked in place.



See Section 2 of your Owner Manual.

PERFORMANCE & MAINTENANCE

StabiliTrak® – Stability Control System

StabiliTrak is an advanced computer-controlled vehicle stability and traction enhancement system that assists with directional control of the vehicle in difficult driving conditions. It turns on automatically every time you start your vehicle.

To limit wheelspin and help maintain directional control, you should always leave the system on. However, if your vehicle becomes stuck and rocking the vehicle is required, the system should be turned off.

To turn off the traction control part of the system, press the  (StabiliTrak) button located below the climate controls on the instrument panel.



To turn off the traction control and stability enhancement systems, press and hold the button for five seconds.

When the system is turned off, the StabiliTrak light will illuminate.

See Section 4 of your Owner Manual.

Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the  (Low Tire Pressure) warning light on the instrument panel. The low tire pressure warning light will remain on until you correct the tire pressure.

You may also have a CHECK TIRE PRESSURE message appear on the DIC (if equipped).

Correcting the Tire Pressure

When the low tire pressure warning light illuminates, you must fill the tire to the proper tire inflation pressure. The Tire and Loading Information label shows the correct inflation pressure for the tires when they're cold. "Cold" means your vehicle has been sitting for at least three hours or driven no more than one mile.

You can temporarily remove the DIC message by acknowledging it with your DIC controls. However, at the next vehicle startup, the DIC message will reappear if the tire pressure has not been corrected.

You may notice during cooler conditions that the low tire pressure warning light will appear when the vehicle is first started and then turn off as you start to drive the vehicle. This could be an early indicator that your tire pressures are getting low and need to be inflated to the proper pressure.

Note: The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance.

See Section 5 of your Owner Manual.

Tighten Gas Cap

If the Tighten Gas Cap message is displayed on the Driver Information Center (DIC), check that your fuel cap is properly installed. If the cap is not securely fastened, turn it clockwise until a clicking sound is heard, indicating that it is properly installed. The DIC message will turn off after a few driving trips with the cap properly installed.

See Sections 3 and 5 of your Owner Manual.

Resetting the Engine Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and displays CHANGE ENGINE OIL in the Driver Information Center (DIC) when it's necessary to change your engine oil and filter. The Oil Life System should be reset to 100% only following an oil change.

To reset the Oil Life System:

1. Turn on the ignition.
2. Press the  (Vehicle Information) button until the DIC displays OIL LIFE REMAINING.
3. Press and hold the  (Set/Reset) button until 100% is displayed.
4. Turn off the ignition.

See Section 5 of your Owner Manual.

OWNER INFORMATION**Roadside Assistance****1-800-CHEV-USA**

(1-800-243-8872)

TTY Users: 1-888-889-2438

As the proud owner of a new Chevrolet vehicle, you are automatically enrolled in the Chevrolet Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of technically trained advisors, who are available 24 hours a day, 365 days a year. The advisors can provide minor repair information or make arrangements to tow your vehicle to the nearest Chevrolet dealer.

Chevrolet will provide the following services for 3 years/36,000 miles (60,000 km), at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealership for warranty service
- Flat tire assistance
- Jump starts

In many instances, mechanical failures are covered under Chevrolet's comprehensive warranty. However, when other services are utilized, our advisors will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Chevrolet reserves the right to limit services or reimbursement to an owner or driver when, in Chevrolet's judgment, the claims become excessive in frequency or type of occurrence.

Roadside Assistance and OnStar® (if equipped)

If you have a current OnStar subscription, when you press the blue OnStar button, the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

My GMLink

The Chevrolet Owner Center at My GMLink is a complimentary service for Chevrolet owners, a one-stop resource to enhance your Chevrolet ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at www.mygmlink.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. Copyright 2006 by GM Corp. All rights reserved.



* 1 5 8 5 4 8 2 5 A *

GM

15854825 A