

2008

ESCALADE/ESCALADE ESV



CUSTOMER CONVENIENCE/PERSONALIZATION GUIDE

ESCALADE/ESCALADE ESV

TABLE OF CONTENTS

DRIVER INFORMATION

| | |
|-------------------------------------|---|
| Instrument Panel | 1 |
| Instrument Panel Cluster | 2 |
| Driver Information Center | 3 |

SAFETY & SECURITY

| | |
|--------------------------------|---|
| Remote Keyless Entry | 4 |
| OnStar® | 4 |

COMFORT

| | |
|--------------------------------------|---|
| Power Seat Controls | 5 |
| Heated and Cooled Seats | 5 |
| Adjustable Pedals | 5 |
| Automatic Climate Controls | 6 |
| Rear Seat Climate Controls | 6 |

ENTERTAINMENT

| | |
|-----------------------------------|---|
| Audio System Features | 7 |
| Multiple-Disc CD Player | 9 |

Touch Screen Navigation

| | |
|---|----|
| Entertainment System | 9 |
| XM™ Satellite Radio | 10 |
| Audio Steering Wheel Controls | 10 |
| Rear Seat Audio | 10 |
| MP3 External Interface | 10 |
| DVD Rear Seat Entertainment | 11 |

CONVENIENCE

| | |
|---|----|
| Memory Settings | 11 |
| Vehicle Customization Settings | 12 |
| Remote Vehicle Start | 12 |
| Auto Turn Signal | 13 |
| IntelliBeam™ Automatic | |
| Headlamps | 13 |
| Automatic Headlamp System | 14 |
| Cruise Control | 14 |
| Rainsense™ II Windshield Wipers | 15 |
| Heated Windshield Washer Fluid | 15 |
| Universal Home Remote | 15 |
| Rear Vision Camera | 16 |
| Ultrasonic Rear Parking Assist | 16 |

| | |
|---------------------------------|----|
| Sunroof | 16 |
| Power Running Boards | 17 |
| Folding 2nd-Row Seats | 17 |
| Folding 3rd-Row Seats | 17 |
| Power Liftgate and Liftglass | |
| Operation | 18 |

PERFORMANCE & MAINTENANCE

| | |
|----------------------------------|----|
| 6-Speed Automatic Transmission | |
| Controls | 19 |
| StabiliTrak® – Stability Control | |
| System | 19 |
| Tire Pressure Monitor | 20 |
| Resetting the Engine Oil Life | |
| System | 20 |

OWNER PRIVILEGES™

| | |
|-------------------------------|----|
| Roadside Service | 21 |
| Customer Assistance | 21 |
| Cadillac Online | 21 |

Driver Information



INSTRUMENT PANEL

- 1. Air Outlets
- 2. Turn Signal/Multifunction Lever
- 3. Instrument Panel Cluster
- 4. Shift Lever
- 5. Driver Information Center Buttons
- 6. Audio System
- 7. Exterior Lamp Controls

- 8. Dome Lamp Override Button/
Fog Lamp Button/Interior
Dimming Control
- 9. Heated Steering Wheel Button
- 10. Cruise Control Buttons
- 11. Tilt Steering Wheel Lever
- 12. Horn

- 13. Audio Steering Wheel Controls
- 14. Climate Controls
- 15. Adjustable Pedals/Heated
Washer Fluid/Power Running
Boards Buttons
- 16. StabiliTrak Button/Rear Parking
Assist Button
- 17. Glove Box

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver
Information

Safety &
Security

Comfort

Entertainment

Convenience

Performance &
Maintenance


Owner
Privileges™

ESCALADE / ESCALADE ESV

INSTRUMENT PANEL CLUSTER

The instrument panel cluster includes these key features:

1. Tachometer
2. Engine Coolant Temperature Gage
3. Odometer/Driver Information Center Display
4. Fuel Gage
5. Speedometer
6. Oil Pressure Warning Light
7. Charging System Warning Light
8. Safety Belt Reminder Light
9. Air Bag Readiness and Warning Light
10. Antilock Brake System Warning Light
11. Check Engine Light
12. Brake System Warning Light
13. Security Light
14. Lights On Reminder Light
15. Tire Pressure Warning Light
16. StabiliTrak Indicator Light

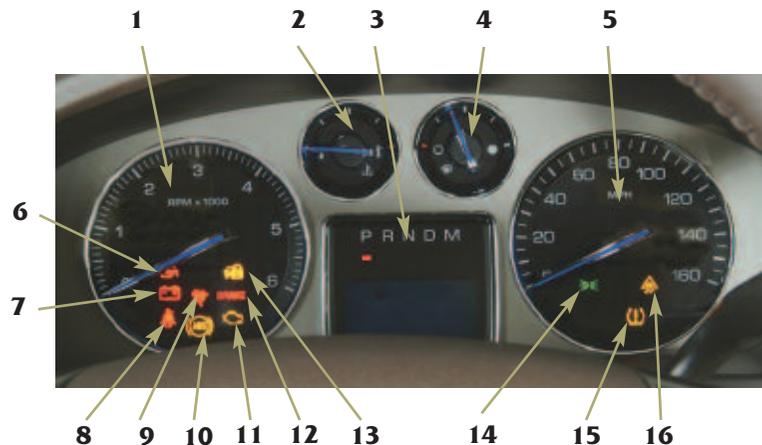

Note: The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with

the information being relayed to you by the lights, gages and indicators, as well as what action can be taken to ensure safety and to prevent damage.

DRIVER INFORMATION CENTER

Your vehicle's Driver Information Center (DIC) provides vehicle information, vehicle warning messages and vehicle feature customization. The DIC messages will be shown on your instrument panel cluster display. To operate the DIC, the ignition switch must be on.



DIC Buttons

The DIC buttons are located on the left side of the audio system.

⬆️ (Trip/Fuel): Press this button to display the odometer, trip odometer, fuel range, average economy, fuel used, timer, and transmission temperature.

🚗 i (Vehicle Information): Press this button to display the oil life, display units, tire pressure and tire pressure system programming, and Remote Keyless Entry programming.

☑️ (Customization): Press this button to customize certain vehicle features to your preference. (See Vehicle Customization Settings.)

✓ (Set/Reset): Press this button to set or reset certain vehicle functions as well as acknowledge DIC messages.

Warnings and Messages

The DIC provides vehicle messages (depending on optional equipment) as well as warnings if a problem is sensed. To acknowledge a message and clear it from the display, press any of the DIC buttons. Some urgent messages cannot be cleared from the DIC display.

Check Engine or other Warning Lights with OnStar®

If your Check Engine light, or any other warning message appears, you can push the blue OnStar button and speak to a live advisor. OnStar Advisors can access certain diagnostic information and can tell you how serious the problem is, what you should do about it, or can contact a dealer or Roadside service for you. Refer to the OnStar Owner Guide for details.

Note: Your vehicle's warnings and messages provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information displayed and the action required.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver
Information

Safety &
Security

Comfort

Entertainment

Convenience

Performance &
Maintenance

Owner
Privileges™

ESCALADE / ESCALADE ESV

Safety & Security

REMOTE KEYLESS ENTRY



The Remote Keyless Entry (RKE) transmitter includes the following functions:

(Lock): Press this button to lock all the doors. If enabled through the Driver Information Center (DIC), the parking lamps will flash once and/or the horn will chirp to indicate locking has occurred.

(Unlock): Press this button to unlock the driver's door. If the button is pressed again within five seconds, all remaining doors will unlock. If enabled through the DIC, the parking

lamps will flash once to indicate unlocking has occurred.

(Remote Vehicle Start): Press this button to start the engine. (See Remote Vehicle Start on pg. 12.)

(Vehicle Locator/Panic Alarm): Press and release this button to locate your vehicle. The parking lamps will flash and the horn will sound three times.

Press and hold the button to activate the panic alarm. The turn signal lamps will flash and the horn will sound for 30 seconds. Press the button again or turn the ignition to Run to cancel the panic alarm.

(Liftglass): Press and hold this button to open the liftglass.

(Power Liftgate): Press and hold this button to open or close the power liftgate. The taillamps will flash and a chime will sound to indicate the liftgate is activated.

ONSTAR®

You have one year of OnStar service from the date you purchased your new vehicle. All Cadillac's come with the up-level Directions & Connections Plan. Your vehicle has a wide variety of capabilities, from Remote Door Unlock to Automatic Airbag

Notification to Hands-Free Calling. And you can get driving directions using OnStar Turn-by-Turn Navigation. Live Advisors are available 24 hours a day 7 days a week and can provide you with many of the services listed below.


- Turn-by-Turn Navigation
- OnStar Vehicle Diagnostic email
- Automatic Airbag Notification
- Automatic Advanced Crash Notification
- Emergency Services
- Remote Door Unlock
- Cadillac "Did you know" ask vehicle questions
- Stolen Vehicle Location Assistance
- Hands-Free Calling with 30 calling minutes
- Roadside Assistance
- Fuel Station Location
- Information & Connections services
- Virtual Advisor, GPS based Traffic & Weather

For Remote Door Unlock or Stolen Vehicle Location Assistance call 1.888.4ONSTAR (1.888.466.7827). Visit onstar.com or onstar.ca. For more information about OnStar refer to the OnStar Owner Guide.

See Section 2 of your Owner Manual.

Comfort

POWER SEAT CONTROLS

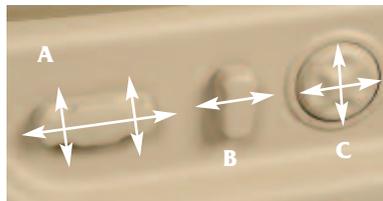

The power seat controls for the driver and front passenger seats are located on the outboard side of the seats.

Power Seat: Use the control (A) to move the seat forward/rearward and up/down as well as to raise/lower the front or rear of the seat cushion.

Power Recline: Use the control (B) to recline/raise the seatback.

Power Lumbar: Use the control (C) to increase/decrease lumbar support and to raise/lower the height of the support.

HEATED AND COOLED SEATS

Front Seats



The heated, and cooled (if equipped), front seat controls are located on the climate control panel.

 **(Heated Seat/Seatback):** Press this button to turn on the heated seat cushion and seatback.

 **(Heated Seatback):** Press this button to turn on the heated seatback.

 **(Cooled Seat/Seatback)** (if equipped): Press this button to turn on the cooled seat cushion and seatback.

Continue to press and release the desired button to cycle through the temperature settings of High (three indicator lights), Medium (two indicator lights), Low (one indicator light) and Off (all indicator lights are off).

2nd-Row Seats

The heated rear seat controls are located on the back of the floor console.

 **(Heated Seat):** Press this button to turn on the heated seat and cycle through the three temperature settings.

ADJUSTABLE PEDALS



The accelerator and brake pedals can be adjusted to a comfortable and safe operating position by using the switch located on the center console below the climate controls.

Press the left arrow on the switch to move the pedals away from you and the right arrow on the switch to move the pedals toward you.

The pedals cannot be adjusted when the vehicle is in Reverse or when cruise control is activated. Pedal position will be stored with vehicle memory.

Reviewed with Customer (Please Check Box)

Refer to Owner Manual for further information.

Driver
Information

Safety &
Security

Comfort

Entertainment

Convenience

Performance &
Maintenance

Owner
Privileges™

ESCALADE / ESCALADE ESV

AUTOMATIC CLIMATE CONTROLS



The automatic climate control system maintains the desired individual temperature for the driver and front seat passenger. The system automatically adjusts the airflow mode, fan speed, air conditioning and recirculation functions to reach the set temperature(s) as quickly as possible.

Automatic Operation

To set the automatic mode:

1. Press the AUTO button.
2. Set the driver's and front passenger's temperature using the temperature knobs.

Manual Operation

To operate the system manually, use the following controls:

(On/Off): Press the temperature knobs to turn the driver's and front passenger's system on or off.

Temperature Control: Rotate the temperature knobs to raise or lower the driver's and front passenger's temperature settings.

(Fan): Press the up or down arrow to increase or decrease fan speed.

(Mode): Press the up or down arrow to change the direction of the airflow as well as to select the defog mode.

(Recirculation): Press this button to recirculate inside air through the vehicle. This mode keeps outside air from entering the vehicle.

(Air Conditioning): Press this button to turn the air conditioning system on or off.

AUX (Rear Climate Control): Press this button to turn the rear climate control system on or off.

(Defrost): Press this button to direct most of the airflow to the windshield.

(Rear Window Defogger): Press this button to activate the rear window defogger and the heated outside rearview mirrors. The defogger and heated mirrors will shut off automatically or can be turned off by pressing the button again.

REAR SEAT CLIMATE CONTROLS

The rear temperature can be adjusted by using either the front climate controls on the instrument panel or the rear seat climate control panel on the back of the floor console.

To control the rear temperature from the front, press the AUX button (the indicator light will illuminate). The rear cabin temperature will be set to the same temperature as the driver's set temperature. Rear passengers can turn on and control the rear seat climate control when any rear panel button is pressed.



Rear Control Panel — Automatic Operation

AUTO: Press the  (Mode) button until AUTO is displayed to have the system control the airflow and fan speed based on the set temperature.

Rear Control Panel — Manual Operation

 **(Fan):** Press the up or down fan arrow to manually adjust fan speed.

+ - (Temperature Control): Press the + or - temperature button to adjust the temperature setting.

 **(Mode):** Press the mode button to manually adjust the direction of the airflow.

Entertainment

AUDIO SYSTEM FEATURES



Your Escalade audio system includes the following features.

 **(Power/Volume):** Press this knob to turn the system on or off. Turn the knob to adjust the volume.

 **(Tune):** Turn this knob to select radio stations. Press this knob to

enter the radio main menu and access functions such as tone adjustment, speaker fade/balance and equalization settings.

BAND: Press this button to select AM, FM1, FM2, or XM1 or XM2

SRCE (Source): Press this button to switch to AM, FM, XM, DVD audio, DVD Rear Seat Entertainment, or CD player operation.

CNFG (Configuration): Press this button to display the system configuration menu. Use the tune/select knob to navigate through and select features in this menu.

  **(Scan):** Press the double arrow button to scan radio stations. Press and hold the button for two seconds (a beep will sound) to scan preset stations. Press the button again to stop scanning.

  **(Seek):** Press the left or right arrow button to go to the previous or next radio station or, when a CD is playing, to the start of the current track or MP3 file or the next track or MP3 file.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver
Information

Safety &
Security

Comfort

Entertainment

Convenience

Performance &
Maintenance

Owner
Privileges™

ESCALADE / ESCALADE ESV

Configurable Radio Display Keys

The four keys located on each side of the radio display can be customized to make it easier to access commonly used radio features. To program the configurable keys:

1. Press the Tune knob.
2. Turn the Tune knob to select Setup, and then press the knob.
3. Turn the Tune knob to select Configure Display Keys, and then press the knob.
4. Turn the Tune knob to select one of the keys, and then press the knob. The currently assigned feature is shown.
5. Turn the Tune knob to select the feature to program to the key, and then press the knob. The display will show the new feature next to the key.
6. Repeat the steps for each key.

Setting Preset Radio Stations

Before setting your preset stations, shift the vehicle into Park.

Note: Choosing to engage in extended searching for specific audio stations or songs by using buttons and knobs — or to give extended attention to entertainment tasks — can lead you to look away from the road frequently or longer than usual. Looking away from the road for prolonged periods may cause you to miss seeing things on the road that you need to see. Be sure to keep your eyes on the road and mind on the drive — and avoid engaging in extended searching for specific items while driving.

To preset stations:

1. Turn on the radio.
2. Press the BAND button to select AM, FM1, FM2, or XM1 or XM2 (if equipped).
3. Tune in the desired radio station.
4. Press and hold one of the six numbered pushbuttons until a beep sounds.
5. Repeat the steps for each pushbutton on each band.

Setting the Time

To set the time:

1. Press the Tune knob.
2. Turn the Tune knob until Set Clock is displayed.
3. Press the Tune knob to select the Set Clock function.
4. Turn the Tune knob to adjust the time.
5. Press the Tune knob to set the currently displayed time.

MP3 Capability

Your audio system has MP3 playing capability. A CD-R containing MP3 audio tracks will play automatically when inserted into the CD player.

Radio Data System

When you tune in a Radio Data System (RDS) station, the station name, call letters and program name may appear on the display instead of the frequency.

RDS features are available for use only on FM stations that broadcast RDS information. RDS relies on receiving specific information from these stations and will work only when the information is available.

MULTIPLE-DISC CD PLAYER

To load CDs:

- Press and release the  (Load) button to load one CD. Wait for the display prompt before loading the CD.
- Press and hold the  button for two seconds to load up to six CDs. Wait for the display prompt before loading each CD. The CD player will time out when it does not receive any more CDs.

To play a specific CD:

- Press the F1 (Down) or F2 (Up) pushbutton to select the desired CD. The CD will begin to play automatically.

To eject CDs:

- To eject the CD that is currently playing, press the  (Eject) button once.
- To eject all CDs, press and hold the  button for two seconds.

If a CD is not removed after several seconds, it will automatically be pulled back into the player.

Notice: If you add any label to a CD, insert more than one CD into the slot at a time, or attempt to play scratched or damaged CDs, you could damage the CD player. When using the CD player, use only CDs in good condition without any label, load one CD at a time, and keep the CD player and the loading slot free of foreign materials, liquids and debris.

TOUCH SCREEN NAVIGATION ENTERTAINMENT SYSTEM (if equipped)

Your vehicle's Navigation Entertainment System provides you with detailed maps of most major highways and roads throughout the United States and Canada. After you enter a destination, the system provides turn-by-turn instructions for reaching your destination. In addition, the system can help you locate a variety of points of interest, such as banks, airports, restaurants and more.

Note: Not all roads and addresses are available on the map disc.

Setting the Time

To adjust the clock:

1. Press the CNFG button.
2. Touch the Clock Display screen button.
3. Touch the + or – screen button to adjust the hour and minutes.

Setting Preset Radio Stations

Press the CNFG button to select up to six pages for favorite radio stations. On each page, up to five stations of any band (AM, FM or XM) can be preset using the five screen buttons on the radio display.

To preset radio stations:

1. Press the AUDIO button.
2. Touch the AM, FM, or XM screen button.
3. Tune in the desired radio station.
4. Touch and hold the numbered screen button until a beep sounds.

See your Navigation manual and quick reference guide for additional operating instructions.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver
Information

Safety &
Security

Comfort

Entertainment

Convenience

Performance &
Maintenance

Owner
Privileges™

ESCALADE / ESCALADE ESV

XM™ SATELLITE RADIO

XM Satellite Radio offers more than 170 channels of digital-quality sound that goes wherever you go — coast to coast. XM can display song title, artist or entertainment genre by pressing the **i** (Information) button.

After a free three-month trial period, activation and service subscription fees apply. Service is based in the continental U.S. and Canada.

For more information, visit XM online at www.XMradio.com or call 1-800-852-XXMM (9696).

AUDIO STEERING WHEEL CONTROLS

A number of audio controls can be adjusted at the steering wheel.

+ - (Volume):
 Pull the + or - button to increase or decrease the volume.

△ ▽ (Next/Previous): Press the up or down arrow to go to the next or previous preset radio station or, when a CD is playing, to the next or



previous track.

SRCE (Source): Press this button to switch between AM, FM, XM (if equipped), CD and DVD.

▷ (Seek): Press this button to go to the next radio station.

⏏ (Mute/Voice Recognition): Press this button to silence the system. Press the button again to turn on the sound.

This button is also used for OnStar hands-free phone and voice recognition commands for your Navigation radio. See your Owner Manual for operating instructions.

REAR SEAT AUDIO



The Rear Seat Audio (RSA) system allows front seat and rear seat passengers to listen to different entertainment sources at the same time using the rear seat audio controls and headphones.

⏏ (On/Off): Press this button to turn the system on or off.

Volume: Turn the left knob to adjust the volume of the left headphone jack and the right knob to adjust the volume of the right headphone jack (headphones not included).

SRCE (Source): Press this button to select an entertainment source — AM, FM, XM, CD, DVD, RSE or AUX (if equipped).

◀ ▷ (Seek): Press the right or left arrow button to go to the next or previous radio station.

PROG (Program): Press this button to go to the next preset radio station.

MP3 EXTERNAL INTERFACE

To connect an external MP3 player to the vehicle's audio system, plug the MP3 player into the RCA jacks (if equipped) located on the rear of the front center console. An adaptor for your specific MP3 device may be required. For the standard radio press the Source button on the radio to select AUX or for the Navigation radio press the Audio key and then the AUX screen button, and then use the front radio volume control to adjust the sound level of your music.

For best results, turn the MP3 player volume up and then adjust the vehicle volume level on the radio.

DVD REAR SEAT ENTERTAINMENT (if equipped)

The Escalade Rear Seat Entertainment (RSE) system includes a flip-down video screen, two wireless 2-channel headphones and a remote control. The Escalade ESV RSE system includes two flip-down screens (2nd and 3rd row), four wireless 2-channel headphones and a remote control. The DVD player is part of the front radio. The system can be controlled using the radio buttons or the remote control.

To play a DVD:

1. Turn on the ignition.
2. Push the release button on the DVD overhead display console and pull down the video screen.
3. Insert a DVD into the DVD slot in the radio. It will turn on the video screen and begin playing

Note: Aim the remote control at the video screen, not the DVD player, for proper operation.

automatically. It may be necessary to press the Play pushbutton on the radio or the remote control to start playing the movie if the DVD stops at a menu screen.

4. To listen to the DVD through the vehicle speakers, press the SRCE (Source) button on the radio until RSE is on the screen. Adjust volume using the radio volume control.

To listen to the DVD through the headphones, select channel 1 on the headphones and push the power button on the headphones. Adjust volume using the headphone volume control.

To listen to a Rear Seat Audio source, select channel 2.

5. To control DVD playback, use the remote control or the front radio buttons.
6. To turn off the RSE system, press the power button for two seconds on the front radio, eject the DVD or press the power button on the remote control.

Driver Control of the Audio System

The driver has basic control of the whole audio system. Press and hold the Power knob for more than two seconds to turn off the radio, Rear Seat Audio and Rear Seat Entertainment systems.

Note: For a complete description and directions for use, refer to your Owner Manual.

Convenience

MEMORY SETTINGS

The memory buttons are located on the driver's door. Settings can be programmed for the driver's seat, outside mirrors and the adjustable pedals for two drivers.



To save memory settings:

1. Adjust the driver's seat, outside mirrors and pedals to a comfortable position.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver
Information

Safety &
Security

Comfort

Entertainment

Convenience

Performance &
Maintenance

Owner
Privileges™

ESCALADE / ESCALADE ESV

2. Press and hold button 1 or 2 until two beeps sound.

Repeat these steps for a second driver.

To recall the settings, press memory button 1 or 2 with the vehicle in Park. If the Remote Keyless Entry (RKE) transmitter is used to enter the vehicle and the memory seat recall feature is turned on in the DIC (see Vehicle Customization Settings), the settings will be recalled automatically.

Note: The two RKE transmitters are specifically synchronized to either memory button 1 or 2. If the correct memory settings are not recalled, try using the other RKE transmitter.

Easy-Exit Seat

The  (Easy-Exit) button is located between the two memory buttons. If the easy-exit feature is turned on in the DIC (see Vehicle Customization Settings), the driver's seat will automatically move rearward a predetermined amount when the key is removed from the ignition. To move the seat back completely, press the Easy-Exit button.

VEHICLE CUSTOMIZATION SETTINGS

A variety of your vehicle's features can be customized to your preference through the Driver Information Center. To customize features:

1. With the vehicle in Park (P), turn on the ignition.
2. Repeatedly press and release the  (Customization) button to display available customization features.
3. With the desired customization feature displayed, press the  (Set/Reset) button to access the feature settings.
4. Repeatedly press and release the  button to scroll through the available settings.
5. With the desired setting displayed, press the  button to select it.
6. To exit the Feature Settings menu, press the  button until EXIT FEATURE SETTINGS is displayed and then press the  button, or press the  button.

Customization features include:

- Display in English
- Display Language
- Auto Door Lock
- Auto Door Unlock
- Remote Door Lock
- Remote Door Unlock
- Delay Door Lock
- Exit Lighting
- Approach Lighting
- Chime Volume
- Park Tilt Mirrors
- Easy Exit Seat
- Memory Seat Recall
- Remote Start
- Display Digital Speed
- Factory Settings
- Exit Feature Settings

REMOTE VEHICLE START

This feature allows you to start the engine from outside the vehicle by using the Remote Keyless Entry (RKE) transmitter. (Remote Vehicle Start transmitter range is approximately 200 feet, with the vehicle in a direct line of sight.)

After a remote start, the engine will run for about 10 minutes before turning itself off, but can be extended 10 minutes by performing another remote start sequence at any time. After two consecutive remote starts, no additional remote starts are allowed until the vehicle has been started with the ignition key.

The vehicle's climate control system will automatically heat or cool the vehicle interior to 74°F (23°C), and adjust the airflow to the defrost or vent mode depending on ambient conditions.

Starting the Vehicle

To remote start the vehicle:

1. Aim the RKE transmitter at the vehicle.
2. Press and release the  (Lock) button on the transmitter.
3. Immediately press and hold the  (Remote Vehicle Start) button for about four seconds.
4. When the parking lamps flash, release the button. The engine will start and the parking lamps will remain on. The engine will continue to run for 10 minutes.

Refer to Owner Manual for further information.

5. Repeat these steps for a 10-minute time extension.

When you enter the vehicle after a remote start, the key must be inserted in the ignition and turned to the Run position before driving.

Note: The Remote Vehicle Start feature will not operate if the key is in the ignition, a door or the hood is open, or if the Check Engine light is illuminated on the instrument panel cluster.

Canceling a Remote Start

If you wish to turn off the engine instead of driving after a remote start, perform one of the following functions:

- Press and hold the  button until the parking lamps turn off.
- Press and release the Hazard Warning Flashers button inside the vehicle. Press the button again to turn off the flashers.
- Turn the key in the ignition switch on and then off.
- The engine will automatically stop when time expires.

AUTO TURN SIGNAL

The turn signal lever includes an automatic lane change signal feature.

To signal a lane change, raise or lower the lever until the arrow on the instrument panel cluster starts to flash, and then release the lever. The turn signal will automatically flash three times. If the Tow/Haul mode is selected, the turn signal will automatically flash six times.

To signal a turn, move the lever all the way up or down.

INTELLIBEAM™ AUTOMATIC HEADLAMPS (if equipped)

IntelliBeam uses a digital light sensor behind the inside rearview mirror to maximize forward night vision. The system automatically switches on the high-beam headlamps when no other vehicle traffic is present, and switches to low beam intensity when the headlamps or taillamps of other vehicles are detected. The system operates only when driving over 20 mph (32 km/h).

The system is turned on automatically when the headlamp system is set to AUTO and the turn

Reviewed with Customer (Please Check Box)

Driver
Information

Safety &
Security

Comfort

Entertainment

Convenience

Performance &
Maintenance

Owner
Privileges™

ESCALADE / ESCALADE ESV

signal/multifunction lever is in the low beam position.

To turn off the system, press the AUTO  (On/Off) button on the inside rearview mirror for three seconds. Press the button again to turn the system back on.

AUTOMATIC HEADLAMP SYSTEM



Your vehicle is equipped with an Automatic Headlamp System, which automatically turns on the Daytime Running Lamps (DRL) during the day and the headlamps and other exterior lamps at night or when necessary.

The system uses a light sensor, located on top of the instrument panel, to determine light conditions. For proper system operation, avoid placing any objects on or near the sensor.

Exterior Lamp Controls

The exterior lamps also can be operated manually using the control knob located on the left side of the instrument panel. The knob can be rotated to the following positions:

 **(Off):** Turns off the Automatic Headlamp System, including the Daytime Running Lamps.

AUTO (Automatic Mode): Turns on the Automatic Headlamp System at night or when necessary.

 **(Parking Lamps):** Turns on the parking lamps and taillamps.

 **(Headlamps):** Turns on the headlamps and other exterior lamps.

Additional lamp controls include:

 **DOME OFF:** When this button is pressed in, the dome lamps will be turned off. When the button is out, the dome lamps will turn on automatically when the doors are open.

 **(Instrument Panel Brightness):** Turn this knob to adjust the brightness of the instrument panel lights.

 **(Fog Lamps):** Press this button to turn the fog lamps on or off.

CRUISE CONTROL

The cruise control buttons are located on the steering wheel.

 **(On/Off):** Press this button to turn the cruise control system on or off.

- SET (Set): Press this button to set a speed, or to decrease the speed if the system is set.

Tapping the button decreases the speed in one-mph increments. When the cruise control speed is set, the cruise light will illuminate in the instrument cluster.

+ RES (Resume): Press this button to resume a set speed, or to increase the speed if the system is set. Tapping the button increases the speed in 1 mph (1.6 km/h) increments.

 **(Cancel):** Press this button to cancel the cruise control but retain the set speed in memory.



RAINSENSE™ II WINDSHIELD WIPERS

The Rainsense II windshield wipers use a sensor to automatically operate the wipers when needed, depending on driving conditions and the sensitivity setting. If the system is left on for long periods, an occasional wipe may occur without any moisture on the windshield to indicate the system is activated.

The headlamps also will be turned on automatically when the Rainsense II wipers are active if the exterior lamp control switch is in the AUTO position.



Windshield Wiper Controls

The windshield wiper control band and the rear wiper switch are located on the multifunction stalk on the left side of the steering column. The

Refer to Owner Manual for further information.

control band can be rotated to the following settings:

(Mist): Activates one wipe.

(Off): Turns wipers off.

(Rainsense Sensitivity Levels):

The position closest to Off is the lowest sensitivity level, which allows more moisture to collect on the windshield between wipes.

(Low): Activates wipers at low speed setting.

(High): Activates wipers at high speed setting.

(Washer Fluid): Push the paddle on top of the lever to spray washer fluid on the windshield.

HEATED WINDSHIELD WASHER FLUID

The heated windshield washer fluid system can help clear ice, tree sap and bugs from the windshield.

Press the (Heated Washer Fluid) button, located below the climate controls on the instrument panel,



to start four automatic heated wash/wipe/pause cycles. A light on the button will flash while the washer fluid is heating, which may take up to 40 seconds. The remaining cleaning cycles may take about 20 seconds to occur.

To cancel any remaining cycles, press the button again.

UNIVERSAL HOME REMOTE

Located in the overhead console, the Universal Home Remote is a combined universal transmitter and receiver that can activate up to three devices, such as garage door openers, entry door locks, gates and security systems.

It's recommended that you read the instructions in your Owner Manual completely before attempting to program any of the three channels on the Universal Home Remote. The engine should be turned off when programming the remote.

Note: Do not use the Universal Home Remote with any garage door opener that does not have the "stop and reverse" feature or any opener manufactured before April 1, 1982.

Reviewed with Customer (Please Check Box)

ESCALADE / ESCALADE ESV

REAR VISION CAMERA (if equipped)



The rear vision camera displays a view of the area behind the vehicle on the navigation screen when the vehicle is shifted into Reverse. Once shifted out of Reverse, the navigation screen will return to the last screen displayed after approximately 10 seconds.

To turn the camera and symbols on or off:

1. Shift into Park (P).
2. With the Navigation system on, press the CNFG button.
3. Touch the Display screen button.
4. Touch the Rear Camera Options screen button.
5. Touch the Video and/or Symbols screen button.

To clean the camera lens, located above the license plate, rinse it with water and wipe it with a soft cloth.

ULTRASONIC REAR PARKING ASSIST

This feature uses ultrasonic sensors on the rear bumpers to help you avoid colliding with objects when parking the vehicle. It operates only at speeds less than 5 mph (8 km/h).

The rear parking assist display is located near the rear window and provides the following indicators:

- At distances between 40 inches (1 m) and 8 ft. (2.5 m), a single amber light will come on.
- At distances between 23 inches (0.6 m) and 40 inches (1 m), two amber lights will come on.
- At distances between 12 inches (0.3 m) and 23 inches (0.6 m), three lights (amber/amber/red) will be on.
- At distances less than 12 inches (0.3 m), a beeping sound will repeat for a short time and all three lights (amber/amber/red) will flash.

To disable the system, press the  (Rear Parking Assist) disable button located on the right side of the audio system. The indicator light will illuminate when the system is off.

Press the button again to turn the system back on.

SUNROOF (if equipped)

The open/close and vent switches for the power sunroof are located on the overhead console. The



open/close switch has two detents for manual and express operation.

Express-Open/Close the Sunroof

Fully press the  (Express-Open) or the  (Express-Close) side of this switch to express-open or express-close the sunroof. To stop the sunroof, press the switch again.

To partially open or close the sunroof, lightly press and hold the rear or front of the switch (to the first detent) until the sunroof reaches the desired position.

Vent the Sunroof

Press the  (Vent) side of this switch to vent the sunroof. Press the switch again to stop the sunroof.

Press and hold the  (Close) side of the switch to close the sunroof.

POWER RUNNING BOARDS (if equipped)

The power running boards extend from beneath the vehicle when any side door is open. The vehicle must be stationary for the running boards to operate. To disable the running boards, press the  (Running Boards) disable button on the instrument panel. Press the button again to turn the running boards back on.

FOLDING 2ND-ROW SEATS



The 2nd-row seats fold and tumble to provide more cargo space and access to the 3rd-row seats.

To fold and tumble the seat:

1. Make sure nothing is under or in front of the seat.

2. Fold the seatback forward by lifting the release lever located on the outboard side of the seat.
3. Tumble the seat forward by lifting the release lever again.

To unfold the seat:

1. Pull down the seat until it latches to the floor.
2. Lift up the seatback until it locks in place. Pull on the seatback to make sure it is locked.

Power Release Seats (if equipped)

To fold and tumble the power release seat:

1. Shift the vehicle into Park (P).
2. Make sure nothing is under or in front of the seat.
3. Press one of the automatic release buttons, located on the overhead console or on the panel behind the rear doors. The seat will fold and tumble forward automatically.

The seat must be unfolded manually to return it to the sitting position.




FOLDING 3RD-ROW SEATS

The split rear seats fold, tumble or can be removed to provide more cargo space.

To fold and tumble the seat:

1. Make sure nothing is in front of the seat.
2. Fold the seatback forward by lifting the release lever (A) located at the bottom rear of the seatback on the outboard side of the seat.
3. Tumble the seat forward by lifting the release lever (B) located to the left of the handle (C) on the center rear of the seat.
4. Tilt the seat fully forward and lock it in place.

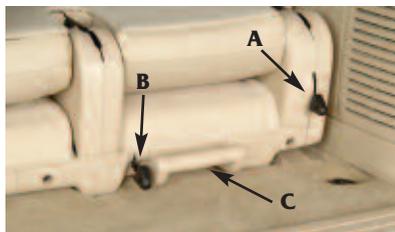

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver
Information

Safety &
Security

Comfort

Entertainment

Convenience

Performance &
Maintenance

Owner
Privileges™

ESCALADE / ESCALADE ESV

To unfold the seat:

1. Lower the seat by lifting the release lever (B) located to the left of the handle on the center rear of the seat.
2. Pull down the seat until it latches to the floor.
3. Lift up the seatback until it locks in place. Pull on the seatback to make sure it is locked.

To remove a seat:

1. Fold the seatback forward by lifting the release lever (A) located at the bottom rear of the seatback on the outboard side of the seat.
2. Pull rearward using the handle (C) on the center rear of the seat.

POWER LIFTGATE AND LIFTGLASS OPERATION



Power Liftgate

Use the Remote Keyless Entry (RKE) transmitter or the power door lock switches to unlock the liftgate.

There are several ways to open and close the power liftgate:

- Press and hold the  (Power Liftgate) button on the RKE transmitter until the liftgate starts moving.

- Press the touchpad (A) on the inside surface of the liftgate handle to open.
- Press the button on the bottom edge of the liftgate to close.
- Press the  button on the overhead console inside the vehicle.

To turn off the power liftgate function, press the OFF button on the overhead console.

Liftglass

There are two ways to unlatch the liftglass:

- Press the touchpad (B) on the liftgate, located above the right side of the license plate.
- Press the  (Liftglass) button on the RKE transmitter.

Performance & Maintenance

6-SPEED AUTOMATIC TRANSMISSION CONTROLS



The 6-speed automatic transmission has a unique gear range selection mode called Driver Shift Control that enables the driver to select the range of gears desired for the current driving conditions, such as when driving on downhill grades.


To use this feature, move the shift lever to the Manual (M) position and select a lower or higher driving gear using the +/- button on the shift lever. The display on the instrument panel cluster will show the current gear selection.

Press the – (minus) side of the button to downshift. When slowing to a stop, the vehicle will automatically downshift.

Press the + (plus) side of the button to upshift. As vehicle speed increases, you will need to manually upshift.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur.

STABILITRAK® – STABILITY CONTROL SYSTEM

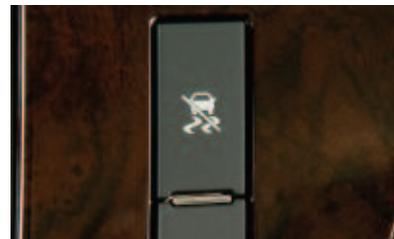

StabiliTrak is an advanced computer-controlled vehicle stability and traction enhancement system that assists with directional control of the

vehicle in difficult driving conditions. It turns on automatically every time you start your vehicle.

To limit wheelspin and help maintain directional control, you should always leave the system on. If your vehicle becomes stuck and rocking the vehicle is required, the system should be turned off.

Press the  (StabiliTrak) button, located on the right side of the audio system, to turn off the traction control part of the system. Press and hold the button for five seconds to turn off the traction control and stability enhancement systems. When the system is turned off, the StabiliTrak indicator light will illuminate in the instrument panel cluster.

Press the  button again to turn the system back on.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver
Information

Safety &
Security

Comfort

Entertainment

Convenience

Performance &
Maintenance

Owner
Privileges™

ESCALADE / ESCALADE ESV

TIRE PRESSURE MONITOR

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the  (Low Tire Pressure) warning light on the instrument panel cluster. The low tire pressure warning light will remain on until you correct the tire pressure.

A CHECK TIRE PRESSURE message may also appear on the DIC (if equipped).

Correcting the Tire Pressure

When the low tire pressure warning light illuminates, you must fill the tire to the proper tire inflation pressure (just as you must refuel the vehicle when the low fuel warning light illuminates). The Tire and Loading Information label shows the correct inflation pressure for the tires when they're cold. "Cold" means your vehicle has been sitting for at least three hours or driven no more than one mile.

You can temporarily clear the DIC message by acknowledging it with your DIC controls. However, at the next vehicle start-up, the DIC message will reappear if the tire pressure has not been corrected.

During cooler conditions, the low tire pressure warning light may appear when the vehicle is first started and then turn off as you start to drive the vehicle. This could be an early indicator that your tire pressures are getting low and need to be inflated to the proper pressure.

Note: The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance.

See Section 5 of your Owner Manual.

RESETTING THE ENGINE OIL LIFE SYSTEM

The Oil Life System calculates engine oil life based on vehicle use and displays CHANGE ENGINE OIL SOON in the Driver Information Center (DIC) when it's necessary to change your engine oil and filter. The Oil Life System should be reset to 100% only following an oil change.

To reset the Oil Life System:

1. Turn on the ignition.
2. Press the  (Vehicle Information) button until the DIC displays OIL LIFE REMAINING.
3. Press and hold the  (Set/Reset) button until 100% is displayed.
4. Turn off the ignition.

Refer to your Owner Manual for further information.

Owner Privileges™

To make your ownership experience as satisfying and rewarding as possible, we are proud to provide you with Cadillac's exceptional Owner Privileges, designed to accommodate you anytime and anywhere.

ROADSIDE SERVICE 1-800-882-1112

Roadside Service provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services:

- Towing Service
- Battery Jump-Starting
- Lockout Assistance
- Fuel Delivery
- Flat Tire Assistance

Trip Interruption: If your trip is interrupted due to a component failure covered under warranty, incidental expenses may be reimbursed, including hotel, meals and rental car.

Courtesy Transportation: You may be provided with courtesy transportation for warranted repairs, including shuttle service for same-day repairs and loaner transportation for overnight repair.

Roadside Assistance and OnStar® (if equipped): Push the OnStar button, the vehicle will send your GPS location to the OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you get the help you need.

CUSTOMER ASSISTANCE 1-800-458-8006

Should you need to ask a question, make a comment, or request additional information, the Cadillac Customer Assistance Center is staffed around the clock with professionals to serve you.

When you call Cadillac Roadside Service or Customer Assistance, when possible, please provide the phone advisor with:

- Your telephone number and location
- Your Cadillac's location
- A description of the problem
- Vehicle Identification Number
- Year and model of your Cadillac
- Delivery date
- Current mileage

CADILLAC ONLINE

For more information about your Cadillac, including access to the Cadillac Owner Center at My GMLink, visit www.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice.

Escalade is a registered trademark of Cadillac Motor Car Division and General Motors Corporation. Copyright 2007 by Cadillac Motor Car Division. All rights reserved.

Driver
Information

Safety &
Security

Comfort

Entertainment

Convenience

Performance &
Maintenance

Owner
Privileges™

Cadillac



15854833A