

HUMMER®

Getting to Know Your 2009 H2



Table of Contents

DRIVER INFORMATION

Instrument Panel	2
Instrument Panel Cluster	3
Driver Information Center	4

SAFETY & SECURITY

Remote Keyless Entry	5
Content Theft-Deterrent System	5
OnStar®	6

COMFORT

Power Seat Controls	6
Heated Seats	6
2nd-Row Bucket Seats	7
Memory Settings	7
Automatic Climate Controls	7
Rear Seat Climate Controls	8

ENTERTAINMENT

Audio System Features	8
XM® Radio	10
Touch Screen Navigation Entertainment System	11
Audio Steering Wheel Controls	11
Bluetooth® System	11
Rear Seat Audio and DVD Rear Seat Entertainment Systems	11

CONVENIENCE

Remote Vehicle Start	12
Automatic Headlamp System and Exterior/Interior Lamps	13
Wipers and Washers	14
Cruise Control	14
Global Power Windows	15
Power Foldaway Mirrors	15

Rear Vision Camera	15
Lowering the Midgate™	16

PERFORMANCE & MAINTENANCE

6-Speed Automatic Transmission Controls	16
StabiliTrak® – Stability Control System	17
Tire Pressure Monitor	17
Four-Wheel Drive, Suspension and Towing Controls	18
Off-Road Driving Basics	19
Resetting the Engine Oil Life System	19

OWNER INFORMATION

Roadside Assistance	20
My GMLink	20

Congratulations on your purchase of a HUMMER H2. Please read this information about your vehicle's features and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

DRIVER INFORMATION

Instrument Panel




The main features of the instrument panel include:

- A. Air Outlets
- B. Turn Signal/Multifunction Lever
- C. Instrument Panel Cluster
- D. Driver Information Center Controls
- E. Audio System/Navigation Entertainment System (if equipped)
- F. Exterior Lamps Control
- G. Dome Lamp Off Button/Heated Windshield Washer Fluid Button (if equipped)
- H. Driver Shift Control Buttons
- I. Cruise Control Buttons/Heated Steering Wheel Button (if equipped)
- J. Tilt Steering Wheel Lever/Power Tilt and Telescopic Steering Wheel Control (if equipped)
- K. Horn
- L. Audio Steering Wheel Controls
- M. Four-Wheel Drive Controls
- N. StabiliTrak Button
- O. Shift Lever
- P. Climate Controls
- Q. Accessory Power Outlet
- R. Glove Box

See Section 3 of your Owner Manual.

Instrument Panel Cluster

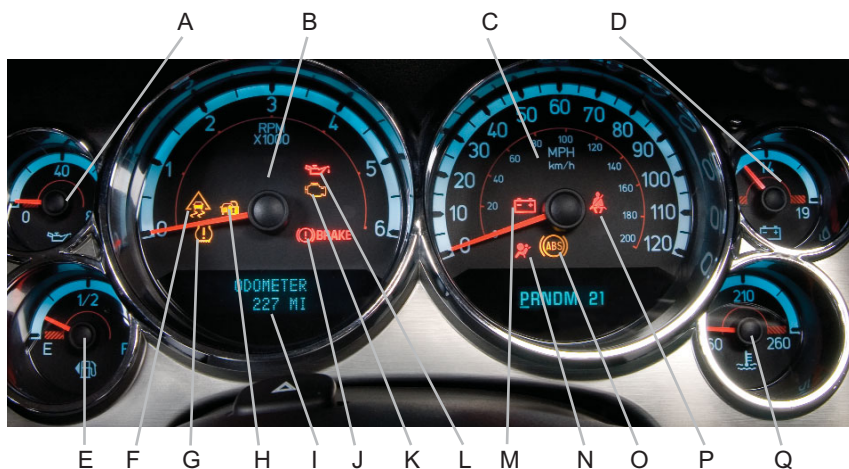

Your vehicle's instrument panel is equipped with this cluster or one very similar to it. The instrument cluster includes these key features:


- A. Oil Pressure Gauge
- B. Tachometer
- C. Speedometer
- D. Voltmeter*
- E. Fuel Gauge
- F. StabiliTrak Indicator Light
- G. Tire Pressure Light
- H. Security Light
- I. Driver Information Center/Odometer
- J. Brake System Warning Light
- K. Malfunction Indicator Lamp (Check Engine Light)
- L. Oil Pressure Warning Light
- M. Charging System Warning Light

- N. Airbag Readiness Light
- O. Antilock Brake System Warning Light
- P. Safety Belt Reminder Light
- Q. Engine Coolant Temperature Gauge

*The charging system is designed to regulate voltage output to help improve fuel economy and extend battery life. Normal system operation readings may fluctuate based on vehicle operation, including the number of electrical accessories being operated and engine speed.

Note: The instrument cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

Driver Information Center

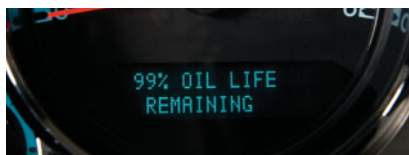

Your vehicle's Driver Information Center (DIC) provides vehicle information, vehicle feature customization, and vehicle warning messages. The DIC messages will be shown on the instrument panel cluster display.

The DIC controls are located on the right side of the instrument panel cluster. They include:

Trip/Fuel:

Press this button to display the following trip and fuel information:

- Odometer
- Trip Odometer
- Fuel Range
- Average Economy
- Fuel Used
- Timer
- Transmission Temperature



 **Vehicle Information:** Press this button to display the following vehicle information:

- Outside Temperature
- Compass Settings
- Oil Life
- Display Units (English/Metric)
- Tire Pressure
- Engine Hours
- Remote Keyless Entry Programming

 **Customization:** Press this button to scroll through the following customization features:

- Display Language
- Auto Door Lock
- Auto Door Unlock
- Remote Door Lock
- Remote Door Unlock
- Delay Door Lock
- Exit Lighting
- Approach Lighting
- Chime Volume
- Park Tilt Mirrors
- Easy Exit Seat
- Memory Seat Recall
- Remote Start
- Factory Settings

✓ **Set/Reset:** Press this button to set or reset DIC information while it is displayed or to acknowledge a warning message.

Customization Settings

To customize features:

1. With the vehicle in Park, turn on the ignition.
2. Press the  (Customization) button to display available customization features.
3. With the desired customization feature displayed, press the ✓ (Set/Reset) button to access the feature settings.
4. Press the  button to scroll through the available settings.
5. With the desired setting displayed, press the ✓ button to select it.

6. Press the  button to scroll to the next feature.
7. To exit the Feature Settings menu, press the  button until EXIT FEATURE SETTINGS is displayed and then press the  button; or press the  button or the  button.

Warnings and Messages

The DIC provides a variety of vehicle warning messages (depending on optional equipment) if a problem is sensed in a vehicle system. To acknowledge a message and clear it from the display, press the  (Set/Reset) button. Some urgent messages cannot be cleared from the DIC display.

If you have a current OnStar subscription, and a warning message appears, you can press the OnStar button and speak to an OnStar Advisor. In many vehicles, OnStar Advisors can access certain diagnostic information and can tell you how serious the problem is and what you should do about it.

Note: Your vehicle's warnings and messages provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information displayed and the action required.

See Section 3 of your Owner Manual.

SAFETY & SECURITY


Remote Keyless Entry

The Remote Keyless Entry (RKE) transmitter includes the following functions:

 **(Remote Vehicle Start):** This feature can be used to start the engine from outside the vehicle. (See Remote Vehicle Start.)

 **(Lock):** Press this button to lock all the doors. RKE feedback (light flash and/or horn chirp) can be programmed using the DIC.

 **(Unlock):** Press this button to unlock the driver's door. Press it again within five seconds to unlock all remaining doors. RKE feedback (light flash) can be programmed using the DIC.

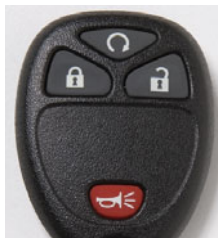

 **(Vehicle Locator/Panic Alarm):** Press this button to locate your vehicle. The turn signal lamps will flash and the horn will sound three times.

Press and hold the button to activate the panic alarm. The turn signal lamps will flash and the horn will sound for 30 seconds. Press the button again or turn the ignition to Run to cancel the alarm.

See Section 2 of your Owner Manual.

Content Theft-Deterrent System

To arm the content theft-deterrent alarm system, lock the doors using the Remote Keyless Entry (RKE) transmitter. The  (Security) light on the instrument panel cluster will illuminate for approximately 30 seconds to indicate the system is arming. To disarm the system, unlock the doors using the RKE transmitter.

The alarm will not be armed or disarmed if the doors are locked or unlocked with a key or the manual door lock.

See Section 2 of your Owner Manual.

OnStar®

Your vehicle features the uplevel OnStar Directions & Connections Plan, with one year of OnStar service from the date you purchased your new vehicle. With the help of OnStar Advisors, who are available 24 hours a day, 7 days a week, OnStar offers a wide variety of safety and driver assistance capabilities, including the following services:

- Driving Directions with Turn-by-Turn Navigation
- Destination Download using your vehicle's navigation system (if equipped)
- OnStar Vehicle Diagnostic e-mail
- Automatic Notification of Airbag Deployment
- Automatic Advanced Crash Notification
- Emergency Services
- Remote Door Unlock
- Stolen Vehicle Location Assistance
- Hands-Free Calling with 30 calling minutes
- Roadside Assistance
- Fuel Station Location
- Virtual Advisor, GPS-based Traffic & Weather


For Remote Door Unlock or Stolen Vehicle Location Assistance, call 1-888-4-ONSTAR (1-888-466-7827).

For more information, refer to your OnStar Owner's Guide or visit onstar.com.

See Section 2 of your Owner Manual.

COMFORT

Power Seat Controls

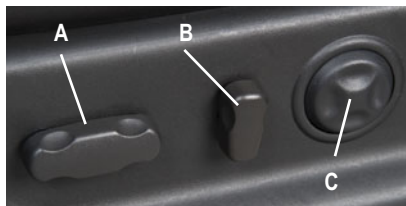

The following power seat controls are located on the outboard side of the driver and front passenger seats:

Power Seat: Use the horizontal control (A) to move the seat forward/rearward and up/down as well as to raise/lower the front or rear of the seat cushion.

Power Recline: Use the vertical control (B) to recline/raise the seatback.

Power Lumbar: Use the control pad (C) to increase/decrease lumbar support and to raise/lower the position of the support.

See Section 1 of your Owner Manual.

Heated Seats



The following heated seat controls are located on the front doors:

 **(Heated Seatback):** Press the top button to turn on the heated seatback.

 **(Heated Seat/Seatback):** Press the bottom button to turn on the heated seat and seatback.

Continue to press the desired button to cycle through the temperature settings of High (three indicator lights), Medium (two indicator lights), Low (one indicator light) and Off (all indicator lights are off).

Heated seat operation is canceled each time the ignition is turned off.

2nd-Row Heated Seats

Press the  (Heated Seat) button, located on the rear control panel on the back of the center console, to turn on each heated rear seat and cycle through the temperature settings.

See Section 1 of your Owner Manual

2nd-Row Bucket Seats (if equipped)

To recline the 2nd-row bucket seats, lift the lever on the outboard side of the seat and move the seatback to the desired position; then release the lever.

See Section 1 of your Owner Manual.

Memory Settings

Memory settings can be programmed for the position of the driver's seat and outside mirrors for two drivers. The memory buttons are located on the driver's door.

To save memory settings:

1. Adjust the driver's seat and outside mirrors to the desired position.
2. Press and hold button 1 or 2 until two beeps sound.
3. Repeat these steps for a second driver using the other memory button.

To recall the settings, press memory button 1 or 2 with the vehicle in Park. The memory settings also can be programmed with the DIC to be recalled

automatically when using the Remote Keyless Entry transmitter.

Easy Exit Seat

With the vehicle in Park, press the  (Easy Exit Seat) button to recall the exit position for the driver's seat. The easy exit seat setting also can be programmed in the DIC to be recalled when removing the key from the ignition.

See Section 1 of your Owner Manual.

Automatic Climate Controls



The automatic climate control system maintains the desired individual temperature for the driver and front seat passenger. The system adjusts the airflow mode, fan speed, air conditioning and recirculation functions to reach the set temperature(s) as quickly as possible.

Automatic Operation

To set the automatic mode:

1. Press the AUTO button.
2. Set the driver's and front passenger's temperature using the + or – temperature buttons.

Manual Operation

To operate the system manually, use the following controls:

 (On/Off): Press this button to turn the system on or off.

  (Fan): Press the up or down arrow to increase or decrease fan speed.

 **(Airflow Mode):** Press the up or down arrow to change the direction of the airflow and to select the defog mode.

+ – (Temperature Control): Press the driver and passenger + or – temperature buttons to raise or lower the temperature setting(s).

PASS (Passenger Temperature Control): Press this button to turn off the passenger temperature setting.

 **(Air Conditioning):** Press this button to turn the air conditioning system on or off.

 **(Recirculation):** Press this button to circulate inside air through the vehicle. This mode keeps outside air from entering the vehicle.

AUX or REAR (Rear Climate Control) (if equipped): Press this button to turn the rear climate control system on or off.

 **(Defrost):** Press this button to direct most of the air to the windshield and some air to the side window outlets.

 **(Rear Window Defogger):** Press this button to activate the rear window defogger and the heated outside rearview mirrors (if equipped). The defogger and heated mirrors will turn off automatically or can be turned off by pressing the button again.

See Section 3 of your Owner Manual.

Rear Seat Climate Controls (SUV only)

Rear seat occupants can operate the rear seat climate control system using the controls located on the back of the center console. To turn the rear system on or off from the front seat, press the

AUX or REAR button on the front control panel. The settings in the rear will be the same as in the front until they are changed by rear occupants using the following rear controls:

 **(Fan):** Press the up/down button to adjust fan speed. Press the  button repeatedly to turn off the system.

 **(Mode):** Press this button to adjust the direction of the airflow between the floor and headliner outlets.

+ – (Temperature Control): Press the + or – button to adjust the temperature setting from 0 (cooler) to 12 (warmer).

See Section 3 of your Owner Manual.

ENTERTAINMENT

Audio System Features (Non-Navigation Radios only)



While most of the features on your radio will look familiar, some of the following may be new:

 **(Power/Volume):** Press this knob to turn the system on or off. Turn the knob to adjust the volume.

 **(Information):** Press this button to display additional text information related to the current FM-RDS or XM station, or MP3 song.

 **(Tune):** Turn this knob to select radio stations or, when a CD is playing, to select a track or MP3 file.

Press the knob to adjust the tone (bass/treble) or speakers (balance/fade).

BAND: Press this button to switch to AM, FM, or XM (if equipped). With a CD or DVD (if equipped) playing, press this button to switch to the radio.

CD/AUX or DVD/CD/AUX (if equipped): With the radio playing, press this button to switch to a CD, DVD (if equipped), or an auxiliary input device such as a portable audio player.

FAV (Favorite): Press this button to go through up to six pages of preset favorite radio stations. Select a preset station using the buttons below the radio display.

EQ (Equalization): Press this button to select preset equalization settings.

CAT (Category): Press this button to find XM stations (if equipped) within a desired category.

Auxiliary Input Jack: A portable audio player (such as an iPod® or MP3 player) can be connected to the auxiliary input jack located on the radio. Press the AUX button to begin playing audio from the player over the vehicle speakers. To optimize speaker volume, fully increase the volume on the portable audio player.

Radio Data System

When you tune to a Radio Data System (RDS) station, the station name and call letters will appear on the display instead of the frequency. RDS stations may also provide the time of day, a program type for current programming and the name of the program being broadcast.

RDS features are available for use only on FM stations that broadcast RDS information. RDS relies on receiving specific information from these stations and will work only when the information is available.

Setting the Time

To set the time:

1. Turn on the radio.
2. Press the  (Clock) button. Or, if equipped, press the MENU button until the clock option is displayed; and then press the pushbutton located under the clock option label. The HR, MIN, MM, DD, YYYY labels will appear on the display.



3. Press the pushbutton under any of the labels to be changed.
4. Press the pushbutton again, the right SEEK arrow or the FWD button to increase the numbers. Press the left SEEK arrow or the REV button to decrease the numbers. Rotating the  (Tune) knob also will increase or decrease the selected label.
5. Press the Clock or MENU button again to set the currently displayed time and date.

Setting Favorite Stations

Before setting your favorite stations, park the vehicle.

Note: Searching for audio stations or songs — or giving extended attention to entertainment tasks — while driving can lead you to look away from the road for prolonged periods, which may cause you to miss seeing things on the road that you need to see. Always keep your eyes on the road and your mind on the drive and avoid engaging in extended search-ing for specific items while driving.

You can set up to six pages of favorite radio stations. Each page can contain any combination of up to six AM, FM, or XM (if equipped) stations.



To set the number of favorite station pages:

1. Press the MENU button to display the radio setup menu.
2. Press the pushbutton below the FAV 1–6 label on the radio display.
3. Select the desired number of favorite station pages.
4. Press the FAV button. You may now begin storing your favorite stations for the chosen number of pages.

To store favorite stations:

1. Press the BAND button to select AM, FM, or XM (if equipped).
2. Tune in the desired radio station.
3. Press the FAV button to display the page where the station is to be stored.
4. Press and hold one of the six push-buttons until a beep sounds.
5. Repeat the steps for each pushbutton on each page.

Multiple-Disc CD Player

- To load a single CD, press and release the LOAD  button. To load multiple CDs, press and hold the LOAD  button for two seconds. Follow the display prompts to load each CD.

- To play a CD, press the pushbutton below the arrow label on the display to select the desired CD number.
- To eject the CD that is currently playing, press the  EJECT button once. To eject all CDs, press and hold the  EJECT button for two seconds.

If a CD is not removed after several seconds, it will be pulled back into the player automatically.

Note: CDs with any affixed labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at a time, or if scratched or damaged CDs are played, the CD player could be damaged. When using the CD player, use only CDs in good condition without labels; load one CD at a time; and keep the CD player and the loading slot free of foreign materials, liquids or debris.

Playing MP3 Files

Your audio system has the capability of playing a CD-R or CD-RW disc containing MP3 audio files. When playing, an MP3 label will be displayed.

See *Section 3 of your Owner Manual.*

XM® Radio

XM radio offers more than 170 channels of digital-quality sound that goes wherever you go — coast to coast — and real-time XM NavTraffic on the navigation system (if equipped) of many vehicles. After a free three-month trial period, activation and service subscription fees apply. Service is based in the continental U.S. and Canada. For more information, visit XM online at www.XMradio.com or call 1-800-929-2100.

See *Section 3 of your Owner Manual.*

Touch Screen Navigation Entertainment System (if equipped)



The Navigation Entertainment System provides detailed maps of all major highways and roads throughout the continental United States. The system provides turn-by-turn driving instructions for each destination you enter and can help you locate a variety of points of interest, such as banks, airports and restaurants. The system also offers a variety of enhanced audio features.

Refer to your Navigation Entertainment System Owner Manual for operating instructions.

See Section 3 of your Owner Manual.

Audio Steering Wheel Controls

The following audio controls are located on the steering wheel:

 **(Volume):** Push up on the + or – button to increase or decrease the volume.

 **(Next/Previous/End):** Press the  up or down arrow to go to the next or previous radio station stored as a favorite or, when a CD or DVD (if equipped) is playing, to the next or previous track or chapter. Press the  (End) button to end or reject an OnStar or Bluetooth call.

SRCE (Source):

Press this button to switch to AM, FM, XM (if equipped), CD, DVD (if equipped) or AUX.

 **(Seek):** Press this button to go to the next radio station on the same band.

 **(Mute/Voice Recognition):** Press  this button to mute the speakers. Press and hold the button for two seconds to interact with the OnStar or Bluetooth system.

See Section 3 of your Owner Manual.



Bluetooth® System

The in-vehicle Bluetooth system allows users with a Bluetooth-enabled cell phone to make and receive hands-free phone calls using the vehicle's audio system, microphone and controls. The Bluetooth-enabled cell phone must be paired with the in-vehicle Bluetooth system before it can be used in the vehicle. Not all phones will support all functions.

Visit www.hummer.com/bluetooth for more information.

See Section 3 of your Owner Manual.

Rear Seat Audio and DVD Rear Seat Entertainment Systems (if equipped)

Rear Seat Audio

The Rear Seat Audio (RSA) system allows front seat and rear seat passengers to listen to different entertainment

sources using the rear seat controls and wired headphones (not supplied) or wireless headphones (if equipped).



To use the RSA system:

- Press the  (Power) button to turn on the system.
- Press the SRCE (Source) button to select radio, CD, or DVD (if equipped).
- Turn the left volume knob to adjust the left wired headphones and the right volume knob to adjust the right wired headphones. On wireless headphones (if equipped), select channel 2 and use the volume control on the headphones.

DVD Rear Seat Entertainment

The Rear Seat Entertainment (RSE) system includes a DVD player as part of the front radio, a flip-down video screen, audio/video jacks, two wireless headphones, and a remote control.

To play a DVD video:

1. Turn the ignition to the Accessory or Run position.
2. Push the release button on the DVD display console and pull down the video screen.
3. Insert a DVD into the DVD slot in the radio. It will turn on the video screen and begin playing automatically. It may be necessary to press the Play pushbutton on the radio or the remote control to start playing the video if the DVD stops at a menu screen.

Note: Aim the remote control at the video screen, not the DVD player, for proper operation.

4. To listen to the DVD through the vehicle speakers, press the DVD/CD AUX button. Adjust volume using the radio volume control.

To listen to the DVD through the headphones, select channel 1 and push the power button on the headphones. Adjust volume using the volume control on the headphones.

5. To control DVD playback, use the remote control or the front radio pushbuttons.

Parental Control

Parental Control can help gain the attention of rear passengers by stopping all RSE system features. To turn on Parental Control, press and hold the radio power button for two seconds. Press the radio power button again to turn it off.

See Section 3 of your Owner Manual.

CONVENIENCE

Remote Vehicle Start

This feature allows you to start the engine from outside the vehicle by using the Remote Keyless Entry (RKE) transmitter. The remote start capability must be turned on using the DIC.

During a remote start, the climate control system will automatically heat or cool the vehicle interior based on outside temperatures.

Starting the Vehicle

To remote-start the vehicle:

1. Aim the RKE transmitter at the vehicle (transmitter range is within approximately 200 feet of the vehicle).
2. Press and release the  (Lock) button on the transmitter.
3. Immediately press and hold the  (Remote Vehicle Start) button for about four seconds. When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes.
4. Repeat these steps for a 10-minute time extension. Only two consecutive remote starts are allowed.

When you enter the vehicle after a remote start, the key must be inserted in the ignition and turned to the On position before driving.

Note: The Remote Vehicle Start feature will not operate if the key is in the ignition, the hood is open, or the Check Engine light is illuminated. Using Remote Vehicle Start idles the engine, impacting the fuel economy reading on the DIC.

Canceling a Remote Start

To turn off the engine instead of driving after a remote start:

- Press and hold the  button until the parking lamps turn off.
- Press the Hazard Warning Flashers button inside the vehicle. Press the button again to turn off the flashers.
- Turn the key in the ignition switch on and then off.

See Section 2 of your Owner Manual.

Automatic Headlamp System and Exterior/Interior Lamps

The Automatic Headlamp System turns on the Daytime Running Lamps (DRLs) during the day and the headlamps and other exterior lamps at night or when necessary.

A light sensor on top of the instrument panel is used to determine light conditions. For proper system operation, avoid placing any objects on or near the sensor.

Exterior Lamp Controls



The exterior lamp control knob on the left side of the instrument panel can be rotated to the following positions:

○ (Off/On): Turn the knob to this position to turn off the Automatic Headlamp System and DRLs. Turn it to this position again to turn them on.

AUTO (Automatic): Turn the knob to this position to turn on the Automatic Headlamp System and DRLs.

☞ (Parking Lamps): Turn the knob to this position to turn on the parking lamps and taillamps.

☞ (Headlamps): Turn the knob to this position to turn on the headlamps and other exterior lamps.

Interior Lamp Controls

The following interior lamp controls are on the left side of the instrument panel:

 **(Dome Off):** Press in this button to have the dome lamps remain off when a door is open.

 **(Instrument Panel Brightness):** While in AUTO mode, turn this pop-out knob to adjust the brightness of the instrument panel lights.

See Section 3 of your Owner Manual.

Wipers and Washers



The following windshield wiper controls are located on the multifunction lever on the left side of the steering column:

 **(Mist):** Rotate the band down to this position to turn the wipers on for one wipe.

 **(Off):** Rotate the band to this position to turn off the wipers.

 **(Delay):** Rotate the band up to one of these settings for a delay between wipes. The wipers activate more often as the band is rotated upward.

 **(Low):** Rotate the band up to this position for steady, low-speed wipes.

 **(High):** Rotate the band up to this position for rapid, high-speed wipes.

 **(Washer):** Push the paddle on top of the multifunction lever to spray washer fluid on the windshield.

Heated Windshield Washer Fluid (if equipped)

Press the  (Heated Washer Fluid) button on the left side of the instrument panel

to spray heated washer fluid on the windshield. This will help to clear ice, tree sap or bugs from the windshield. It may take up to 40 seconds to heat the washer fluid, after which the wipers will automatically turn on for four heated wash cycles. Press the button again to cancel any remaining cycles.



Rear Wiper and Washer (SUV only)

The following rear wiper and washer controls are located on the left side of the instrument panel:

 **(Rear Wiper):** Press this button to turn the rear wiper on or off.

 **(Rear Washer):** Press this button to wash and wipe the rear window.


 **(Delay):** Press this button to turn on delayed wiping.

See Section 3 of your Owner Manual.

Cruise Control

The following cruise control buttons are located on the steering wheel:

 **(On/Off):** Press this button to turn the cruise control system on or off.

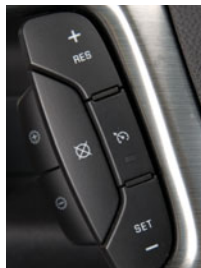

– **SET (Set)**: Press this button to set a speed, or to decrease the speed if the system is active. When the cruise control speed is set, the cruise control light will illuminate on the instrument panel cluster.

+ **RES (Resume)**: Press this button to resume a set speed, or to increase the speed if the system is active.

⊗ **(Cancel)**: Press this button to cancel the cruise control but retain the set speed in memory.

See Section 3 of your Owner Manual.

Global Power Windows

The global power windows feature enables all side windows and the Midgate window (if equipped) to be opened or closed at the same time. The  (Global Power Windows) button is located on the left side of the instrument panel to the left of the exterior lamp control knob.

Press the bottom of the  button to automatically lower all side windows and the Midgate window.

To lower all windows using the Remote Keyless Entry transmitter, press and hold the Unlock button until the windows begin to lower.

See Section 2 of your Owner Manual.

Power Foldaway Mirrors

The following power foldaway mirror controls are located on the driver's door:



 **(Mirror Selector)**: Press the left side (A) of this button to select the driver side mirror or the right side (B) of this button to select the passenger side mirror.

 **(Mirror Adjustment)**: Press the four-way control pad to adjust the mirror.

 **(Foldaway Mirrors)**: Press the right side (C) of this button to fold the mirrors or the left side (D) of this button to unfold the mirrors.

See Section 2 of your Owner Manual.

Rear Vision Camera (if equipped)

With the vehicle in Reverse, the rear vision camera displays a view of the area behind the vehicle on the inside rearview mirror or on the navigation system screen (if equipped). This can help to see things behind the vehicle or to hitch up a trailer.

Clean the camera lens on the rear bumper with water and a soft cloth.

On vehicles equipped with a navigation system, refer to your Navigation Entertainment System Owner Manual for operating instructions.

See Section 2 of your Owner Manual.

Lowering the Midgate™ (SUT only)

The Midgate enables the vehicle's cargo area to be extended into the cab.

To lower the Midgate:

1. Lower the Midgate window by pressing the Midgate window button located on the left side of the instrument panel.
2. Fold the rear seat cushions forward; then fold the seatbacks flat.



3. Press either one of the two power release buttons (A) located on the Midgate.
4. Lower the Midgate and flip over the auxiliary panel on top of the Midgate.



Reverse these steps to raise the Midgate. The Midgate must be fully latched before the window can be raised.

See Section 2 of your Owner Manual.

PERFORMANCE & MAINTENANCE

6-Speed Automatic Transmission Controls

The 6-speed automatic transmission has a Driver Shift Control feature that enables the driver to select the range of gears desired for the current driving conditions, such as when driving on downhill grades.


To use this feature, move the shift lever to the Manual (M) Mode position — this will force a downshift from the current gear state (for gears 3–6). Press the  button on the left side of the steering wheel to select a higher or lower driving range.

The transmission will be limited to the gear selected and lower gears. Shifting will occur normally while driving; however, the instrument panel cluster will display only the maximum gear available. Higher gears will not be available unless the selection is changed to include higher gears using the  button.

When slowing down, the transmission will automatically downshift. When accelerating, the transmission will automatically upshift until it reaches the maximum available gear displayed.

If current vehicle speed is too high or low for the requested gear, the shift will not occur until the proper conditions are met.

See Section 2 of your Owner Manual.

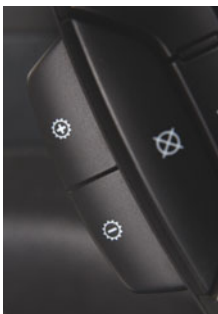

StabiliTrak® – Stability Control System

StabiliTrak is an advanced computer-controlled vehicle stability and traction enhancement system that assists with directional control of the vehicle in difficult driving conditions. It turns on automatically every time your vehicle is started.

To limit wheelspin and help maintain directional control, you should always leave the system on. However, if your vehicle becomes stuck and rocking the vehicle is required, the system should be turned off.

To turn off the traction control part of the system, press the  (StabiliTrak)



button located on the center of the instrument panel.

To turn off both the traction control and stability enhancement systems, press and hold the button for five seconds.

Both systems are disabled when the transfer case is in the Four-Wheel-Low Lock mode. When either system is off, the StabiliTrak light will illuminate.

See Section 4 of your Owner Manual.

Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the  (Low Tire Pressure) warning light on the instrument panel cluster. The low tire pressure warning light will remain on until you correct the tire pressure. A CHECK TIRE PRESSURE message may also appear on the Driver Information Center (DIC).

Correcting the Tire Pressure

When the low tire pressure warning light illuminates, you must inflate the tire to the proper tire pressure (just as you must refuel the vehicle when the low fuel warning light illuminates). The Tire and Loading Information label shows the correct tire pressure for the tires when they're cold. "Cold" means your vehicle has been sitting for at least three hours or driven no more than one mile.

You can temporarily clear the DIC message by acknowledging it with your DIC controls. However, at the next vehicle start-up, the DIC message will reappear if the tire pressure has not been corrected.

During cooler conditions, the low tire pressure warning light may appear when the vehicle is first started and then turn off as you start to drive. This could be an early indicator that your tire pressures are getting low and the tires need to be inflated to the proper pressure.

Note: The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance.

See Section 5 of your Owner Manual.

Four-Wheel Drive, Suspension and Towing Controls

Four-Wheel Drive Modes

The transfer case knob, located on the center of the instrument panel, allows you to shift into and out of the following four-wheel drive modes:



4↑ (Full-Time Four-Wheel Drive):

Used for on-road driving and light off-road driving. When shifting, the vehicle should be traveling less than 40 mph.

4↑ 4↓ (Four-Wheel-High Lock): Used for most off-road situations. When shifting, the vehicle should be traveling less than 40 mph.

4↓ 4↑ (Four-Wheel-Low Lock): Used for extreme off-road conditions. When shifting, the vehicle should be traveling less than 3 mph with the transmission in Neutral.

The indicator lights on the control knob show the selected mode of the transfer case. Refer to Section 2 of your Owner Manual for shifting instructions.

Locking Rear Axle

The locking rear axle provides additional rear-wheel traction when driving in off-road conditions such as mud, snow, sand, steep hills and uneven terrain.



To lock the rear axle:

1. Place the transfer case in the Four-Wheel-Low Lock mode.
2. Stop the vehicle and then press the  (Locking Rear Axle) button (A) on the center of the instrument panel. Wait for the indicator light to stop flashing and remain illuminated.

The locking rear axle will automatically disengage above 20 mph.

Tow/Haul Mode

The Tow/Haul mode is useful when towing or hauling a heavy load. It reduces the frequency of transmission shifts or automatically downshifts to utilize engine braking to improve the control of vehicle speed.

Press the  (Tow/Haul Mode) button (B) located on the center of the instrument panel to turn the Tow/Haul mode on or off.

Selectable Extended Rear Ride Height (if equipped)

This feature is part of the optional electronically controlled air suspension

system. The selectable rear ride height allows you to raise the rear of the vehicle approximately 2 inches (5 cm) over the normal ride height for additional running ground clearance.

To raise the ride height, press the  (Height Control) button (C) located on the center of the instrument panel. The indicator light will flash as the vehicle rises and stay on when the vehicle is at the extended height.

To use this feature, the engine must be running, all the doors must be fully closed, and vehicle speed must be less than 40 mph (64 km/h).

See Sections 2 and 4 of your Owner Manual.

Off-Road Driving Basics

Off-road driving can be great fun, but it does have its hazards. The greatest hazard can be the terrain itself. Off-road driving involves some special skills, so it's important to review the off-road driving information in your Owner Manual before you go off-roading.

Loading Your Vehicle

When loading your vehicle for off-road driving, the heaviest things should be on the load floor and forward of your rear axle. Put heavier items as forward as you can, but do not place them in the front seat area. Be sure the load is secured properly to prevent items from being tossed during off-road driving.

Note: Heavy loads on the roof raise the vehicle's center of gravity, making it more likely to roll over.

High Mobility Characteristics

Design specifications of the H2, depending on suspension packages, include:

- A ground clearance of 9.9 inches (25 cm) with a low center of gravity
- A break-over angle of 23.5°
- An approach angle of 39.8°
- A departure angle of 37.1°

The H2 has the ability to:

- Traverse a maximum 60% (31°) grade
- Traverse a 40% (22°) side slope
- Climb a 16-inch (40.6-cm) vertical step

See Section 4 of your Owner Manual.

Resetting the Engine Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and displays CHANGE ENGINE OIL SOON on the Driver Information Center (DIC) when it's necessary to change your oil and filter. The Oil Life System should be reset to 100% only following an oil change.

To reset the Oil Life System:

1. Turn on the ignition.
2. Press the  (Vehicle Information) button until the DIC displays OIL LIFE REMAINING.
3. Press and hold the  (Set/Reset) button until 100% is displayed.
4. Turn off the ignition.

See Section 5 of your Owner Manual.

OWNER INFORMATION

Roadside Assistance

1-866-HUMMER6

(1-866-486-6376)

or press the OnStar button

TTY Users: 1-888-889-2438

As the proud owner of a new HUMMER vehicle, you are automatically enrolled in the HUMMER Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

HUMMER's Roadside Assistance toll-free number is staffed by a team of technically trained advisors, who are available 24 hours a day, 365 days a year. The advisors can provide minor repair information or make arrangements to tow your vehicle to the nearest HUMMER dealer.

HUMMER will provide the following services for 5 years/100,000 miles at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealership for warranty service
- Flat tire assistance
- Jump starts

In many instances, mechanical failures are covered under HUMMER's comprehensive warranty. However, when other services are utilized, our advisors will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

HUMMER reserves the right to limit services or reimbursement to an owner or driver when, in HUMMER's judgment, the claims become excessive in frequency or type of occurrence.

Roadside Assistance and OnStar®

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

My GMLink

The HUMMER Owner Center at My GMLink is a complimentary service for HUMMER owners, a one-stop resource to enhance your HUMMER ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at www.mygmlink.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2008 by GM Corp. All rights reserved.



* 1 5 9 5 2 3 7 6 A *

HUMMER
LIKE NOTHING ELSE.™



15952376 A