

# Getting to Know Your **2011 Cruze**




Review this Quick Reference Guide for an overview of some important features in your Chevrolet Cruze. More detailed information can be found in your Owner Manual. Some optional equipment ♦ described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

♦ denotes optional equipment


[www.chevrolet.com](http://www.chevrolet.com)

## Instrument Panel

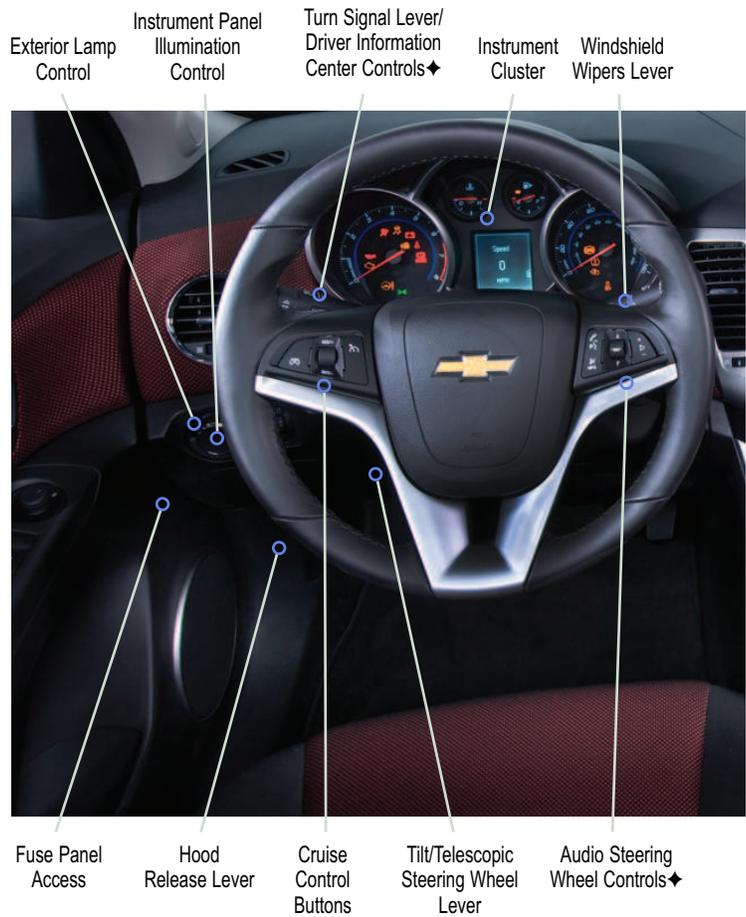

### Symbols

- |                                      |                      |                                  |
|--------------------------------------|----------------------|----------------------------------|
| Check Engine                         | Charging System      | Antilock Brake System Warning    |
| Oil Pressure                         | Security             | Low Tire Pressure                |
| Power Steering Warning               | Safety Belt Reminder | Cruise Control Set               |
| Airbag Readiness                     | Brake System Warning | StabiliTrak/Traction Control Off |
| StabiliTrak/Traction Control Warning | Lights On            |                                  |

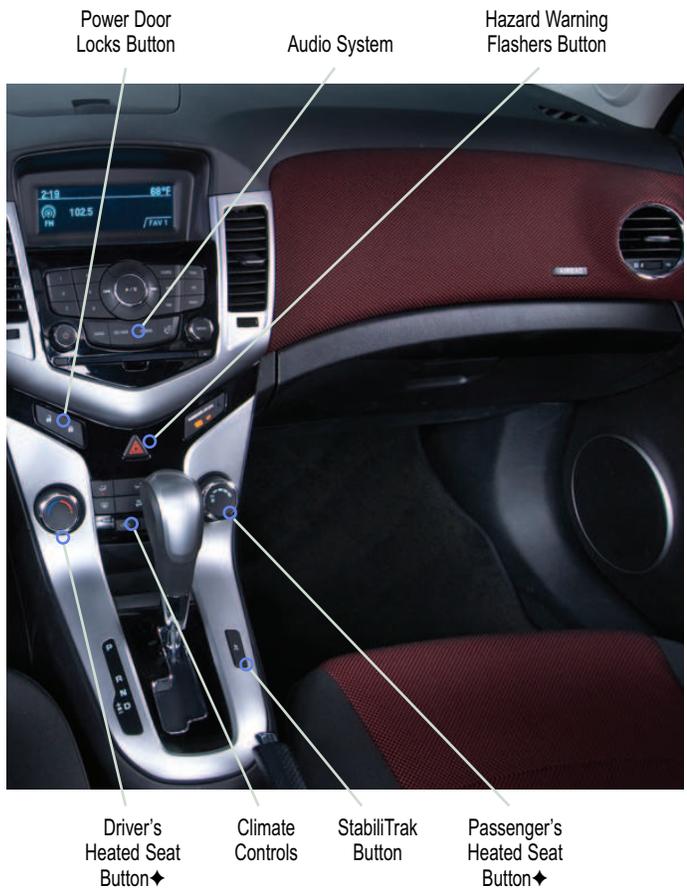

**Note:** Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster, as well as what to do to ensure safety and prevent damage to your vehicle.

See *Instruments and Controls* in your Owner Manual.

## Remote Keyless Entry Transmitter



### **Unlock**

Press to unlock the driver's door. Press again to unlock all doors.

### **Lock**

Press to lock all doors. The driver's door will not lock when open if the Unlocked Door Anti Lock Out feature is activated.

*Note: The remote lock and unlock settings can be changed in the Vehicle Settings menu by using the audio system controls.*

### **Trunk**

Press and hold to unlock the trunk.

### **Vehicle Locator/Panic Alarm**

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.

### **Remote Vehicle Start**

Use to start the engine from outside the vehicle. See below for more information.

*See Keys, Doors and Windows in your Owner Manual.*

## Remote Vehicle Start

During a remote start, the vehicle's manual climate control system will operate at the same setting as when the vehicle was last turned off or the automatic climate control system will default to a heating or cooling mode depending on outside temperature.

### **Starting the Vehicle**

1. Aim the Remote Keyless Entry transmitter at the vehicle. (Transmitter range depends on operating conditions.)
2. Press and release the  **Lock** button on the transmitter.
3. Immediately press and hold the  **Remote Start** button for at least two seconds. When the vehicle starts, the parking lamps will light and remain on while the engine is running. The vehicle's doors will be locked. The engine will continue running for 10 minutes.
4. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.

Before driving, insert the key in the ignition and turn it to the On position.

*See Keys, Doors and Windows in your Owner Manual.*

## Seat Adjustments

### Manual Driver's Seat



A

B

C

D

#### A. Seat Fore/Aft Adjustment

Lift the handle under the front of the seat to slide the seat forward or rearward.

#### B. Seat Tilt Adjustment

Ratchet the front lever to tilt the seat.

#### C. Seat Height Adjustment

Ratchet the middle lever to raise or lower the seat.

#### D. Seatback Recline Adjustment

Lift the rear lever to recline or raise the seatback.

### Power Driver's Seat ◆




A

#### A. Seat Adjustment

Move the control to move the seat forward or rearward and to raise, lower or tilt the seat.

### Rear Seat

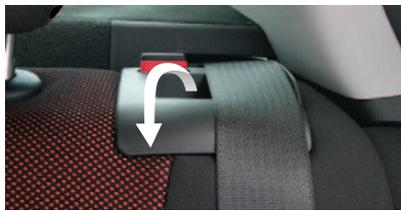

#### Folding the Seatback

- Reach under the safety belt and press the lever on top of the seatback to fold down the seatback. When the red marking is visible, the seatback is unlatched.

*See Seats and Restraints in your Owner Manual.*

## Tilt/Telescopic Steering Wheel

- With the vehicle in Park, push down the lever on the left side of the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

*See Instruments and Controls in your Owner Manual.*

## Power Door Locks

- Press the power door  Lock/ Unlock buttons located on the center of the instrument panel to lock or unlock all doors.
- Pull the door handle to unlock a locked door; pull the handle again to open the door.
- To prevent a rear door from opening from the inside, press the  Rear Door Safety Lock/Rear Window Lockout button located on the driver's door. The button indicator will illuminate.

See *Keys, Doors and Windows in your Owner Manual*.

## Exterior/Interior Lighting

### Automatic Headlamp System



#### Off/On

#### **AUTO Automatic Headlamp System**

Activates the Daytime Running Lamps (DRLs) in the daytime and the headlamps and other exterior lamps at night or when necessary.

#### Parking Lamps

Manual operation of the parking lamps.

#### Headlamps

Manual operation of the headlamps.

#### Fog Lamps

Press to turn the fog lamps on or off.

### Instrument Panel Lighting

 **Instrument Brightness Control**  
Rotate and hold the switch to adjust the instrument panel lighting.

### Rear Dome Lamp



#### Dome Lamp Override/Off

Dome lamp is off at all times.

#### Door Open

Dome lamp turns on when a door is open.

#### On

Turn on the dome lamp.

See *Lighting in your Owner Manual*.

## Climate Controls



### Recirculation Mode

The Recirculation Mode can help to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. It is not available while the Defog or Defrost Mode is selected. When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.


### Automatic Operation◆

1. Press **AUTO**.
2. Set the temperature. Allow time for the system to automatically reach the desired temperature.

**Note:** When outside temperature and vehicle temperature are cold, fan speed will not increase until warmer air is available.

See *Climate Controls* in your Owner Manual.

## Audio System

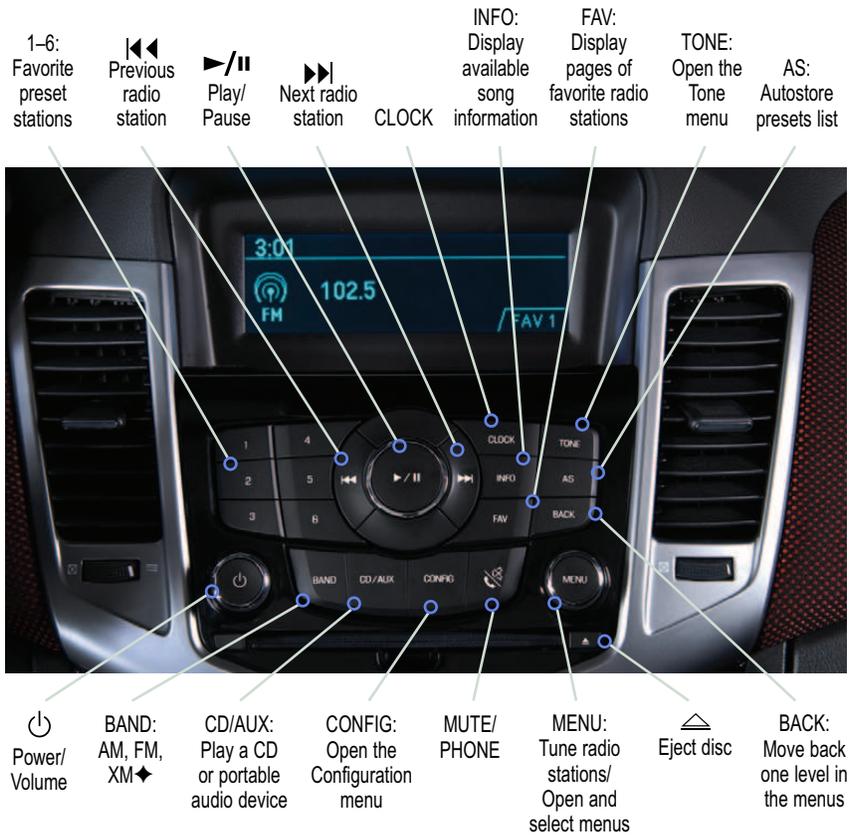

See Infotainment System in your Owner Manual.

## Audio System

*Note: Avoid extended searching for specific items or configuring system settings while driving.*

### Setting the Time (base audio system)


1. Turn on the radio.
2. Press the **CLOCK** button; or press the **CONFIG** button, turn the **MENU** knob to highlight Time and Date Settings, and then press the knob to select it.
3. Turn the **MENU** knob to highlight the desired time or date item; press the knob to select it.
4. Turn the **MENU** knob to change the value; press the knob to confirm the set value.
5. Press the **←BACK** button to exit each menu.

### Storing Favorite Stations

Radio stations from all bands (AM, FM or XM) can be stored in any order on up to six pages of favorites.

1. Tune in the desired radio station.
2. Press the **FAV** button to display the page where the station is to be stored.
3. Press and hold one of the six numeric pushbuttons until the station is heard, indicating it is stored.
4. Repeat the steps for each pushbutton on each page.

### Portable Audio Devices

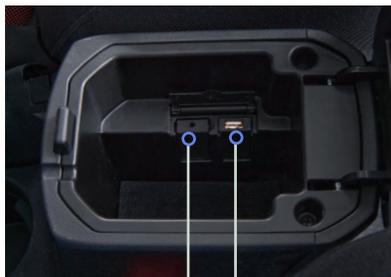

A B

A 3.5mm auxiliary input jack (A) and a USB port (B) are located in the center console.

A portable audio device connected to the auxiliary input jack can be controlled only by using the portable device controls. To optimize speaker volume, fully increase the volume level of the portable device.

Compatible devices connected to the USB port can be controlled by the audio system. **Not all devices may be supported.** Use the **MENU** knob and the audio steering wheel controls to access various functions and to disconnect a USB device.

*See Infotainment System in your Owner Manual.*

## Audio Steering Wheel Controls



### + ▸ - Volume

Press + or - to adjust the volume.

### ▴ ▾ Next/Previous

Rotate up or down to go to the next or previous favorite radio station, CD track, or MP3 file.

### SRC Source

Press to select an audio source.

### 📞 Mute/End Call

Press to interact with the OnStar® or Bluetooth system.

### 📞 End Call/Mute

Press to end or reject an OnStar or Bluetooth call.

Press to mute the vehicle speakers.

*See Infotainment System in your Owner Manual.*

## Bluetooth® System

The in-vehicle Bluetooth system allows users with a Bluetooth-enabled cell phone to make and receive hands-free calls using the vehicle's audio system, microphone and controls. The Bluetooth-enabled cell phone must be paired with the in-vehicle Bluetooth system before it can be used in the vehicle. Not all phones will support all functions.


Visit [www.gm.com/bluetooth](http://www.gm.com/bluetooth) for more information.

*See Infotainment System in your Owner Manual.*

## Driver Information Center/Personalization

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

### DIC Controls

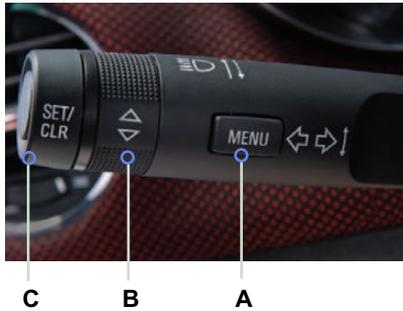

#### A. MENU

Press to display the:

- **Vehicle Information menu** (units, tire pressure, remaining oil life, battery voltage, blank screen)
- **Trip/Fuel menu** (trip odometers, fuel range, average fuel economy, average vehicle speed, fuel used, digital speedometer, OnStar Turn-by-Turn guidance, blank screen)

#### B.


Rotate the switch to scroll through the items of each menu

#### C. SET/CLR

Press the button on the end of the lever to set or clear a menu item or warning message. Some urgent messages cannot be cleared from the DIC display

### Vehicle Personalization

Some vehicle features can be customized by using the audio controls and menus. Personalization menus may include climate and air quality, comfort and convenience, collision/detection systems, languages, lighting, power door locks, remote lock/unlock/start, and factory settings.

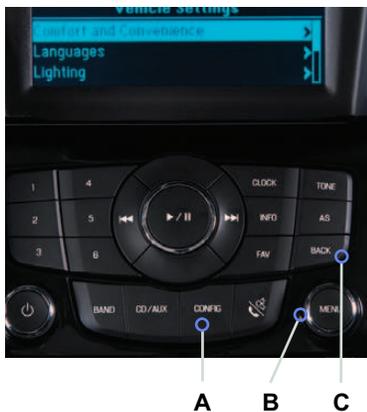

1. Press the **CONFIG** button (A) to enter the System Configuration menu.
2. Turn the **MENU** knob (B) to highlight Vehicle Settings; press the knob to select it.
3. Turn the **MENU** knob to highlight the desired Settings menu; press the knob to select it.
4. Turn the **MENU** knob to highlight the desired item in the menu; press the knob to select it.
5. Turn the **MENU** knob to highlight the desired selection; press the knob to select it and move back to the last menu.
6. Press the **←BACK** button (C) to move back within a menu and to exit each menu.

See *Instruments and Controls* in your Owner Manual.

## Cruise Control



### Setting Cruise Control

1. Press the **On/Off** button. The Cruise Control symbol will illuminate in white in the instrument cluster.
2. When traveling at the desired speed, rotate the **SET-** switch down to set the speed. The **Cruise Control** symbol will illuminate in green in the instrument cluster.

### Adjusting Cruise Control

#### RES+ Resume/Accelerate

Rotate the switch up to resume a set speed.

When the system is active, rotate the switch up to increase speed.

#### SET- Set/Coast

When the system is active, rotate the switch down to decrease speed.

#### Cancel

Press to cancel the cruise control but retain the set speed in memory.

Pressing the brake pedal or clutch pedal (manual transmission only) also will cancel the cruise control.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

*See Driving and Operating in your Owner Manual.*

## Ultrasonic Rear Parking Assist

Detected objects are indicated by audible beeps when the vehicle is in Reverse. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 12 in. (30cm), the beeps are continuous. The system operates only at speeds less than 5 mph.

- To turn the system on/off, open the Collision Detection menu in the Vehicle Settings menu by using the audio system controls.
- When the system is on, a beep sounds when shifting into Reverse.

**Note:** The system may be disabled if dirt, snow or ice builds up on the sensors. Keep the vehicle clean for proper operation.

*See Driving and Operating in your Owner Manual.*

## Turn/Lane Change Signals

- To signal a lane change, raise or lower the turn signal lever until the indicator arrow starts to flash; then release the lever. The turn signal will flash automatically three times.
- To signal a turn, raise or lower the lever all the way up or down.

*See Driving and Operating in your Owner Manual.*

## Windshield Wipers



**2 High Speed**

**1 Low Speed**

 **Intermittent**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

 **Off**

 **Mist**

Single wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

*See Instruments and Controls in your Owner Manual.*

## Sunroof



A

B

**A.  Express Open/  Close**

Fully press the top of the switch to express open the sunroof. Gently press and hold the switch to partially open the sunroof.

Fully press the bottom of the switch to express close the sunroof. Gently press and hold the switch to partially close the sunroof.

**B.  Tilt/  Close**

Press the top of the switch to tilt the sunroof.

Press the bottom of the switch to close the sunroof.

*See Keys, Doors and Windows in your Owner Manual.*

## Sun Visors

- To block the glare of the sun while driving, detach the driver-side sun visor from the center mount and slide it side-to-side along the visor rod.

*See Keys, Doors and Windows in your Owner Manual.*

## Automatic Transmission



### Driver Shift Control

Driver Shift Control (DSC) allows the driver to shift gears manually. This feature can be used to drive the vehicle in a sportier manner or to downshift when driving on a downhill grade to provide engine braking.

1. Move the shift lever to the Manual (M) position.
2. Tap the shift lever forward (+) to upshift or rearward (-) to downshift. The current gear will be displayed in the Driver Information Center.

If vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will downshift automatically.

*See Driving and Operating in your Owner Manual.*

## StabiliTrak®/Traction Control Systems



The traction control system limits wheel-spin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

### Turning the Systems Off/On

- To turn off traction control, press the  **StabiliTrak/Traction Control Off** button. The  **Traction Control Off** message will display in the Driver Information Center. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.
- To turn off both traction control and StabiliTrak, press and hold the button. The  **Traction Control Off/StabiliTrak Off** light will illuminate in the instrument cluster.
- Press the button again to turn on both systems.

*See Driving and Operating in your Owner Manual.*

## Tires

### Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of the vehicle's tires by illuminating the  **Low Tire Pressure** warning light on the instrument cluster. The warning light will remain on until the tire pressure is corrected. **Current tire pressures can be displayed using the Driver Information Center controls.** The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch.

During cooler weather, the low tire pressure warning light may appear when the vehicle is first started and then turn off as the vehicle is driven. This may be an early indicator that the tire pressures are getting low and the tires need to be inflated to the proper pressure.

**Note:** *The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance. It is the driver's responsibility to maintain correct tire pressures.*

*See Vehicle Care in your Owner Manual.*

## Engine Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and illuminates the  **Change Engine Oil** light in the instrument cluster when it's necessary to change the engine oil and filter. The Oil Life System should be reset to 100% only following an oil change.

### Resetting the Oil Life System

1. Turn the ignition to the On position, but do not start the engine.
2. Press the **MENU** button to display the Vehicle Information menu.
3. Rotate the  switch to view Remaining Oil Life.
4. Press the **SET** button until 100% is displayed.
5. Turn off the ignition.

*See Vehicle Care in your Owner Manual.*

## Roadside Assistance

1-800-CHEV-USA  
(1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program, which provides roadside service for 5 years/100,000 miles at no expense to you. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of technically trained advisors who are available 24 hours a day, 365 days a year, to provide minor repair information, contact a service provider or make arrangements to tow your vehicle to the nearest Chevrolet dealer.

## OnStar®

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

For more information about OnStar services, press the OnStar button, refer to the OnStar Owner Guide, call 1-888-466-7827 or visit [onstar.com](http://onstar.com).

## Chevrolet Owner Center

The Chevrolet Owner Center, a complimentary service for Chevrolet owners, is a one-stop resource designed to enhance your Chevrolet ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at [www.gmownercenter.com/chevrolet](http://www.gmownercenter.com/chevrolet).

### Always demand genuine GM Parts

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2010 General Motors. All rights reserved.



20987252 A