

2013


Cadillac

XTS

CONVENIENCE/PERSONALIZATION GUIDE

Review this guide for an overview of some important features in your Cadillac XTS. Some optional equipment (denoted by ♦) described in this guide may not be included in your vehicle. More detailed information can be found in your Owner Manual.

Instrument Panel

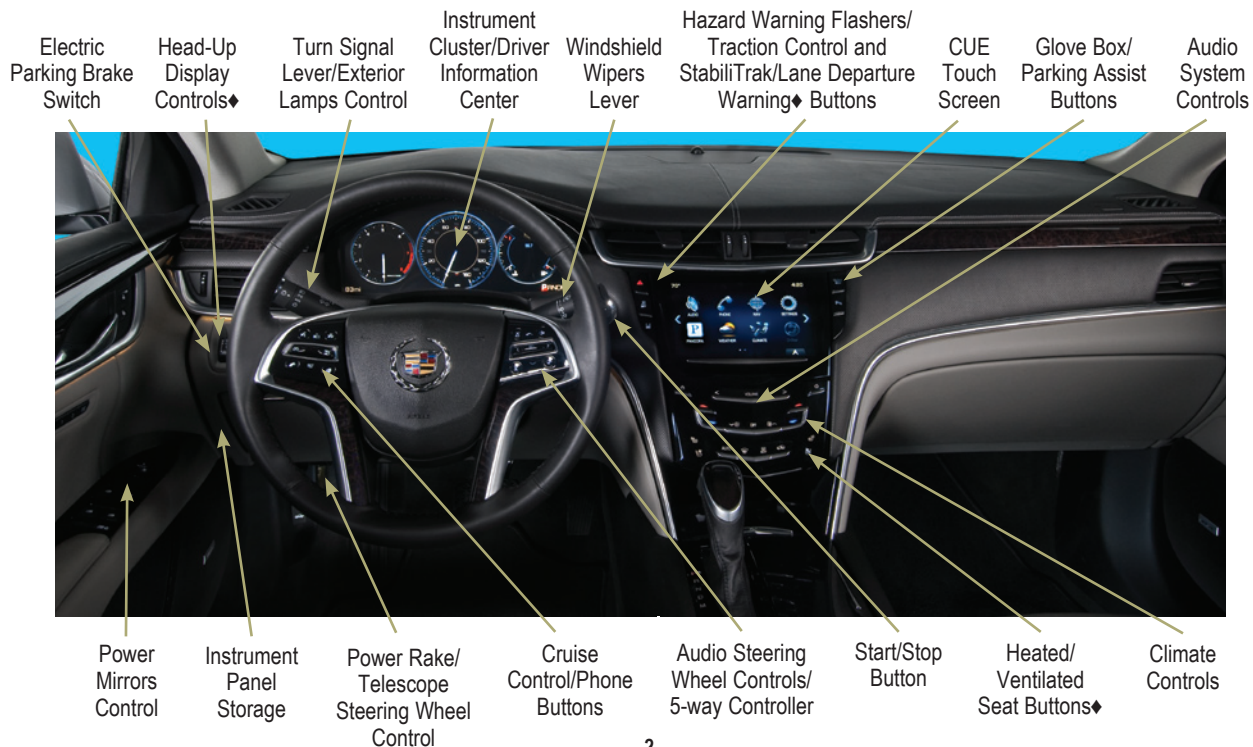

Instrument Cluster



Balanced configuration shown

Cluster Display Zones



Use the 5-way controller on the right side of the steering wheel to navigate and select between the available display zones in each cluster configuration.

Uplevel Cluster Configurations♦

1. Use the 5-way controller on the steering wheel to find the Settings page in one of the display zones on the cluster.
2. Press **SEL (Select)** to enter the Settings menu.
3. Scroll ∇ down to highlight Display Layout; press **SEL**.
4. Scroll $\wedge$ up or ∇ down to highlight one of four reconfigurable displays; press **SEL**.
5. Press $\leftarrow$ to exit the menu.

See Instruments and Controls in your Owner Manual.

Driver Information Center



The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information. The default DIC Info Displays include a digital speedometer, trip odometers, fuel range, average fuel economy, compass, oil life, and tire pressure. Additional Info Displays are available.

Info Pages Menu

1. Use the 5-way controller on the right side of the steering wheel to find the Settings page in one of the display zones on the display.
2. Press **SEL** to enter the Settings menu.
3. Scroll  down to highlight Info Pages; press **SEL**.
4. Scroll  up or  down to move through the list of info displays.
5. Press **SEL** to select or deselect a display item.

See Instruments and Controls in your Owner Manual.

Head-Up Display◆

The Head-Up Display (HUD) displays some operating information onto the windshield, reducing the need to look away from the road. The HUD controls are located on the left side of the instrument panel.



Press up or down to adjust the position of the image. It cannot be adjusted side-to-side.



Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Press up or down to brighten or dim the display.

Hold down to turn off the display.

See Instruments and Controls in your Owner Manual.

Steering Wheel Controls

Cruise Control

 **On/Off**

SET– Set/Coast

Press down the control bar to set the speed. If active, press lightly to decrease speed by 1 mph; press fully to decrease speed by 5 mph.

RES+ Resume/Accelerate

Press up the control bar to resume a set speed. If active, press lightly to increase speed by 1 mph; press fully to increase speed by 5 mph.

 **Cancel**

Press to cancel cruise control without erasing the set speed.

 **Follow Distance Gap◆**

Press to select a following gap time setting of Far, Medium, or Near.

See Driving and Operating in your Owner Manual.

Voice Recognition

 **Push to Talk**

Press to interact with the OnStar or Bluetooth system.

 **End Call/Mute**

Press to end/reject a call or mute the audio system.

Heated Steering Wheel◆

 **On/Off**

See Instruments and Controls in your Owner Manual.



5-Way Controller

 **Left/Right**

Press to navigate to the left or right cluster display or to toggle to the next or previous menu option.

 **Up/Down**

Press the control bar up or down to scroll through a menu.

SEL Select

Press to select a highlighted menu item.

Audio Controls

 **Volume**

Press + or – to increase or decrease the volume.

 **Next/Previous**

Press  up or  down to select the next or previous favorite radio station, track, or file.

See Instruments and Controls in your Owner Manual.

Touch Screen and Controls




The controls use capacitive technology – simply touch the icon/text to access a feature or adjust a function.

See your CUE System Owner Manual.

CUE System Menus

CUE offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access the following items.

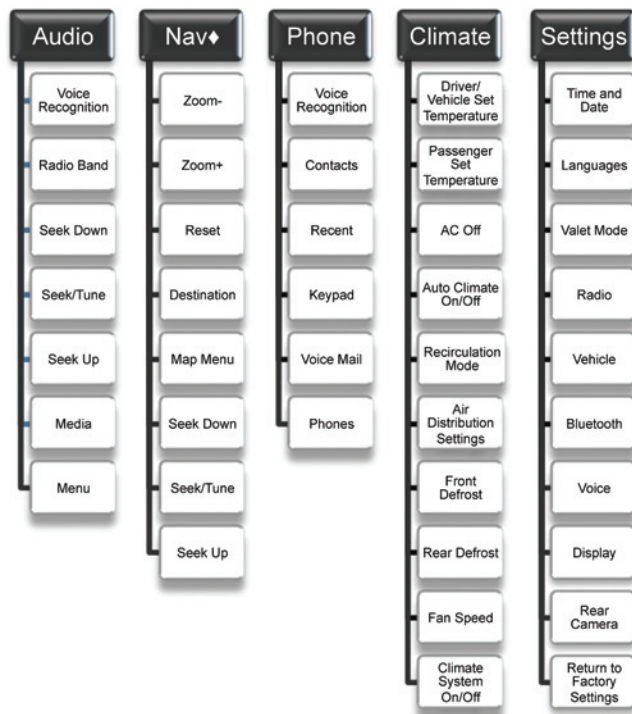

See your CUE System Owner Manual.

Interacting with the CUE System

To make interactions simple and safe, use the following gestures on the CUE touch screen just as you would on a smartphone.

Tap  Tap an item on the screen to perform the desired function.

Drag  Touch an item on the screen and drag your finger along the screen while holding down on the item.

Nudge  Press the desired item and move your finger in an up/down or side-to-side motion without releasing your finger. When your finger is removed, the item stops moving.

Flick  Press anywhere within a list or page and move your finger rapidly in an up/down or side-to-side motion, releasing from the screen while your finger is still moving.

Press and Hold  Press and hold an item.

Pinch  Place two fingers on the screen and bring them together in a pinching motion.

Spread  Place two fingers on the screen and spread them apart.

Double Tap  Tap an item twice on the screen quickly.

See your CUE System Owner Manual.

CUE System Features

Note: Avoid engaging in extended searching for specific items or configuring system settings while driving.

Setting the Time

1. Touch Settings on the home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch + or – to adjust the hours, minutes, and AM or PM.
5. Touch **< BACK** to exit the menu.

Storing Favorite Stations

Radio stations from all bands (AM, FM or XM♦) can be stored, in any order, on up to six pages of favorites.

1. Tune in the desired radio station.
2. Touch FAV to display the desired favorites page.
3. Touch and hold one of the favorite screen buttons until a beep is heard, indicating it is stored.
4. Repeat the steps to store another favorite station.

CD Player

The CD player is located in the glove box.

- ▶ Touch **CD Media** until CD is displayed to play a disc.

Portable Audio Devices

A USB port is located in the storage compartment in the center console.

- ▶ Connect an iPod™, iPhone™, MP3 player, a USB flash drive or a USB mass storage device to the USB port. CUE will read the connected device, build a list of voice commands, and fill in missing song information and album graphics. Search for music on-screen or by voice commands.

PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres (a slight delay may occur when loading a song or changing a station).

- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ If you like a song, you can say “Thumbs up” using voice recognition, or touch the Thumbs Up screen button.

Voice Recognition

Control the music source and make phone calls hands-free using the enhanced voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will say "Please say a command," followed by a beep.
3. After the beep, say what you want it to do.

- **Hands-free calling:**

Example command: "Call Amanda" or "Dial 555-1212"

- **Connected music device search:**

Example command: "Play artist Van Halen"

Example command: "Play song 'Dance the Night Away'"

- **Radio control:**

Example command: "Tune FM 104.3" or "Tune XM Classic Vinyl"

Example command: "Tune Pandora" (Pandora app required)

- **Help:**

- Say "Help" for voice recognition assistance.
- To start speaking immediately without waiting for the beep, press the **Push to Talk** button twice.

See your CUE System Owner Manual.

Bluetooth® System

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions.

Pair a Phone using Voice Recognition

1. Press the **Push to Talk** button.
2. After the beep, say "Pair." The system will search for your phone. A code appears on the display.
3. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
4. Enter the four-digit code that appears on the touch screen or confirm a six-digit code on the phone.
5. If your phone prompts you to accept the connection or phone book download, click "yes" and always allow.

Device List

Up to 10 devices may be paired with the in-vehicle Bluetooth system. To switch devices using voice recognition:

1. Press the **Push to Talk** button.
2. Say "Device list" or "Select device."
3. Select from the list of paired phones/devices.

Visit www.gm.com/bluetooth and see your CUE System Owner Manual.

Vehicle Personalization



Some vehicle features can be customized using the controls on the audio system. The Vehicle Settings menu may include Climate and Air Quality; Collision/Detection Systems; Comfort and Convenience; Lighting; Power Door Locks; and Remote Locking, Unlocking and Starting.

1. Touch Settings on the home page.
2. Touch Vehicle Settings.
3. Touch the desired menu item.
4. Touch the desired feature and setting.
5. Touch **< BACK** to exit each menu.

See Instruments and Controls in your Owner Manual.

Navigation◆



Enter a destination using the Single Line Destination feature. Approximate your desired destination and CUE's auto-fill function will enter the necessary information.

1. Touch Navigation on the home page.
2. Touch Destination.
3. Type the address, intersection or road.
4. Touch Go.
5. Select the desired name from the generated list.
6. Touch Go.

See your CUE System Owner Manual.

Remote Keyless Entry Transmitter



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door only or all doors.

Press and hold to lower all windows. ♦

Note: Use the touch screen to open *Vehicle Settings > Remote Locking, Unlocking, Starting to change the Remote Lock and Unlock settings.*



Remote Vehicle Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 13.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for three seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds or until the button is pressed again.



Trunk Release

Press and hold to open the trunk.

Door Key

Press the button (A) to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door and rear seatbacks.



Keyless Access System

The Keyless Access System enables operation of the doors, ignition and trunk without removing the transmitter from your pocket or purse. The system will recognize the transmitter when it is within three feet of the doors or trunk.

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock sensor on the driver's door handle to unlock the driver's door; press it again within five seconds to unlock all doors.
- ▶ Press the lock sensor on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.



Keyless Locking

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ All doors will lock automatically after a short delay, if passive locking is turned on.
- ▶ Press the lock sensor on any door handle to lock all doors immediately.

Note: Use the touch screen to open *Vehicle Settings > Remote Locking, Unlocking, Starting to change the Keyless Locking and Unlocking settings.*


See *Keys, Doors and Windows* in your Owner Manual.

See *Keys, Doors and Windows* in your Owner Manual

Pushbutton Start

Start

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the **START/STOP** button to start the engine. The green indicator on the button will illuminate.

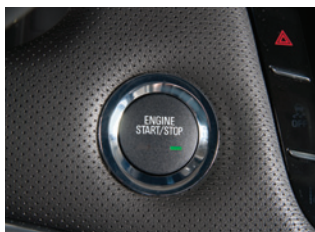

Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the depression below the Accessory Power Outlet in the center console lower storage area to enable the engine to start.

Cell phone chargers may interfere with the operation of the Pushbutton Start System and should not be plugged in when starting or turning off the engine.

Stop/Off

- ▶ Shift to Park and press the **START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

Accessory

- ▶ With the engine off and the brake pedal NOT depressed, press the **START/STOP** button to place the ignition system in the Accessory mode. The yellow indicator on the button will illuminate.

See *Driving and Operating in your Owner Manual*.

Adaptive Remote Start

Starting the Vehicle

1. Press and release the  **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the  **Remote Start** button for at least two seconds.

When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.
3. Before driving, press the brake pedal and then press the **START/STOP** button to turn on the ignition.

Canceling a Remote Start

- ▶ Press and hold the  **Remote Start** until the parking lamps turn off.

Climate Control Operation

During a remote start, the automatic climate control system will default to a heating or cooling mode, depending on the outside temperature. Once the ignition is turned on, the system will operate at the same setting as when the vehicle was last turned off.

See *Keys, Doors and Windows in your Owner Manual*.

Power Door Locks/Safety Locks

- ▶ Press the power door **Lock/Unlock** button on the driver's door to unlock or lock all doors.
- ▶ Pull the inside door handle to unlock a door; pull the handle again to open the door.
- ▶ Press the **Safety Locks** button on the driver's door to prevent the rear doors from opening from the inside and to disable the rear power windows. The button indicator will illuminate when activated.

See Keys, Doors and Windows in your Owner Manual.

Trunk Release

- ▶ To open the trunk from inside the vehicle, press the **Trunk Release** button on the driver's door.
- ▶ To open the trunk from outside the vehicle, press the touch pad above the license plate. The vehicle must be unlocked or the transmitter must be within range of the trunk.



See Keys, Doors and Windows in your Owner Manual.

Power Mirrors

Power Mirror Adjustment

- ▶ Move the power mirror selector switch to the Left (L) or Right (R) position to select the driver's or passenger's mirror; use the four-way control to adjust the mirror.



Reverse Tilt Mirror

The Reverse Tilt Mirror will tilt down the driver and/or passenger mirrors to improve visibility near the rear wheels when the vehicle is shifted into Reverse.

Note: Use the touch screen to open Settings > Vehicle > Comfort and Convenience to change the Reverse Tilt Mirror settings.

See Keys, Doors and Windows in your Owner Manual.

Valet Mode

- ▶ To lock/unlock various features of the vehicle, select Valet Mode under Vehicle Settings and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

See your CUE System Owner Manual.

Enhanced Safety Strategy Features◆

The driver assistance systems are based on a “control and alert” strategy that helps identify potential collision situations and intervenes when a collision threat appears more imminent, employing layers of visual, audible and tactile (vibration) alerts, depending on the alert feature.

Driver Awareness Package

Lane Departure Warning – When crossing a detected lane marking without using a turn signal, flashes a visual alert on the instrument panel, and pulses the left or right side of the driver’s seat or beeps sound.

- ▶ Press the  **Lane Departure Warning** button on the center of the instrument panel to turn the system on or off.

Forward Collision Alert – When approaching a vehicle directly ahead too quickly, flashes a visual alert on the windshield, and pulses the driver’s seat or beeps sound.

- ▶ Press the  **Collision Alert** button on the left side of the steering wheel to set the alert timing.

Side Blind Zone Alert – When a vehicle is detected in a side blind spot area, displays a warning symbol on the side mirror.

- ▶ To turn off the system, see the Settings > Vehicle > Collision/Detection Systems menu. The system turns on automatically every time the vehicle is started.

Rear Cross Traffic Alert – Warns of traffic coming in either direction by displaying a visual alert on the touch screen from the Rear Vision Camera, and pulses the left or right side of the driver’s seat or beeps sound.

- ▶ Press the  **Parking Assist** button on the center of the instrument panel to turn system on or off, or see the Collision/Detection Systems menu under Vehicle Settings.

Driver Assist Package

Front and Rear Automatic Braking – Automatically applies the brakes if it detects that the vehicle is backing up or approaching an object too fast to avoid a collision.

- ▶ Press the  **Parking Assist** button on the center of the instrument panel to turn Rear Automatic Braking on or off.

Adaptive Cruise Control – If a vehicle is detected ahead, the vehicle will accelerate or moderately brake to maintain the selected following gap. If driver action is required, the system pulses the driver’s seat or beeps sound.

- ▶ Press the  **Follow Distance Gap** button on the left side of the steering wheel to set a following gap.

Automatic Collision Preparation – Prepares the brakes or applies the brakes if an emergency collision appears immediate or the driver does not react to previous alerts.

See Driving and Operating in your Owner Manual.

Exterior Lighting



Exterior Lighting

 **Off/On**

AUTO Automatic Light Control

Activates the Daytime Running Lamps (DRLs) in the daytime and the headlamps and other exterior lamps at night or when necessary.

 **Parking Lamps**

 **Headlamps**

Adaptive Forward Lighting (AFL)◆

The AFL system pivots the headlamps left or right in the direction of travel. While continuously traveling straight, headlamp range changes based on vehicle speed.

Note: The AFL system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

Windshield Wipers



2 Fast wiper

1 Slow wiper

 **Intermittent**

When in Rainsense mode, rotate the band to adjust the delay between wiper. The wipers activate more often as the band is moved up.

 **Off**

 **Mist**

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

Note: When entering an automatic car wash, turn off the automatic Rainsense windshield wipers◆. If Rainsense is active, the transmission is in Neutral and vehicle speed is very slow, the windshield wipers will stop at the base of the windshield to protect the wiper arms.

See Instruments and Controls in your Owner Manual.

Memory Seats◆



Set Memory Positions

1. Adjust the driver's seat, power outside mirrors and the power steering column to the desired positions.
2. Press and hold the **SET** button and button **1** on the driver's door until a beep sounds.
3. Repeat the steps using button **2** for a second driver.

Set Exit Position

1. Adjust the driver's seat, power outside mirrors and the power steering column to the desired positions.
2. Press and hold the **SET** button and the  button on the driver's door until a beep sounds.

Recall Positions

- Press and hold button **1**, **2** or  until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

See Seats and Restraints in your Owner Manual.

UltraView Sunroof◆



Open/Close the Sunshade


- Press the rear or front of the  **Sunshade** switch to express-open or express-close the sunshade.

Open/Close the Sunroof

- Press and hold the front of the  **Sunroof** switch to vent the sunroof.
- Press the rear of the  switch to express-open the sunroof to the comfort position.
- Press the front of the  switch to express-close the sunroof.

See Keys, Doors and Windows in your Owner Manual.

Automatic Transmission Tap Shift

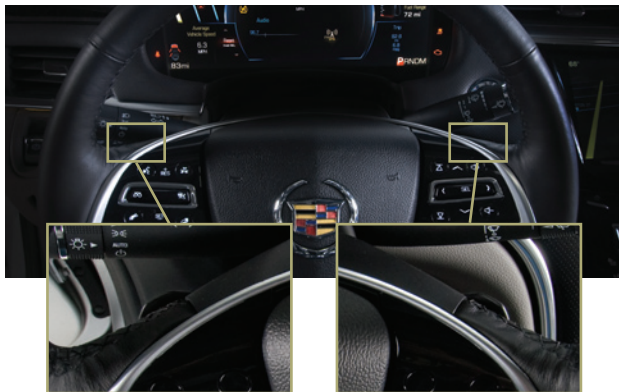

The 6-speed automatic transmission has a Tap Shift mode that allows you to shift gears similar to a manual transmission.

Using Tap Shift


1. Move the shift lever to the **M** (Manual Mode) position.
2. Using the buttons on the back of the steering wheel, tap the left (–) button to downshift and the right (+) button to upshift. The current gear selection will be shown in the DIC and HUD.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will automatically shift to 1st gear.

Note: Changing to the Manual Mode also changes the Magnetic Ride Control settings.

See Driving and Operating in your Owner Manual.

StabiliTrak®/Traction Control Systems

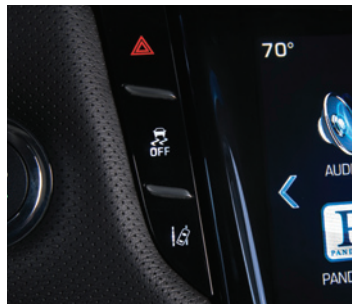

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turning the Systems Off/On

- Press the  **Traction Control/StabiliTrak** button on the center of the instrument panel to turn off traction control. The  **Traction Control Off** light on the instrument cluster will illuminate.
- Press and hold the button to turn off StabiliTrak. The  **StabiliTrak Off** light on the instrument cluster will illuminate.
- Press the button again to turn on either system.

See Driving and Operating in your Owner Manual.

Electric Parking Brake

- ▶ To apply the parking brake, pull the **(P) Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.

See Driving and Operating in your Owner Manual.



Engine Oil Life System

The Engine Oil Life System calculates oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center when it's necessary to change the oil and filter. Reset the system to 100% only following an oil change.

Resetting the Oil Life System

1. Use the 5-way controller on the right side of the steering wheel to view the Settings page; press the **SEL** button.
2. Scroll to Info Pages; press the **SEL** button.
3. Scroll to Oil Life.
4. Press and hold the **SEL** button until 100% is displayed.

See Vehicle Care in your Owner Manual.

Tires

Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the **(!) Low Tire Pressure** warning light on the instrument cluster. The warning light will remain on until the tire pressure is corrected. Current tire pressures are available in the Driver Information Center Info display. The proper tire pressures for your vehicle are listed on the Tire and Loading Information label, located below the driver's door latch.

During cooler weather, the low tire pressure warning light may appear when the vehicle is first started and then turn off as the vehicle is driven. This may be an early indicator that tire pressures are getting low and the tires need to be inflated to the proper pressure.

Note: The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance. It is the driver's responsibility to maintain correct tire pressures.

Tire Sealant and Compressor Kit♦

The tire sealant and compressor kit can be used to temporarily seal small punctures in the tread area of the tire. The kit is located under the trunk floor. Refer to the kit instructions for complete operating information.

See Vehicle Care in your Owner Manual.

Owner Privileges™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Should you need to ask a question, make a comment, or request additional information, Cadillac Customer Assistance is available anytime.

CADILLAC ONLINE OWNER CENTER

Visit www.gmownercenter.com/cadillac for access to the Cadillac Owner Center, which features online owner manuals, maintenance information, service records, and more.

myCADILLAC and ONSTAR MOBILE APPS

The myCadillac and OnStar RemoteLink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your iPhone® or Android™ device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit **OnStar.com**.

CUE SUPPORT

For information or assistance operating the CUE infotainment system, call 1-855-4-CUE-NOW (1-855-428-3669).

Always demand genuine GM Parts

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2012 by General Motors. All rights reserved.

