



Getting to Know Your

2016 Tahoe/Suburban



www.chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Tahoe or Suburban. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

Instrument Panel

Instrument Panel Illumination Control/Exterior Lamp Control


4WD Control

Integrated Trailer Brake Control

Traction Control and StabiliTrak/Front and Rear Parking Assist/Lane Keep Assist/Hill Descent Control/Adjustable Pedals/Power Assist Step Buttons

Turn Signal/Windshield Wipers Lever

Driver Information Center

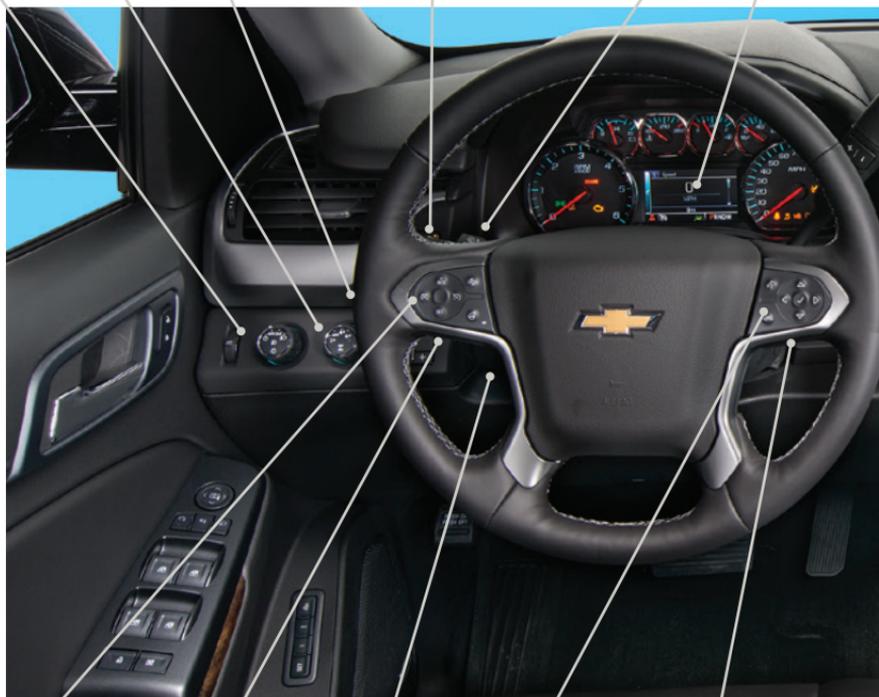

Cruise Control/Collision Alert/Heated Steering Wheel Buttons

Audio Next/Previous Favorite Station Controls (behind steering wheel)

Tilt/Telescopic Steering Wheel Control

Voice Recognition Buttons/Driver Information Center Controls

Audio Volume Controls (behind steering wheel)

Symbols



Low Fuel



Traction Control Off



Lane Keep Assist Warning

BRAKE Brake System



Cruise Control Set



StabiliTrak Active



StabiliTrak Off



Security



Tow/Haul Mode



Lights On Reminder



Airbag Readiness



- | | | | |
|--|-----------------------|---|----------------------|
|  | Check Engine |  | Oil Pressure |
|  | Antilock Brake System |  | Charging System |
|  | Low Tire Pressure |  | Safety Belt Reminder |
|  | Door Ajar |  | Hill Descent Control |

Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner Manual.

Remote Keyless Entry Transmitter (Key Fob)◆

Unlock

Press to unlock the driver's door.
Press again to unlock all doors.

Lock

Press to lock all doors.

Note: Press and hold the Lock/Unlock buttons to automatically fold/unfold the power mirrors◆. To change the Auto Mirror Folding setting, go to Comfort and Convenience in the Vehicle Settings menu.

Liftglass◆

Press twice to open the liftglass.

Power Liftgate◆

Press twice to open or close the power liftgate.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.

Remote Vehicle Start

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash (about 4 seconds) to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes.
- Remote Start can be extended once by repeating the remote start procedure.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.
- The heated/cooled seats◆ will turn on during a remote start (if selected in the Vehicle Settings menu) when outside temperatures warrant.

Note: To change the remote lock, unlock, and remote start settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

Power Liftgate◆

Open/Close the Power Liftgate

- ▶ Press the  Power Liftgate button on the RKE transmitter twice.
- ▶ Press the  Power Liftgate knob on the overhead console.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the liftgate latch to close the liftgate.

Hands-Free Operation◆

- ▶ To open or close the liftgate hands-free, kick your foot straight in and out under the center of the rear bumper. Do not swing your foot side-to-side. The RKE transmitter must be within 3 feet of the liftgate.

Programming the Liftgate Height

1. Turn the **Power Liftgate** knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate latch for 3 seconds. The turn signals will flash when the setting is saved.



See Keys, Doors and Windows in your Owner Manual.

Keyless Entry System◆

The Keyless Entry System enables operation of the doors and ignition without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door being unlocked or the liftgate.

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



Keyless Locking

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

Pushbutton Start◆

Starting the Engine

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine.

Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



Stopping the Engine

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Accessory

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory position.

See Driving and Operating in your Owner Manual.

Power Front Seats

Seat Adjustments



A. Seat Cushion Adjustment

Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Move the rear control fore/aft to increase/decrease lumbar support or up/down to raise/lower the lumbar location.

Set Memory Positions[◆]



1. With the vehicle in Park and the ignition on, adjust the power driver's seat, power adjustable pedals[◆], power outside mirrors[◆], and power tilt/telescopic steering column[◆] to the desired positions.
2. Press and release the **SET** button and then press and hold button **1** on the driver's door until two beeps sound.
3. Repeat the steps using button **2** for a second driver.

Set Exit Position

1. With the vehicle in Park and the ignition on, adjust the power driver's seat, power adjustable pedals power, and power tilt/telescopic steering column[◆] to the desired positions.
2. Press and release the **SET** button and then press and hold the  **Exit** button on the driver's door until two beeps sound.

Recall Positions

- ▶ With the vehicle in Park and the ignition on, press and release button **1** or **2** or the  **Exit** button to recall the stored position.
- ▶ With the vehicle off or not in Park, press and hold button **1** or **2** or the  **Exit** button until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- ▶ To set the Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience > Auto Memory Recall or Easy Exit Options.

See Seats and Restraints in your Owner Manual.

Rear Seats

Folding 2nd-Row Seats

The 2nd-row seats fold and tumble to provide more cargo space and access to the 3rd-row seats.

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Lift the lever on the lower outboard side of the 2nd-row seat. The seatback will fold forward.
3. Lift the lever again to tumble the seat forward.



Power Folding 2nd-Row Seats[◆]

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Press the  **Seat Release** button (A) on the panel behind the rear doors or the  **x2** button (B) in the rear cargo area to fold the seat forward. Press either button again to tumble the seat forward.



Unfolding 2nd-Row Seats

1. Pull down the seat until it latches to the floor.
2. Lift up the seatback until it locks in place.

Folding 3rd-Row Seats

The 3rd-row seats fold to provide more cargo space.

1. Lower the head restraint, unbuckle the safety belt, and make sure nothing is on the seat.
2. Lift the lever on the rear of the seat. The seatback will fold forward.

Unfolding 3rd-Row Seats

- ▶ Pull the strap on the rear of the seat to raise the seatback to the upright position.



Power Folding/Unfolding 3rd-Row Seats[◆]

1. With the vehicle in Park, lower the head restraint, unbuckle the safety belt, and make sure nothing is on the seat.
2. Press and hold the bottom of the  **Seat Release** button (C) in the rear cargo area to fold the seat flat.
3. Press and hold the top of the  button to raise the seatback.

See Seats and Restraints in your Owner Manual.

Driver Information Center

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information and warning messages.

Use the control pad on the right side of the steering wheel to select the Info (includes trip and fuel information), Audio, Phone, Navigation, and Settings menus.



Menu Items

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to move through the menus.
- ▶ Press ✓ to open a menu or select/deselect a setting.

Reset an Item

1. Use the control pad to display the item.
2. Press and hold ✓ to reset or clear the item.

See Instruments and Controls in your Owner Manual.

Customizable Driver Display◆

The Customizable Driver Display on the instrument cluster displays a variety of vehicle system information and warning messages.

Menu Items

Use the control pad on the right side of the steering wheel to view the Info, Audio, Phone, Navigation◆ and Settings menus.



Select and Reset Menu Items

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to move through the menus.
- ▶ Press ✓ to open a menu or select/deselect a setting.
- ▶ Press and hold ✓ to reset or clear an item.

Changing Display Themes

The Customizable Driver Display features three display themes: Standard, Technology, and Media. The style of the display will change depending on the selected theme.

1. Use the control pad to display the Settings menu.
2. Select Display Theme.
3. Select the desired theme.

See Instruments and Controls in your Owner Manual.

Head-Up Display♦

The Head-Up Display (HUD) projects some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.



HUD

Lift up or press down to adjust the position of the image on the windshield. It cannot be adjusted side-to-side.

INFO

Press to select a display view.



Lift up or press down to brighten or dim the display. Hold down to turn off the display.

See Instruments and Controls in your Owner Manual.

Audio Steering Wheel Controls



Push to Talk

Press to answer an incoming call or to use natural voice recognition♦ with the audio, Bluetooth♦ or navigation♦ system. Press and hold to activate voice pass-thru or Siri® Eyes Free♦.

End Call/Mute

Press to end or reject a call. Press to mute/unmute the vehicle speakers.

Next/Previous

With the Audio screen displayed on the DIC, press  or  to seek the previous or next radio station or track.

Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to display the current station or track. Press the top or bottom button again to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station button shown. Volume button is located behind the right side of the steering wheel.

Chevrolet MyLink Radio with 8-Inch* Color Touch Screen

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

The Chevrolet MyLink radio is controlled by using the audio system buttons and touch screen.



Chevrolet MyLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. MyLink enables streaming audio through a smartphone and hands-free voice control. For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit www.chevrolet.com/mylink.

See your Infotainment System Owner Manual.

Chevrolet MyLink Radio with 8-Inch* Color Touch Screen

Setting the Time

1. Touch **Settings** on the home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **BACK** to exit the menu.



Storing Favorites

Up to 60 radio stations from all bands (AM, FM or XM[♦]), media (song, artist, album, and genre with device connected to a USB port), phone contacts and navigation destinations[♦] can be stored in any order.

1. Select the desired radio station, media favorite, navigation destination or contact.
 2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
 3. Touch and hold one of the favorite screen buttons until a beep is heard, indicating it is stored.
 4. Repeat the steps to store another favorite item.
- To change the number of favorites displayed, go to Radio in the Settings menu.

Managing Home Page Icons

The home page icons (A) can be arranged in any order.

1. Press the **Home** button.
2. To enter edit mode, touch and hold the home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.
4. Press the **Home** button to exit edit mode.



Apple CarPlay™[♦]

Apple CarPlay capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. Connect your compatible Apple iPhone to a USB data port in the console front storage bin or inside the console. Use your device's factory-provided USB cable. Aftermarket cables may not work.
2. The  Projection icon will change to Apple CarPlay, depending on the phone. Apple CarPlay may launch automatically upon USB connection. If not, touch the Apple CarPlay icon on the home page.

For more information on using Apple CarPlay, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

See your Infotainment System Owner Manual.

Chevrolet MyLink

Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say “Command please,” followed by a beep.
3. After the beep, say what you want it to do using natural speech.
(Example: “Call Amanda” or “Tune FM 104.3.” Say “Help” for assistance.)

PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres.

- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ Connect your smartphone/device to the system by Bluetooth or, for Apple devices, by a USB cable.
- ▶ Touch the **Pandora** icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

Voice Pass-Thru and Siri® Eyes Free

Voice pass-thru allows access to the voice recognition commands on a paired cell phone; i.e. Siri or Voice Command. For more information, visit www.chevrolet.com/mylink.

- ▶ To activate voice pass-thru, press and hold the  **Push to Talk** steering wheel button.

Text Message Alerts

Text message alerts play a text message over the audio system and allow a response with a preset message. The text messaging feature must be set up when the cell phone is paired. Messages can be viewed on the touch screen only when the vehicle is not moving.

- ▶ Touch  **Text** to view the text message inbox.

See your Infotainment System Owner Manual.

Portable Audio Devices



Accessory power outlets and USB ports are located in several locations in the vehicle to connect portable audio devices.

- ▶ An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Chevrolet MyLink will read the device and build a list of songs. Search for music on-screen or by voice commands.
- ▶ Press the **MEDIA** button to select a portable device as the audio source.

See your Infotainment System Owner Manual.

Bluetooth® System

Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. **Not all devices will support all functions.** Bluetooth streaming audio is available with the MyLink system. For more information, visit my.chevrolet.com/learn.

Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say “Pair phone,” or use the **MENU** knob or the touch screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. Locate Chevrolet MyLink on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, select Always Accept and Allow.

Streaming Audio

With a paired device connected via Bluetooth, press the **MEDIA** button until Bluetooth is displayed on the touch screen to stream audio from the device. Control audio operation using the device controls. For full control of the device, connect it to a USB port.

See your Infotainment System Owner Manual.

Wireless Charging

The Wireless Charging system is located on the storage tray on top of the center console. To check mobile device compatibility, visit my.chevrolet.com/learn. See your phone retailer for details on required phone accessories.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  symbol on the pad, aligned with the rear rib.
4. Move the device slowly until the battery charging symbol displays on the infotainment screen. If not charging, remove the device for 3 seconds, and rotate it 180 degrees.

See your Infotainment System Owner Manual.

OnStar® with 4G LTE

If equipped with OnStar 4G LTE and a Wi-Fi® hotspot, up to seven devices (smartphones, tablets and laptops) can be connected to a reliable, built-in Internet connection.

- ▶ To retrieve the SSID and password for the hotspot, press the  **OnStar Voice Command** button on the rearview mirror, wait for the prompt, and then say “Wi-Fi settings.” The information will be displayed on the screen.

For assistance, press the blue OnStar button or call 1-888-4ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability and system limitations.

◆ *Optional equipment*

See your Infotainment System Owner Manual. 13

Vehicle Personalization

Some vehicle features can be customized using the audio controls and menus or the touch screen buttons.



Changing Vehicle Settings

The Vehicle Settings menu may include Climate and Air Quality, Collision/Detection Systems, Comfort and Convenience, Lighting, Power Door Locks, or Remote Lock/Unlock/Start.

Use the **MENU** knob or the touch screen to:

1. Select **Settings** on the home page.
2. Select **Vehicle**.
3. Select the desired menu item.
4. Select the desired feature and setting. Settings are saved automatically.
5. Select **BACK** to exit each menu.

See Instruments and Controls in your Owner Manual.

Driver Assistance Systems

The driver assistance systems use advanced technologies to help avoid collisions by providing visual and audible alerts under some imminent collision conditions.


Forward Collision Alert – The  Vehicle Ahead indicator will illuminate in green on the instrument cluster when a vehicle is detected and will illuminate in amber when following a vehicle ahead too closely. If your vehicle approaches another vehicle too rapidly, the  will flash, a visual alert will flash on the windshield and the Safety Alert Seat will pulse. See Safety Alert Seat.

- ▶ Press the  **Collision Alert** button on the left side of the steering wheel to set the alert sensitivity to Far, Medium, Near, or Off. The setting is displayed in the Driver Information Center.



Safety Alert Seat – The driver's seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

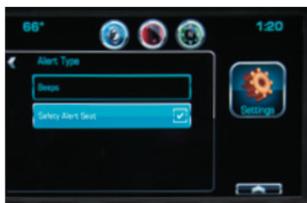

See Driving and Operating in your Owner Manual.

Driver Assistance Systems

Lane Keep Assist with Lane Departure Warning♦ – The  Lane Keep Assist indicator is green on the instrument cluster when a lane marking is detected. The system may assist by gently turning the steering wheel and display an amber  if the vehicle approaches a detected lane marking without using a turn signal in that direction. It may also provide a Lane Departure Warning alert by flashing an amber  and pulsing the left or right side of the Safety Alert Seat♦ as the lane marking is crossed.

- ▶ Press the  **Lane Keep Assist** button on the left side of the instrument panel to turn the system on or off.

Rear Vision Camera – Provides a view directly behind the vehicle when backing up.

- ▶ To turn the Rear Vision Camera Guidelines or Rear Park Assist Symbols on or off, go to Settings > Rear Camera.

Rear Cross Traffic Alert♦ – Warns of traffic coming in either direction behind the vehicle by displaying a visual alert on the Rear Vision Camera display and pulses the left or right side of the Safety Alert Seat.♦ See Safety Alert Seat.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

Front Automatic Braking♦ – Prepares the brakes or applies the brakes and slows the vehicle if an emergency collision appears imminent or the driver does not react to previous alerts.

Side Blind Zone Alert/Lane Change Alert♦ – While driving, the Side Blind Zone Alert/Lane Change Alert displays a warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

Front and/or Rear Parking Assist♦ – During low-speed parking maneuvers, the system provides “distance to closest object” information in the Driver Information Center and a caution symbol on the Rear Vision Camera display. When the vehicle should be stopped immediately to avoid a collision, a continuous audible tone sounds or the Safety Alert Seat pulses. See Safety Alert Seat.

- ▶ To turn the system on or off, press the  **Parking Assist** button on the left side of the instrument panel.



See Driving and Operating in your Owner Manual.

Automatic Climate Controls

- AUTO: Driver's Temp. Control/ Automatic Operation
- A/C/Air Conditioning Control/ Recirculation Mode
- Vent Mode/ Floor Mode
- Fan Speed Control/ On/Off
- Defog Mode/ Bi-level Mode
- Defrost Mode/ Rear Window/ Outside Mirror Defogger
- SYNC: Passenger's Temp. Control/ Link setting to driver's setting



- Driver's Heated/ Cooled Seat Buttons
- Rear Power Control
- AUTO: Rear Automatic Operation
- Rear Fan Speed
- Rear Air Delivery
- Rear Temperature
- R CTRL
- Passenger's Heated/ Cooled Seat Buttons

Automatic Operation

1. Press **AUTO**.
2. Set the temperature. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature.

If the air delivery mode or fan speed is manually adjusted, automatic operation is turned off.

Sync Temperature Settings

- ▶ Press **SYNC** to link the passenger's and rear climate temperature settings to the driver's setting. When the passenger's or rear climate setting is adjusted, the different temperature setting is displayed.

Rear Climate Controls


- ▶ Press the **Power** button to turn the rear climate controls on/off.
- ▶ Press the **R CTRL** button to lock out the rear controls. Rear climate control operation is controlled using the front controls.

See Climate Controls in your Owner Manual.

Wipers and Washers

Windshield Wipers

Rotate the band on the lever to activate the wipers.

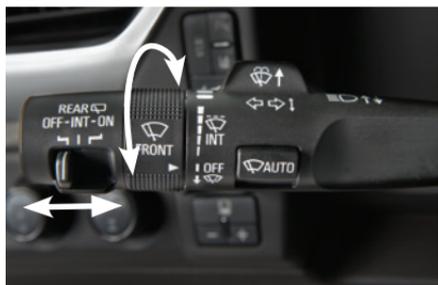

Rear Wiper

Slide the switch to activate the rear wipers.

 **Fast Wipes**

 **Slow Wipes**

 **INT Intermittent**

Rotate the band to adjust the delay between wipers. The wipers activate more often as the band is rotated upward.

 **AUTO – Rainsense™ On/Off**

Press to have the wipers operate automatically when moisture is detected on the windshield. Rotate the INT band to adjust the sensitivity setting.

OFF

 **Single Wipe**

 **Washer Fluid**

Push the paddle forward to spray washer fluid on the windshield.

OFF

INT Intermittent

ON

See Instruments and Controls in your Owner Manual.

Lighting

Dome Lamps



OFF

Press to turn off the lamps at all times, even when a door is open.

DOOR

Press to have the lamps turn on automatically when a door is open.

ON

Press to turn on all dome lamps.

Instrument Panel Lighting



 **Instrument Panel Brightness**

Rotate the thumbwheel on the left side of the instrument panel to adjust the instrument panel lighting.

See Lighting in your Owner Manual.

Cruise Control

Setting Cruise Control

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.

Adjusting Cruise Control

RES+ Resume/Accelerate

Press to resume a set speed.

When the system is active, press once to increase speed 1 mph; press and hold to continue increasing speed.

SET- Set/Coast

When the system is active, press once to decrease speed 1 mph; press and hold to continue decreasing speed.

Cancel

Press to cancel the cruise control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the cruise control.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.



Adaptive Cruise Control*

Adaptive Cruise Control enhances traditional cruise control by maintaining a driver-selected following gap between your vehicle and a vehicle detected directly ahead. Once a speed is set, the vehicle will maintain the selected gap distance by braking or accelerating.

When a slower vehicle is detected ahead, the  Vehicle Ahead symbol is displayed and the vehicle brakes moderately to maintain the selected following gap. If driver action is required to apply sufficient braking, a visual alert flashes on the windshield and the Safety Alert Seat* pulses.

Selecting the Following Gap

- ▶ Press the  **Follow Distance Gap** button (or  **Collision Alert** button*, if equipped) on the left side of the steering wheel to set a following gap of Far, Medium or Near.

See Driving and Operating in your Owner Manual.

Hill Descent Control*

Hill Descent Control sets and maintains vehicle speed from 2–14 mph while descending a steep incline in a forward or reverse gear.

1. Press the  **Hill Descent Control** button on the left side of the instrument panel. Vehicle speed must be below 31 mph to enable the system. The Hill Descent Control symbol will illuminate on the instrument cluster.
2. Increase or decrease speed by applying the accelerator or brake pedal, or use the Cruise Control +/- buttons. The adjusted speed becomes the new set speed. The  symbol flashes when the system is actively applying the brakes to maintain vehicle speed.

Traction Control and StabiliTrak Systems

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the left side of the instrument panel to turn traction control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner Manual.

Integrated Trailer Brake Control (ITBC)◆

The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the Driver Information Center.

- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons on the control panel.
- ▶ Squeeze the levers together (left lever does not move) on the control panel to manually apply the trailer brakes.



See Driving and Operating in your Owner Manual.

Tow/Haul Mode

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- ▶ Press the  **Tow/Haul Mode** button on the end of the shift lever to turn the system on or off.

See Driving and Operating in your Owner Manual.

Tire Pressure Monitor

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed in the Driver Information Center.**

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

Roadside Assistance

**1-800-CHEV-USA
(1-800-243-8872)**

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

myChevrolet and OnStar® Mobile Apps



The myChevrolet mobile app connects owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance.

Download the OnStar Remotelink mobile app and enjoy select features for five years from date of vehicle delivery. With a compatible mobile device, OnStar subscribers can access many services, including remotely starting/stopping the vehicle, locking/unlocking doors, and locating the vehicle on a map (on properly equipped vehicles). To learn more about OnStar services, press the blue OnStar button, call 1-888-4ONSTAR (1-888-466-7827), visit **onstar.com** or refer to your owner manual.

Download the mobile apps from your compatible mobile device's app store.

Chevrolet Owner Center

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online owner manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at **my.chevrolet.com**.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2015 General Motors. All rights reserved.



23133499 A