

2016

Cadillac

SRX

CONVENIENCE/PERSONALIZATION GUIDE

Review this guide for an overview of some important features in your Cadillac SRX. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More detailed information can be found in your Owner Manual.

INSTRUMENT PANEL



INSTRUMENT CLUSTER



Symbols

	Traction Control Off		Cruise Control		Eco Active
	Antilock Brake System Warning		Adaptive Cruise Control ♦		Forward Collision Alert ♦
	StabiliTrak Off		Brake System Warning		Charging System Warning
	Electric Parking Brake Service		High Beam Headlamps		Safety Belt Reminder
	Security		Adaptive Forward Lighting ♦		Engine Coolant Temperature
	StabiliTrak/Traction Control		Airbag Readiness		Check Engine Warning
	Lane Departure Warning ♦		Engine Oil Pressure Warning		Low Tire Pressure
	Lights On Reminder		Electric Parking Brake Set		Low Fuel Warning

Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door.
Press again to unlock all doors.

Note: To change the Remote Keyless Entry settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

Remote Vehicle Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 5.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds, or until the button is pressed again or the vehicle is started.

Liftgate Release

Press twice to unlock the liftgate or open/close the power liftgate.

Door Key

Press the button (A) to pull the door key out of the transmitter. If needed, use the key to lock/unlock the driver's door.



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or the liftgate.**

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the liftgate.



Keyless Locking

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

See Keys, Doors and Windows in your Owner Manual.

KEYLESS START

Start

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the depression below the Accessory Power Outlet in the center console lower storage area to enable the engine to start.

Cell phone chargers may interfere with the operation of the Keyless Start System and should not be plugged in when starting or turning off the engine.

Stop/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

Accessory

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The yellow indicator on the button will illuminate. Press the button again to return to the Off position.



ADAPTIVE REMOTE START♦

Starting the Vehicle

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button until the turn signal lamps flash.

When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.

3. Before driving, press the brake pedal and then press the **ENGINE START/STOP** button to turn on the ignition.

Canceling a Remote Start

- ▶ Press and hold the **Remote Start** button until the parking lamps turn off.

Climate Control Operation

During a remote start, the automatic climate control system will operate at the same setting as when the vehicle was last turned off.

Heated/Ventilated Seat Operation

The heated/ventilated seats will turn on during a remote start (if selected in the Vehicle Settings menu) when outside temperatures warrant. The seat button indicators do not illuminate during a remote start.

Note: To change the heated/ventilated seat settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Driving and Operating in your Owner Manual.

See Keys, Doors and Windows in your Owner Manual.

STEERING WHEEL CONTROLS

Cruise Control

 On/Off

 (On/Off Adaptive Cruise Control) 

SET– Set/Coast

Press down the control bar to set the speed. If active, press down to decrease speed by 1 mph.

RES+ Resume/Accelerate

Press up the control bar to resume a set speed. If active, press up to increase speed by 1 mph.

 Cancel

Press to cancel cruise control without erasing the set speed.

 Follow Distance Gap (Adaptive Cruise Control) 

Press to select a following gap time setting of Far, Medium, or Near.

See Driving and Operating in your Owner Manual.

CUE System Voice Recognition

 Push to Talk

Press to answer an incoming call or to interact with the OnStar, Bluetooth or CUE system.

 End Call/Mute

Press to end/reject a call or mute the audio system.

See Instruments and Controls in your Owner Manual.



5-Way Control

Moves left/right, up/down, and in.

 Left/Right

Press to navigate to the left or right cluster display or to toggle to the next or previous menu option.

 Up/Down

Press the control bar up or down to scroll through a menu.

SEL Select

Press to select a highlighted menu item.

See Instruments and Controls in your Owner Manual.

Audio Controls

+  – Volume

Press + or – to increase or decrease the volume.

 Next/Previous

Press  up or  down to select the next or previous favorite radio station, track, or file.

See Instruments and Controls in your Owner Manual.

Heated Steering Wheel

 On/Off

See Instruments and Controls in your Owner Manual.

DRIVER INFORMATION CENTER



The Driver Information Center displays a variety of vehicle information on three display zones. Zones can be personalized to display: digital speedometer, trip odometers, fuel range, average fuel economy, instantaneous fuel economy, average vehicle speed, timer, compass, oil life, tire pressure, navigation, audio, phone or other vehicle information.

Use the 5-way control on the right side of the steering wheel to navigate and select between the available menus.



To select the desired display information:

1. Press the **< left** or **> right** side of the control bar to select one of the three display zones.
2. Press the control bar **^ up** or **v down** to scroll through a menu.
3. Press **SEL (Select)** to select a menu item. Press and hold to reset values on certain screens.
4. Press the **< left** or **> right** side of the control bar to retain the information view and to exit the display zone.

See Instruments and Controls in your Owner Manual.

CUE TOUCH SCREEN AND CONTROLS

The touch screen uses proximity sensing. Certain screen buttons will become visible when a hand approaches the screen.



Applications:
Touch the screen icon to access the desired application

VOLUME
Touch arrows or swipe finger **above** chrome bar

 CUE Power On/Off

Driver's Temperature Control

OFF
Climate Control Power Off

 Driver's Heated/
Ventilated Seat Control 

AUTO
Climate Control
Automatic Operation

 Windshield Defrost Mode

Disc Player

 Disc Eject

Additional Pages:
Touch to view additional pages of applications

Interaction Selector:
Touch to display the favorites list

 Home Page

Passenger's Temperature Control

 Fan Speed Controls

 Passenger's Heated/
Ventilated Seat Control 

 Recirculation Mode

 Rear Window Defog

Storage Compartment:
Touch and hold the chrome bar at the bottom of the climate control panel to open/close

Touch the icon/text on the control panel to access a feature or adjust a function.

CUE SYSTEM MENUS

CUE offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access the following items. You can also use simple gestures on the CUE touch screen just as you would on a smartphone, such as tap, drag, pinch and spread, to interact with the CUE system. Some features are disabled when the vehicle is moving.



Audio

- Voice Recognition
- Radio Band
- Seek Up/Down
- Tune/Play
- Media
- Menu



Navigation

- Zoom Out
- Zoom In
- Reset
- Destination
- Map Menu
- Seek Up/Down
- Tune/Play



Phone

- Voice Recognition
- Contacts
- Recent
- Keypad
- Voice Mail
- Phones



Climate

- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- AC Off
- Auto Climate On/Off
- Rear Climate
- Air Distribution Settings
- Driver Heated/Ventilated Seat
- Passenger Heated/Ventilated Seat
- Fan Speed



Settings

- Time and Date
- Languages
- Valet Mode
- Radio
- Vehicle
- Bluetooth
- Voice
- Display
- Rear Camera
- Return to Factory Settings



Video

- Rear Media
- Reverse
- Play
- Forward
- Menu



Rear Climate

- Rear Climate Temperature Control
- Fan Control
- Synchronized Temperatures
- Rear On/Off
- Rear Auto Temperature
- Rear Control Lockout
- Air Delivery Mode Control



OnStar

- Hands-Free Calling
- Turn-by-Turn Directions
- OnStar Info
- Virtual Advisor
- Cancel

INTERACTING WITH THE CUE SYSTEM

To make interactions simple, use the following gestures on the CUE touch screen just as you would on a smartphone.

Press



Press an item on the screen to select an option or activate an application.

Press and Hold



Press and hold an item to start another gesture, move, or delete an application.

Drag



Touch an item on the screen and drag your finger along the screen while holding down on the item. This can be done to move applications on the Home page.

Nudge



Press the desired item and move your finger in an up/down or side-to-side motion without releasing your finger. When your finger is removed, the item stops moving.

Fling or Swipe



Press anywhere within a list or page and move your finger rapidly in an up/down or side-to-side motion, releasing from the screen while your finger is still moving, to scroll through a list or change page views.

Spread



Place two fingers on the screen and spread them apart to zoom in.

Pinch



Place two fingers on the screen and bring them together in a pinching motion to zoom out.

Note: A microfiber cloth is included in your glove box to help clean and maintain the CUE touch screen. Never use window cleaners or solvents to clean the CUE touch screen.

See your *CUE Infotainment System Manual*.

CUE SYSTEM FEATURES

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

CUE uses a Bluetooth or USB connection to link a compatible smartphone, cell phone, USB flash drive or portable audio player/iPod® to the touch screen infotainment display. It offers a variety of entertainment options, including streaming audio from the Internet and features enhanced hands-free voice control, music information and the ability to display photos and play music files from a USB flash drive. For assistance, call 1-855-4-CUE-NOW (1-855-428-3669) or visit www.cadillac.com/cue.

Setting the Time

1. Touch  **Settings** on the  Home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch **+** or **-** to adjust the hours, minutes, and AM or PM.
5. Touch **< BACK** to exit the menu.

Storing Favorite Stations

Radio stations from all bands (AM, FM or XM♦), Pandora stations, tone settings, phone contacts and navigation destinations♦ can be stored in any order.

1. Display the desired radio station, tone settings, Pandora station, navigation destination or contact.
2. Touch and drag up the  **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button until a beep sounds.
4. Repeat the steps to store another favorite item.

Disc Player

- ▶ From the Audio screen, touch  **Media** until CD is displayed to play a disc.

A Blu-ray disc player is included with the Rear Seat Entertainment system♦.

Portable Audio Devices

USB ports are located in the storage compartment in the center console, in the storage compartment below the climate controls, and on the rear of the center console if equipped with Rear Seat Entertainment♦.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port. CUE will read the connected device and build a list of voice commands. Search for music on-screen or by voice commands.

PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres. Requires an Internet-connected device with Pandora software.

1. Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
2. Create a station on your phone to listen to a customized song list in the vehicle.
3. Connect your smartphone/device to the system by Bluetooth or, for Apple devices, by a USB cable.
4. Touch the Pandora icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

See your CUE Infotainment System Manual.

ONSTAR WITH 4G LTE

With OnStar 4G LTE and Wi-Fi®, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rear-view mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance, press the blue OnStar button or call 1-888-466-7827.

See onstar.com and your **CUE Infotainment System Manual**.

BLUETOOTH® SYSTEM

Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. For more information, visit www.gmtotalconnect.com.

Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say "Pair Phone," or use the touch screen to select  **Phone** > Pair Device.
2. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, select Always Accept and Allow.

See your **CUE Infotainment System Manual**.

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free, using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say "Command please," followed by a beep.
3. After the beep, say what you want it to do.

- **Hands-free calling:**

Example commands: "Call Amanda" or "Dial 555-1212"

- **Connected music device search:**

Example commands: "Play artist [name]" or "Play song [name]"

- **Radio control:**

Example commands: "Tune FM 104.3" or "Tune XM Classic Vinyl"

- **Navigation control:**

Example commands: "Destination Address" or "Destination Contact"

- **Help:**

- Say "Help" for voice recognition assistance.
- Help is available within each feature. Access audio, navigation or other features and then say "Help" for assistance with that feature.

See your **CUE Infotainment System Manual**.

VEHICLE PERSONALIZATION



The Vehicle Settings menu may include Climate and Air Quality; Collision/Detection Systems; Comfort and Convenience; Lighting; Power Door Locks; and Remote Lock, Unlock and Start. Some vehicle features can be customized using the controls on the audio system.

1. Touch **Settings** on the home page.
2. Touch **Vehicle**.
3. Touch the desired menu item.
4. Touch the desired feature and setting.
5. Touch **BACK** to exit each menu.

See Instruments and Controls in your Owner Manual.

NAVIGATION



Enter a destination using the Single Line Destination feature.

1. Touch **Navigation** on the home page.
2. Touch **Destination**.
3. Type the address, intersection or road (for example, 123 MAIN ST BROWN CITY MI).
4. Touch **Go**.
5. Select the desired name from the generated list.
6. Touch **Go**.

See your CUE Infotainment System Manual.

DRIVER ASSISTANCE SYSTEMS

The driver assistance systems use advanced technologies to help avoid collisions by providing visual, audible and/or tactile (vibration) alerts under some imminent collision conditions.

Side Blind Zone Alert – While driving, a  warning symbol displays on the left or right side mirror when a vehicle is detected in that side blind spot area. The symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Side Blind Zone Alert.

Rear Cross Traffic Alert – When the vehicle is in Reverse, the system warns of approaching traffic by displaying a visual alert on the touch screen from the Rear Vision Camera, and the left or right side of the driver's seat pulses. See Safety Alert Seat.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

Driver Awareness Package

Safety Alert Seat – The driver's seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

Lane Departure Warning – When crossing a detected lane marking without using a turn signal, the  Lane Departure Warning symbol flashes on the instrument cluster and the left or right side of the driver's seat pulses. See Safety Alert Seat.

- ▶ To turn the system on or off, press the  Lane Departure Warning button on the center console.

Forward Collision Alert – The  Vehicle Ahead indicator illuminates in green on the instrument cluster when a vehicle is detected and illuminates in yellow when following a vehicle ahead much too closely.

When approaching a vehicle directly ahead too rapidly, a visual alert flashes on the windshield and the driver's seat pulses. See Safety Alert Seat.

- ▶ Press the  Collision Alert button on the left side of the steering wheel to set the alert sensitivity to Far, Medium, Near or Off. (See the Collision/Detection System menu if equipped with Adaptive Cruise Control.)

Driver Assist Package (includes Driver Awareness Package)

Automatic Collision Preparation – Prepares the brakes or applies the brakes if an emergency collision appears imminent or the driver does not react to previous alerts.

Front and Rear Automatic Braking – Applies the brakes in potential collision situations to help reduce damage or help avoid collisions at lower speeds.

- ▶ To turn the system on or off, press the  Parking Assist button on the center console.

Adaptive Cruise Control – If a vehicle is detected ahead, the vehicle accelerates or brakes moderately to maintain the selected following gap. If driver action is required, the system pulses the driver's seat. See Safety Alert Seat.

- ▶ Press the  Follow Distance Gap button on the left side of the steering wheel to set a following gap.

POWER DOOR LOCKS/ SAFETY LOCKS


- ▶ Press the power door  **Unlock**/ **Lock** button on the driver's door to unlock or lock all doors.
- ▶ Pull the inside door handle to unlock a door; pull the handle again to open the door.
- ▶ Press the  **Safety Locks** button on the driver's door to prevent the rear doors from opening from the inside and to disable the rear power windows. The button indicator will illuminate when activated.

See *Keys, Doors and Windows* in your Owner Manual.

POWER OUTSIDE MIRRORS

Power Mirror Adjustment

- ▶ Move the power mirror selector switch (A) to the Left (L) or Right (R) position to select the driver's or passenger's mirror; use the four-way control (B) to adjust the mirror.

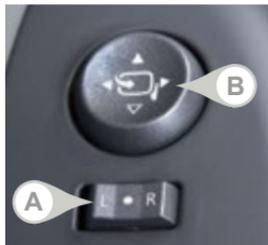

Reverse Tilt Mirror

The Reverse Tilt Mirror will tilt down the driver and passenger mirrors to improve visibility near the rear wheels when the vehicle is shifted into Reverse.

Note: To change the Reverse Tilt Mirror settings, go to *Comfort and Convenience* in the Vehicle Settings menu.

See *Keys, Doors and Windows* in your Owner Manual.

POWER LIFTGATE WITH ADJUSTABLE MODE

Power Liftgate Switch Locations

- Power liftgate mode button on the driver's door (liftgate must be unlocked to activate)
- Release button on the liftgate above the license plate
- Button on the bottom trim plate of the liftgate (to close the liftgate)
- Liftgate release button on the transmitter

Power Liftgate Modes

MAX

Fully open the liftgate.

3/4 (Adjustable Mode)


Open the liftgate to a desired height of 3/4 open or more.

OFF

Operate the liftgate manually.

Setting the 3/4 Mode (Adjustable Mode)

1. Turn the power liftgate knob to the 3/4 position.
2. Power open the liftgate. Manually adjust the liftgate to the desired height. More effort is required when adjusting the liftgate manually.
3. Press and hold the button on the bottom trim plate of the liftgate, adjacent to the latch, until the turn signals flash and a beep sounds, indicating that the setting is stored.
4. Confirm the setting.

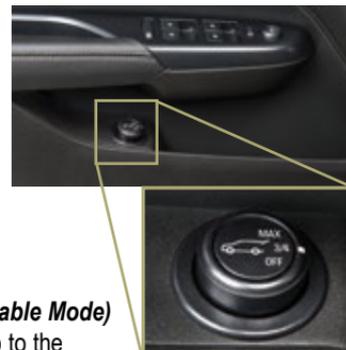

EXTERIOR LIGHTING



 **Off/On**

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system♦.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps♦**

Adaptive Forward Lighting♦

The AFL system pivots the headlamps left or right in the direction of travel.

Note: The AFL system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

See *Lighting in your Owner Manual*.

WINDSHIELD WIPERS



Windshield Wipers and Washer Lever

HI Fast wiper

LO Slow wiper

INT  **Rainsense Sensitivity**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is moved up.

Note: When entering an automatic car wash, turn off the automatic Rainsense windshield wipers and rear wiper.

1x Single wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

Rear Wiper and Washer Switch

ON Slow wiper

Press the top of the switch (A) on the end of the lever.

INT Intermittent

Press the bottom of the switch (B) on the end of the lever.

 **Washer Fluid**

Push the lever away from you to clean the rear window.

See *Instruments and Controls in your Owner Manual*.

AUTOMATIC TRANSMISSION FEATURES

Driver Shift Control

Driver Shift Control allows you to shift gears similar to a manual transmission.

- ▶ Move the shift lever to the Manual (M) position (A), left of the Drive position; tap the lever forward to upshift and rearward to downshift. The current gear selection is shown in the DIC.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will automatically downshift.

Fuel Economy (ECO) Control

The ECO mode can improve the vehicle's fuel economy by changing the transmission shift points and making other fuel-saving adjustments. Driving performance is more conservative when the ECO mode is active.

- ▶ Press the **ECO** button (B) to turn the ECO mode on or off. The ECO light illuminates on the instrument cluster when active.

See Driving and Operating in your Owner Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull up the **Parking Brake** switch (C).
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **Parking Brake** switch (C).

See Driving and Operating in your Owner Manual.

STABILITRAK®/TRACTION CONTROL SYSTEMS



The traction control system limits wheel-spin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the **Traction Control/StabiliTrak** button (D) on the center console to turn traction control off or back on. The **Traction Control Off** light on the instrument cluster will illuminate when the system is off.

See Driving and Operating in your Owner Manual.

ULTRASONIC PARKING ASSIST

Ultrasonic sensors in the front and rear bumpers help you avoid colliding with objects when parking. Detected objects are indicated by audible beeps or Safety Alert Seat pulses, which become more frequent as the vehicle gets closer to an object.

- ▶ Press the **Parking Assist** button (E) to turn the system on/off. The button illuminates when the system is on.

Note: The system operates only at speeds less than 5 mph. Keep the sensors clean of dirt and snow for proper operation.

See Driving and Operating in your Owner Manual.

MEMORY SEATS◆

Set Memory Positions

1. With the ignition on or in Accessory mode, adjust the driver's seat, power outside mirrors and adjustable pedals◆ to the desired positions.
2. Press and hold the **MEM** button and button **1** on the driver's seat. A beep will sound. Continue holding both buttons until 2 beeps sound.
3. Repeat the steps using button **2** for a second driver.



Recall Positions

- ▶ Press and hold button **1** or **2** until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

See *Seats and Restraints in your Owner Manual.*

SUNROOF◆

Open/Close the Sunshade

- ▶ Fully press the  rear or  front of the sunshade switch to express-open or express-close the sunshade.

Open/Close the Sunroof

- ▶ Press the  rear of the sunroof switch to the first detent to open the sunroof to the vent position.
- ▶ Fully press the  rear of the switch to express-open the sunroof to the comfort position.
- ▶ Fully press the  front of the switch to express-close the sunroof.

See *Keys, Doors and Windows in your Owner Manual.*

COOLED GLOVE BOX

The air conditioned glove box can be used to store items at a cooler temperature.

- ▶ Move the slide control on the left-front side of the glove box across the small opening to turn the cool-air flow on or off.



Close the opening during cooler weather to keep cold air from entering the vehicle.

See *Storage in your Owner Manual.*

CARGO MANAGEMENT SYSTEM◆


The Cargo Management System features front and rear storage compartments under the partitioned cargo floor cover.

- ▶ Press the rear part of the handle, and then lift up the handle to unlatch the cover.



Storage Compartment

- ▶ A prop rod locks into place when the front cover is opened. To close the cover, press the red button on the middle of the prop rod (A).
- ▶ Use the hooks on the cover to secure small bags.

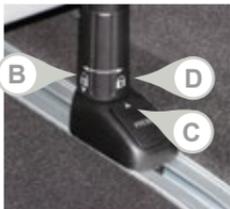

U-Rail System

- ▶ Align the  Unlock symbol (B) with the button arrow (C) and press the button to install/remove the fence.
- ▶ Align the  Lock symbol (D) with the button arrow (C) and press the button to lock the fence in place.
- ▶ To move the fence on the track, remove one side from an adapter; then press the buttons to move the adapters to the desired locations.
- ▶ To store the fence, place it in the clips under the storage compartment cover.



See *Storage* in your Owner Manual.

TIRES

Tire Pressure Monitor

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

Tire Sealant and Compressor Kit◆

The tire sealant and compressor kit can be used to temporarily seal small punctures in the tread area of the tire. The kit is located under the cargo floor. Refer to the kit instructions for complete operating information.

See *Vehicle Care* in your Owner Manual.

ENGINE OIL LIFE SYSTEM

The Engine Oil Life System calculates oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center when it's necessary to change the oil and filter. Reset the system to 100% only following an oil change.

See *Vehicle Care* in your Owner Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Should you need to ask a question, make a comment, or request additional information, Cadillac Customer Assistance is available anytime.

CADILLAC ONLINE OWNER CENTER

Visit my.cadillac.com for access to the Cadillac Owner Center, which features online owner manuals, maintenance information, service records, and more.

myCADILLAC and ONSTAR REMOTELINK® KEY FOB SERVICES

The myCadillac mobile app connects owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance.



OnStar RemoteLink Key Fob Services include Remote Start, Remote Door Lock, and Remote Horn and Lights (on equipped vehicles). Services are available for five years from date of vehicle delivery. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit onstar.com.

Download the mobile apps from your compatible mobile device's app store.

CUE SUPPORT

For information or assistance operating the CUE infotainment system, call 1-855-4-CUE-NOW (1-855-428-3669).

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2015 by General Motors. All rights reserved.

