

2017



CT6 Convenience & Personalization Guide

cadillac.com

Review this quick reference guide for an overview of some important features in your Cadillac CT6. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More detailed information can be found in your Owner Manual.

INSTRUMENT PANEL

Power Seat/
Memory
Seat
Buttons

Electric
Parking
Brake
Switch

Turn Signal
Lever/Exterior
Lamps Control

Instrument
Cluster/Driver
Information
Center

Windshield
Wipers
Lever

Engine
Start/Stop
Button

Parking Assist/
Automatic Parking
Assist♦/Automatic
Engine Stop-Start
Disable♦ Buttons

Cadillac
CUE
Touch
Screen

Hazard
Warning
Flashers/
Glove Box
Buttons

Infotainment
System
Controls



Head-Up
Display
Controls♦

Hood Release
(pull 2X to
open)

Cruise
Control/Voice
Recognition
Buttons

Forward Collision Alert/
Lane Keep Assist/
Heated Steering Wheel
Buttons

Power
Steering
Column
Control

Audio Next/
Previous
Station
Controls

Audio Volume/
Driver
Information
Center
Controls

Auto Hold/
Traction
Control/Driver
Mode Control
Buttons

Infotainment
Touch Pad

Heated/
Ventilated Seat
Buttons/Climate
Controls

REMOTE KEYLESS ENTRY TRANSMITTER

Lock

Press to lock all doors.

Press and hold for 1 second to fold the power mirrors.

Unlock

Press to unlock the driver's door only or all doors.

Press and hold for 1 second to unfold the power mirrors.

Press and hold to open all windows.

Remote Start

Press and release the  Lock button and then immediately press and hold the  to start the engine.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold for 3 seconds to activate the alarm. Press it again to cancel the alarm.

Trunk Release

Press twice to open the trunk. Press once to stop power trunk operation.♦

Door Key

Press the button on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door.

Note: To change the Remote Lock and Unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk without removing the transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or the trunk.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.



KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.


Note: To change the Keyless Locking and Unlocking settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

KEYLESS START

START

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

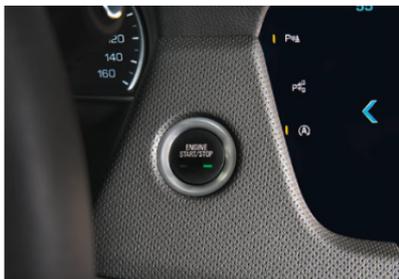

Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket in the center console storage area to enable the engine to start. Replace the transmitter battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner Manual.

AUTO ENGINE STOP/START (IF EQUIPPED)

A fuel-saving stop/start system has been integrated with the 2.0L engine. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current settings for the climate control or defog system have not been reached.
- The Auto Stop time is greater than 2 minutes.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **(A)** button left of the Cadillac CUE screen when the engine is running to turn off the system. The button indicator is not illuminated when the system is off.

The **(A)** is green on the instrument cluster when the system is active and is white when the system is not active.

See Driving and Operating in your Owner Manual.

STEERING WHEEL CONTROLS

A. VOICE RECOGNITION

Push to Talk

Press to answer an incoming call or to use voice recognition with the OnStar, Bluetooth or Cadillac CUE system.

End Call/Mute

Press to end/decline a call or mute the audio system.

See your Cadillac CUE Infotainment System Manual.

B. CRUISE CONTROL

On/Off

SET– Set Speed

With Cruise Control on, press the SET– button to set the cruise speed.

RES+ Resume Speed

With Cruise Control on, press the RES+ button to resume the previous set speed.

Adjust Speed

With a cruise speed set, press the RES+ or SET– button to the first detent to increase or decrease the set speed by 1-mph increments; press to the second detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.



Cancel

Press to cancel cruise control without erasing the set speed from memory.

Follow Distance Gap (Adaptive Cruise Control)

Press to select a gap setting of Far, Medium, or Near.

See Driving and Operating in your Owner Manual.

C. AUDIO CONTROLS

+ – Volume

Press  + or  – to increase or decrease the volume.

Next/Previous

Press  or  to go to the next or previous favorite radio station or track.

See your Cadillac CUE Infotainment System Manual.

D. DRIVER INFORMATION CENTER CONTROLS

Left/Right

Press to view the left or right cluster display.

Up/Down

Press to scroll up or down through a menu.

SEL Select

Press to select a highlighted menu item.

E. HEATED STEERING WHEEL

On/Off

See Instruments and Controls in your Owner Manual.

F. LANE KEEP ASSIST

On/Off

Press to turn Lane Keep Assist on or off.

See Driving and Operating in your Owner Manual.

INSTRUMENT CLUSTER



Standard Theme



Technology Theme

CLUSTER DISPLAYS

Use the controls on the right side of the steering wheel to move through the different cluster display zones.

- ▶ Press the < or > to move between the display zones. Press the left < to exit a display menu.
- ▶ Press the ^ or v to move through the menus.
- ▶ Press the **SEL (Select)** button to open a menu or select a setting.



RECONFIGURABLE INSTRUMENT CLUSTER♦

The uplevel cluster display layout can be changed.

1. Use the controls to view the Settings menu. Press **SEL (Select)**.
2. Scroll to view Display Theme. Press the > to view the themes.
3. Scroll to highlight the desired theme. Press **SEL**.
4. Press the < to exit the menu.

See Instruments and Controls in your Owner Manual.

DRIVER INFORMATION CENTER



The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information, including Info, Audio, Phone, Navigation, and Settings items. The DIC Info displays feature commonly used trip and fuel information, including a digital speedometer, trip displays and fuel range. The items in the Info displays can be selected in the Info Pages menu.

INFO PAGES MENU

1. Use the controls on the right side of the steering wheel to view the Settings menu on the cluster. Press **SEL (Select)**.
2. Scroll to view Info Pages. Press the **>** to view the pages.
3. Scroll to move through the list of possible info pages.
4. Press **SEL** to select or deselect an item.
5. Press the **<** to exit the menu.

See Instruments and Controls in your Owner Manual.

HEAD-UP DISPLAY

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also may be displayed.



The HUD controls are located on the left side of the instrument panel.



Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.
Hold down to turn off the display.

See Instruments and Controls in your Owner Manual.

CADILLAC CUE TOUCH SCREEN AND TOUCHPAD

Refer to your Owner Manual for important safety information about using the infotainment system while driving.



Applications:
Touch the screen icon to access an application

Power/Mute:
Press and hold to turn Cadillac CUE On/Off; press to mute audio

VOLUME
Touch the arrows or swipe your finger to adjust the volume

Home Screen

Additional Pages:
Touch to view additional pages of applications

Cadillac CUE offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access an item. You can use simple gestures on the touch screen just as you would on a tablet, such as tap, drag, pinch and spread, to interact with the Cadillac CUE system.



The touchpad integrated into the center console can be used to select features on the Cadillac CUE touch screen.

- ▶ Use a single finger on the touchpad to move the cursor around selectable elements on the touch screen. Press the touchpad to select or activate a highlighted item.
- ▶ Use 2 finger gestures to control features on a sourced area, such as to scroll up or down a list or to reveal a map.
- ▶ Use 3 finger gestures to activate the menu item on a list.

Handwriting Recognition can be used to input characters instead of picking them from the keyboard.

- ▶ Touch the globe button from the keyboard to open the Handwriting Recognition screen.

See your Cadillac CUE Infotainment System Manual.

CADILLAC CUE FEATURES

Cadillac CUE uses a Bluetooth or USB connection to link a smartphone, cell phone, USB flash drive or portable audio player/iPod® to the touch screen infotainment display. For assistance, call 1-855-4-CUE-NOW (1-855-428-3669) or visit my.cadillac.com/learn.

SETTING THE TIME

1. Touch **Settings** on the Home screen.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch + or – to adjust the hours, minutes, and AM or PM.
5. Touch **< Back** to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

STORING FAVORITE STATIONS

Mixed-audio favorites, including all radio station bands (AM, FM and SiriusXM♦), navigation, applications, and contacts can be stored in any order.

1. Display the desired radio station, Pandora station, navigation destination or contact.
2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button.
4. Repeat the steps to store another favorite item.

PORTABLE AUDIO DEVICES

Several USB ports and auxiliary input jacks are located in the vehicle.

- ▶ Connect an iPod®, iPhone®, MP3 player, or a USB flash drive to a USB port or auxiliary input jack.

- ▶ Touch Audio, and then **Media**

until the connected device is shown. Cadillac CUE will read the device and build a list of voice commands. Search for music on-screen or by voice commands.

CADILLAC COLLECTION♦

In-vehicle apps — connecting to music, news, weather, travel information and more — are available for download to the radio through the Collection icon on the home page.

Downloading and using the apps requires Internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

Visit my.cadillac.com/learn for more information.

See your Cadillac CUE Infotainment System Manual.



CADILLAC CUE FEATURES

APPLE CARPLAY™ AND ANDROID AUTO™

Apple CarPlay or Android Auto capability allows use of select smartphone apps through the infotainment display. If available, a  Projection icon will appear on the home page.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible smartphone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home screen.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-CUE-NOW (1-855-428-3669) or visit my.cadillac.com/learn.

TEXT MESSAGE ALERTS

Text message alerts play a text message over the audio system and allow a response with a preset message. The text messaging feature must be set up when the cell phone is paired. Messages can be viewed on the touch screen only when the vehicle is not moving. For more information, visit my.cadillac.com/learn.

- ▶ Touch  Text Inbox to view the text message inbox.
- ▶ Touch the  speaker icon to listen to a message.

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free (after pairing your Bluetooth-enabled phone), using the natural voice recognition system.

1. Press the  **Push to Talk** on the steering wheel.
 2. The radio will say “Command please,” followed by a beep.
 3. After the beep, say what you want it to do.
- **Phone (using your paired phone)** – Example command: “Call Amanda” or “Call 555-1212”
 - **Media Music Device Search (when connected to USB only)** – Example command: “Play artist [name]” or “Play song [name]”
 - **Radio control** – Example command: “Tune FM 104.3” or “Tune XM Classic Vinyl”
 - **Help** – Say “Help” for voice recognition assistance.

VOICE PASS-THRU

Voice pass-thru/Siri® Eyes Free allows access to the voice recognition commands on a cell phone; i.e. Siri or Voice Command. See the cell phone manufacturer's user guide to determine if the cell phone supports this feature.

- ▶ To activate Voice pass-thru, press and hold the  **Push to Talk** steering wheel button.

See your Cadillac CUE Infotainment System Manual.

BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.cadillac.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair Phone" or Use the touch screen to select Phone > Pair Device.
2. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
3. Confirm the codes that appear on the touch screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See your Cadillac CUE Infotainment System Manual.

VALET MODE

- ▶ To lock/unlock the Cadillac CUE screen and the glove box, select Valet Mode under Settings and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

See your Cadillac CUE Infotainment System Manual.

ONSTAR® WITH 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the infotainment screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, and system details and limitations.

See OnStar in your Owner Manual.

WIRELESS CHARGING◆

The wireless charging system is located under the center console armrest. To check mobile device compatibility, visit my.cadillac.com/learn. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the mobile device face up on the symbol on the pad and aligned with the left edge of the pad.
4. The battery charging symbol will display on the infotainment screen. If not charging, remove the device for 3 seconds, and rotate it 180 degrees.

See Instruments and Controls in your Owner Manual.

NAVIGATION



Enter a destination using the Single Line Destination feature. Approximate your desired destination and Cadillac CUE's auto-fill function will enter the necessary information.

1. Touch **Navigation** on the Home page.
2. Touch **Destination**.
3. Touch the desired destination option to plan a route. Enter the address or other information.
4. Touch ✓
5. Select the desired name from the generated list.
6. Touch **Go**.

See your Cadillac CUE Infotainment System Manual.

VEHICLE PERSONALIZATION



Many vehicle features can be customized using the Settings menus on the Cadillac CUE system. The Settings menus may include Time and Date, Language, Valet Mode, Radio, Vehicle, Bluetooth, Voice, Display, Rear Camera, and Return to Factory Settings.


1. Touch **Settings** on the Home screen.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Touch **< Back** to exit each menu.

See Instruments and Controls in your Owner Manual.

CLIMATE CONTROLS

FRONT CLIMATE CONTROLS

The climate control settings can be adjusted using the climate control buttons or the touch screen.

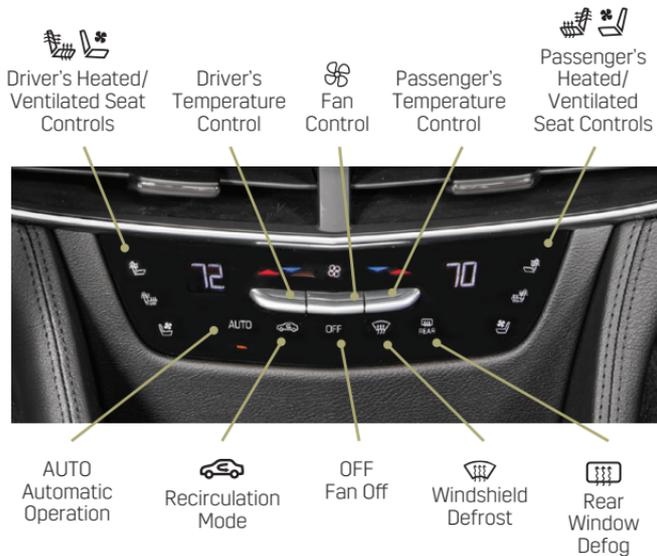

REAR CLIMATE CONTROLS

The rear climate control settings can be adjusted using the rear climate control buttons on the rear of the center console or the touch screen.

- ▶ Touch the **Rear Climate Controls** icon on the touch screen and then touch Controls Lockout to lock/unlock the rear seat controls.



AUTOMATIC OPERATION

- ▶ Press **AUTO**. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. If the air delivery mode or fan speed is manually adjusted, automatic operation is turned off.

SYNC TEMPERATURE SETTINGS

- ▶ Touch **Climate Controls**, and then **SYNC**, on the touch screen to link all climate zone settings to the driver's settings.

See Climate Controls in your Owner Manual.

MEMORY SEATS



SET MEMORY POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power outside mirrors and power steering column to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound. Immediately press and hold button **1** until two beeps sound.

Repeat these steps using button **2** for a second driver.

To store driver's seat and power steering column positions for more clearance when exiting the vehicle, repeat steps 1 and 2 using the  **Exit** button.

RECALL POSITIONS

- ▶ Press button **1**, **2** or  **Exit**. Depending on vehicle state, the button may need to be held down until the seat, mirrors and power steering column reach the set position.

Note: To change the Auto Memory Recall settings, go to Comfort and Convenience in the Vehicle Settings menu.

See Seats and Restraints in your Owner Manual.

ULTRAVIEW SUNROOF



OPEN/CLOSE THE SUNSHADES

- ▶ Press the  **F Front Sunshade** switch on the overhead console to open or close the front sunshade.
- ▶ Press the  **R Rear Sunshade** switch on the overhead console or rear doors to open or close the rear sunshade.
- ▶ Press the  **Rear Window Sunshade** switch on the overhead console or rear doors to open or close the rear window sunshade.

OPEN/CLOSE THE SUNROOF

- ▶ Pull the  **TILT** switch to vent the sunroof. Press the switch to close the sunroof.
- ▶ Fully pull the  **SLIDE** switch to express-open the sunroof. Fully press the switch to express-close the sunroof.

See Keys, Doors and Windows in your Owner Manual.

EXTERIOR LIGHTING



 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **IntelliBeam System**◆

Press the button on the end of the lever with the lamp control in the **AUTO** or  Headlamps position to turn the automatic high-beam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner Manual.

WINDSHIELD WIPERS



HI Fast Wipes

LO Slow Wipes

AUTO Rainsense™ Sensitivity

When in Rainsense mode, rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

Note: When entering an automatic car wash, turn off the automatic Rainsense windshield wipers.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield and activate the wipers.

See Instruments and Controls in your Owner Manual.

DRIVER ASSISTANCE SYSTEMS

The driver assistance systems use advanced technologies to help avoid collisions by providing visual, audible and/or tactile (vibration) alerts.

Safety Alert Seat – The driver's seat pulses — left side, right side or simultaneously — to alert the driver of potential hazards.

- ▶ Audible alerts may be selected instead of Safety Alert Seat pulsing alerts. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

Forward Collision Alert – The  Vehicle Ahead indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses.

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near.

Front Automatic Braking – The brakes may be applied in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead.

- ▶ To set the Forward Collision Alert and Front Automatic Braking systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Auto Collision Preparation.

Side Blind Zone Alert/Lane Change Alert – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

Lane Departure Warning/Lane Keep Assist – May help avoid crashes due to unintentional lane departures. The  is green if the system is available to assist. It may assist by gently turning the steering wheel and display an amber , if the vehicle approaches a detected lane marking without using a turn signal in that direction. If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse three times on the side of the departure direction as the lane marking is crossed.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the steering wheel.

Front Pedestrian Braking – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 ft. and displays an amber  indicator. When approaching a detected pedestrian too quickly, a visual alert flashes on the windshield and the Safety Alert Seat pulses. The system may prepare the brakes or automatically brake the vehicle.

- ▶ To set the system to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

Night Vision – A thermal heat image of the view ahead displays on the instrument cluster when it is dark outside. An amber indicator displays when a pedestrian or animal is detected and a red alert displays on the HUD and the Safety Alert Seat pulses when approaching a pedestrian too quickly.

- ▶ The system is turned on/off along with Front Pedestrian Braking. Go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

See Driving and Operating in your Owner Manual.

PARKING ASSISTANCE SYSTEMS

The parking assistance systems use advanced technologies to help avoid collisions by providing visual, audible and/or tactile (vibration) alerts.

Front and Rear Vision Camera – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the touch screen. After shifting from Reverse to Drive, a view of the area in front of the vehicle displays. Vehicle speed must be below 5 mph.

- ▶ Press the  Camera icon on the touch screen to activate the front cameras when the vehicle is in Drive.

Front and Rear Parking Assist

– During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center, sounds a beep, and pulses the Safety Alert Seat. When an object is very close, 5 beeps sound and the Safety Alert Seat pulses 5 times.



Rear Cross Traffic Alert – When the vehicle is in Reverse, the system warns of traffic coming in either direction by displaying a visual alert on the touch screen and pulsing the left or right side of the Safety Alert Seat.

Rear Automatic Braking – When the vehicle is in Reverse, the brakes may be applied in potential collision situations to help reduce damage or help avoid collisions at lower speeds.

- ▶ To turn the Parking Assist, Rear Cross Traffic Alert and Rear Automatic Braking systems on or off, press the  **Parking Assist** button on the left side of the touch screen.

See Driving and Operating in your Owner Manual.

◆ Optional equipment

AUTOMATIC PARKING ASSIST

Automatic Parking Assist steers the vehicle to help park in parallel and perpendicular spaces.

- ▶ While in Drive, press the  **Automatic Parking Assist** button on the left side of the touch screen. A beep sounds and a parking assist display is shown on the Driver Information Center (DIC). The system will begin searching for a large enough parking space.
- ▶ Once a space is found, shift the vehicle into Reverse or Drive as directed on the DIC and apply the accelerator or brake as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner Manual.

SURROUND VISION

The Surround Vision system displays a bird's-eye view of the area surrounding the vehicle on the touch screen when the vehicle is in Reverse.

SURROUND VISION RECORDER

Views from the 360° camera views can be recorded to an SD card in the card reader located in the trunk.

- ▶ To activate or deactivate recording, touch Video Recorder on the Home screen, and then touch .

Once activated, the system will record until it has been turned off. The recorded video can be played when the vehicle is in Park.

See Driving and Operating in your Owner Manual.

TAP SHIFT AUTOMATIC TRANSMISSION



The automatic transmission has paddle shifters on the steering wheel and a Manual mode that allows you to shift gears similar to a manual transmission.

- ▶ While in Drive (D), use either paddle behind the steering wheel to temporarily take control of gear selection. Automatic shifting returns after the accelerator pedal is held steady for 6 seconds.
- ▶ Pull the right paddle to upshift or the left paddle to downshift. The current gear will be displayed on the instrument cluster.
- ▶ Move the shift lever to Manual (M) to enter Permanent Tap Shift Mode. Use the paddles to manually shift the transmission.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur. SHIFT DENIED will display on the instrument panel.

See Driving and Operating in your Owner Manual.

TRACTION CONTROL AND STABILITRAK® SYSTEMS

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck, and rocking the vehicle is required.

- ▶ Press the  **OFF Traction Control/StabiliTrak OFF** button on the center console. The  Traction Control Off light will illuminate on the instrument cluster. Press the button again to turn on traction control.

See Driving and Operating in your Owner Manual.

DRIVER MODE CONTROL

Driver Mode Control automatically adjusts the steering, suspension, and powertrain calibrations in real time.

- ▶ Press the **MODE** button on the center console to select the Tour (default at each ignition cycle), Sport, or Snow/Ice mode.



See Driving and Operating in your Owner Manual.

AUTOMATIC VEHICLE HOLD

Automatic Vehicle Hold will hold the vehicle stationary after the brake pedal has been released and until the accelerator pedal is pressed. The indicator illuminates in green on the instrument cluster when the system is holding the vehicle.

- ▶ To turn the system on or off, press the **AUTO HOLD** button on the center console with the driver's safety belt fastened, the driver's door closed and the engine on.

See Driving and Operating in your Owner Manual.

REAR CAMERA MIRROR

The rear camera mirror provides a wide angle camera view of the area behind the vehicle.

- ▶ Pull or push the lever (A) at the bottom of the mirror to turn the video display on or off.
- ▶ To adjust the brightness of the display, press and release the button (B) on the top back of the mirror without covering the light sensor. There are 5 brightness settings.



See Keys, Doors and Windows in your Owner Manual.

◆ Optional equipment

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the **(P) Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.



See Driving and Operating in your Owner Manual.

TIRE PRESSURE MONITOR

The **(!) Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner Manual.

HOOD RELEASE

- ▶ To open the hood, pull and release the hood release handle on the lower-left side of the instrument panel. Pull and release the handle again to fully open the hood. There is not a secondary latch under the hood.

See Vehicle Care in your Owner Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

CADILLAC ONLINE OWNER CENTER

Create an account at my.cadillac.com for access to an online Owner Manual, helpful how-to videos, your service history and warranty status, OnStar reports (active OnStar account required), and more.

myCADILLAC and ONSTAR MOBILE APPS

The myCadillac mobile app connects owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance.

Download the OnStar RemoteLink mobile app and enjoy select features for 5 years from date of vehicle delivery. With a compatible mobile device, owners can access many services, including remotely starting/stopping the vehicle, locking/unlocking the doors, and locating the vehicle on a map (on properly equipped vehicles). To learn more about OnStar services, press the blue OnStar button, call 1-888-466-7827, visit onstar.com or refer to your Owner Manual.

Download the mobile apps from your compatible mobile device's app store.



CADILLAC CUE SUPPORT

1-855-4-CUE-NOW
(1-855-428-3669)

For information or assistance operating the Cadillac CUE infotainment system, call Cadillac CUE Support or visit my.cadillac.com/learn.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2016 by General Motors. All rights reserved.

