

2017



Cadillac

CTS Convenience & Personalization Guide

cadillac.com

Review this guide for an overview of some important features in your Cadillac CTS. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More detailed information can be found in your Owner Manual.

INSTRUMENT PANEL

Memory Seat Buttons Electric Parking Brake Switch Turn Signal Lever/Exterior Lamps Control Instrument Cluster/Driver Information Center Manual Shift Paddles Windshield Wipers Lever Hazard Warning Flashers/ Lane Keep Assist with Lane Departure Warning♦/ Auto Stop-Start Disable♦ Buttons Cadillac CUE Touch Screen Glove Box/ Parking Assist/ Automatic Parking Assist♦ Buttons



Power Window/Mirror Controls Cruise Control/Voice Recognition/Heated Steering Wheel♦ Buttons Head-Up Display Controls♦ Power Rake/ Telescope Steering Wheel Control♦ Audio Steering Wheel Controls/ 5-way Control Engine Start/Stop Button Traction Control and StabiliTrak Button/Driver Mode Control Heated/Ventilated Seat Buttons♦ Audio System/Climate Controls

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door and fuel door. Press again to unlock all doors.

Press and hold to open all windows.

Note: To change the Remote Lock and Unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.



Remote Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 17.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds, or until the button is pressed again or the vehicle is started.



Trunk Release

Press twice to open the trunk.

Door Key

Press the button (A) on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door, front passenger's door and rear folding seats.◆



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or the trunk.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.



KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed. The fuel door will lock automatically after several minutes (press the Unlock button on the transmitter to unlock the fuel door).

Note: To change the Keyless Locking and Unlocking settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

See Keys, Doors and Windows in your Owner Manual.

KEYLESS START

START

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket under the rubber mat on the top shelf of the center console to enable the engine to start. Replace the transmitter battery as soon as possible.

Cell phone chargers may interfere with the operation of the Keyless Start System and should not be plugged in when starting or turning off the engine.

STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the vehicle in Accessory mode. The yellow indicator on the button will illuminate.

See Driving and Operating in your Owner Manual.

AUTO ENGINE STOP/START (IF EQUIPPED)

The Auto Engine Stop/Start system is included on 2.0L I4 turbocharged engine and 3.6L V6 engine vehicles.

When the brakes are applied and the vehicle is at a complete stop, the engine may turn off, depending on operating conditions, to conserve fuel. When the engine stops, the tachometer displays AUTO STOP. When the brake pedal is released or the accelerator pedal is pushed, the engine will restart.

Auto Stop may automatically deactivate if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than D (Drive).
- The battery charge is low.
- The current settings for the climate control or defog system have not been reached.
- The Auto Stop time is greater than 2 minutes.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **(A)** button left of the Cadillac CUE screen when the engine is running to disable the Auto Engine Stop/Start system.

When the system is disabled, the button indicator will not be illuminated and the **(A)** symbol on the instrument cluster will change from green to white with a slash through it.

See Driving and Operating in your Owner Manual.

STEERING WHEEL CONTROLS

CRUISE CONTROL

 **On/Off**

SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed.



RES Resume Speed

With Cruise Control on, press the control bar up fully to resume the previous set speed.

+ – Adjust Speed

When active, press the control bar up (+) or down (–) lightly to increase or decrease the set speed by 1-mph increments; press up or down fully to increase or decrease the set speed to the next 5-mph interval on the speedometer.

 **Cancel**

Press to cancel cruise control without erasing the set speed from memory.

Following Gap (ADAPTIVE CRUISE CONTROL[♦] AND FORWARD COLLISION ALERT[♦])

Press repeatedly to select a gap setting of Far, Medium, or Near.

See Driving and Operating in your Owner Manual.

HEATED STEERING WHEEL[♦]

 **On/Off**

See Instruments and Controls in your Owner Manual.

VOICE RECOGNITION

 **Push to Talk**

Press to interact with the OnStar, Bluetooth or Cadillac CUE system.

 **End Call/Mute**

Press to end/reject a call or mute the audio system.

See your Cadillac CUE Infotainment System Manual.

5-WAY CONTROL

Moves left/right, up/down, and in.

 **Left/Right**

Press to view the left or right cluster display. Press the left < to exit a display menu.

 **Up/Down**

Press the control bar up or down to scroll through a menu.



SEL Select

Press to select a highlighted menu item.

See Instruments and Controls in your Owner Manual.

AUDIO CONTROLS

  **Volume**

Press  or  to increase or decrease the volume.

 **Next/Previous**

Press  or  to select the next or previous favorite radio station, track or file.

See your Cadillac CUE Infotainment System Manual.

INSTRUMENT CLUSTER



Balanced



Enhanced



Performance (Vsport and V-Series models only)

CLUSTER DISPLAY ZONES



Use the 5-way control on the right side of the steering wheel to move between the different display zones and scroll through the different displays in each cluster configuration.

UPLEVEL CLUSTER CONFIGURATIONS♦

1. With the vehicle in Park, use the 5-way control on the steering wheel to view the Options page in one of the display zones on the cluster.
2. Press **SEL (Select)** to enter the Options menu.
3. Scroll **∨ down** to highlight Display Layout; press **SEL**.
4. Scroll **∧ up** or **∨ down** to highlight one of the cluster configurations; press **SEL**.
5. Press **<** to exit the menu.

See Instruments and Controls in your Owner Manual.

DRIVER INFORMATION CENTER



The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information. The DIC Info Displays may include a digital speedometer, trip odometers, fuel range, average fuel economy, instantaneous fuel economy, average speed, timer, compass, turn arrow, estimated time to arrival, distance to destination, speed limit, best fuel economy, speed warning, cruise control set speed, following distance indicator, gap setting, battery voltage, engine boost, oil life, and odometer.

INFO PAGES MENU

1. Use the 5-way control on the right side of the steering wheel to view the Options page in one of the display zones on the cluster. Press SEL to enter the Options menu.
2. Scroll **∨ down** to highlight Info Pages; press SEL.
3. Scroll **∧ up** or **∨ down** to move through the list of Info Displays.
4. Press SEL to select or deselect a display item.

See Instruments and Controls in your Owner Manual.

◆ Optional equipment

HEAD-UP DISPLAY◆

The Head-Up Display (HUD) displays some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.



Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.

Hold down to turn off the display.

ROTATION OPTION

Adjust the angle of the HUD image to compensate for windshield variations.

- To adjust the angle of the HUD, use the 5-way control to view the Options menu on the instrument cluster and select HUD Rotation.

See Instruments and Controls in your Owner Manual.

TOUCH SCREEN AND CONTROLS



Wi-Fi Indicator

Applications:
Touch the screen icon to access the application

VOLUME
Touch arrows or swipe finger **above** chrome bar

Power/Mute:
Press and hold to turn Cadillac CUE On/Off; press to mute audio

Driver's Temperature Control

OFF
Climate Control Power Off

Driver's Heated/Ventilated Seat Control

AUTO
Automatic Climate Control Operation

Windshield Defrost Mode

Additional Pages:
Touch to view additional pages of applications (optional equipment shown)

Interaction Selector:
Touch to display the favorites list

Home Page

Passenger's Temperature Control

Climate Control Fan Speed

Passenger's Heated/Ventilated Seat Control

Recirculation Mode

Rear Window Defog

Storage Compartment with USB Port and Wireless Charging: Press and hold the bright bar to open/close

The controls use capacitive technology – simply touch the icon/text to access a feature or adjust a function.

CADILLAC CUE MENUS

Cadillac CUE offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access the following items. You can use simple gestures on the touch screen just as you would on a smartphone, such as tap, drag, pinch and spread, to interact with the Cadillac CUE system.



Audio

- Radio Band
- Media
- Seek Up/Down
- Tune
- Browse
- Menu

Navigation

- Zoom Out
- Zoom In
- Reset
- Destination
- Map Menu
- Seek Up/Down
- Mute/Unmute
- Cancel a Destination

Phone

- Voice Recognition
 - Contacts
 - Recent
 - Keypad
 - Voice Mail
 - Phones
- Note: Press and hold the  **Push to Talk** steering wheel button to activate Handset Voice Recognition. See page 11.

Climate

- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- Sync Temperature Settings
- A/C Mode
- Automatic Climate On/Off
- Air Distribution Settings
- Front/Rear Settings
- Fan Speed

Settings

- Time and Date
- Rear Seat Reminder
- Language
- Valet Mode
- Teen Driver
- Radio
- Vehicle
- Bluetooth
- Apple CarPlay
- Android Auto
- Voice
- Display
- Rear Camera
- Return to Factory Settings
- Software Information

CADILLAC CUE FEATURES

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

Cadillac CUE uses a Bluetooth or USB connection to link a compatible smartphone, cell phone, USB flash drive or portable audio player/iPod® to the touch screen infotainment display. For assistance, call 1-855-4-CUE-NOW (1-855-428-3669) or visit my.cadillac.com/learn.

SETTING THE TIME

1. Touch **Settings** on the Home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch + or – to adjust the hours, minutes, and AM or PM.
5. Touch  **Back** to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

PORTABLE AUDIO DEVICES

Two USB ports and an auxiliary audio input jack are located in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port.
- ▶ Touch **Audio**, and then touch  **Media** until the connected device is shown. Cadillac CUE will read the device and build a list of voice commands. Search for music on-screen or by voice commands.

STORING FAVORITE STATIONS

Radio stations from all bands (AM, FM or SiriusXM[®]), tone settings, phone contacts and navigation destinations[♦] can be stored in any order.

1. Display the desired radio station, tone settings, navigation destination or contact.
2. Touch and drag up the  **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button.
4. Repeat the steps to store another favorite item.

CADILLAC COLLECTION[♦]

In-vehicle apps — connecting to music, news, weather, travel information and more — are available for download to the radio through the Collection icon on the home page.

Downloading and using the apps requires Internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

Visit my.cadillac.com/learn for more information.



CADILLAC CUE FEATURES

APPLE CARPLAY™ AND ANDROID AUTO™◆

Apple CarPlay or Android Auto capability allows use of select smartphone apps through the infotainment display. If available, a  Projection icon will appear on the home page.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play store.
2. Connect your compatible smartphone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-CUE-NOW (1-855-428-3669) or visit my.cadillac.com/learn.

TEXT MESSAGE ALERTS

Text message alerts play a text message over the audio system and allow a response with a preset message. The text messaging feature must be set up when the cell phone is paired. Messages can be viewed on the touch screen only when the vehicle is not moving. For more information, visit my.cadillac.com/learn.

- ▶ Touch the  Text icon to view the text message inbox.
- ▶ Touch the  speaker icon to listen to a message.

See your Cadillac CUE Infotainment System Manual.

VOICE RECOGNITION

Control the music source and navigation destination◆, and make phone calls hands-free, using the enhanced voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
 2. The radio will say "Say a command," followed by a beep.
 3. After the beep, say what you want it to do.
- **Hands-free calling** – Example command: "Call Amanda" or "Dial 555-1212"
 - **Connected music device search** – Example command: "Play artist [name]" or "Play song [name]"
 - **Radio control** – Example command: "Tune FM 104.3" or "Tune XM Classic Vinyl"
 - **Help** – Say "Help" for voice recognition assistance.

HANDSET VOICE RECOGNITION

Handset Voice Recognition pass-thru allows access to the voice recognition commands on a cell phone; e.g. Siri or Voice Command. For more information, visit my.cadillac.com/learn.

- ▶ To activate Handset Voice Recognition, press and hold the  **Push to Talk** steering wheel button.

See your Cadillac CUE Infotainment System Manual.

VALET MODE

- ▶ To lock/unlock the Cadillac CUE screen and the glove box, select Valet Mode under Settings and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

Note: For added security, the rear seat pass-through door can be locked by turning the knob on the pass-through door and the folding rear seatbacks can be locked using the door key.

See your Cadillac CUE Infotainment System Manual and Seats and Restraints in your Owner Manual.

BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.cadillac.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say "Pair Phone" or Use the touch screen to select Phone > Pair Device.
2. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
3. Confirm the codes that appear on the touch screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See your Cadillac CUE Infotainment System Manual.

WIRELESS CHARGING◆

The Wireless Charging system is located in the storage compartment behind the climate controls. To check mobile device compatibility, visit my.cadillac.com/learn.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the mobile device face up on the symbol on the charging pad.
4. Move the device slowly until the battery charging symbol displays on the Cadillac CUE screen, indicating the device is charging.

See your Cadillac CUE Infotainment System Manual.

ONSTAR® WITH 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance or to change the SSID and password, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, details, and system limitations.

See your Cadillac CUE Infotainment System Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. A Report Card records vehicle data about driving behavior.

When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

See your Cadillac CUE Infotainment System Manual.

REAR CAMERA MIRROR

The rear camera mirror provides a wide angle camera view of the area behind the vehicle.


- ▶ Pull or push the lever (A) at the bottom of the mirror to turn the video display on or off.
- ▶ To adjust the brightness of the display, press and release the button (B) on the top back of the mirror without covering the light sensor. There are 5 brightness settings.



See Keys, Doors and Windows in your Owner Manual.

SURROUND VISION

When the vehicle is in Reverse, the Surround Vision System displays a bird's-eye view of the vehicle along with the front or rear camera views on the touch screen.

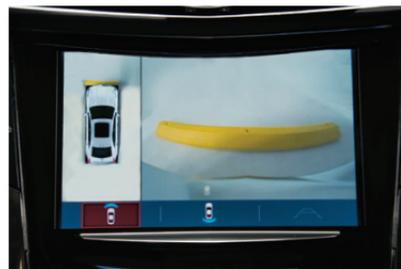

- ▶ To switch to the front or rear camera view, touch the front or rear camera screen button at the bottom of touch screen.
- ▶ To turn the guidelines on or off, touch the guidelines screen button at the bottom of the touch screen.

See Driving and Operating in your Owner Manual.

OVER-THE-AIR SOFTWARE UPDATES

The infotainment system can download and install vehicle software updates over a wireless Internet connection, which can be accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a secured Wi-Fi hotspot. The system will prompt high priority updates to be downloaded and installed.

- ▶ To check for updates manually, go to Settings > Software Information > System Update. Follow the on-screen prompts.

Visit my.cadillac.com/learn for more information.

See Instruments and Controls in your Owner Manual.

POWER CUPHOLDERS COVER

- ▶ Push or pull and then release the chrome tab to open/close the power retractable cover. The power cover will operate when the vehicle is On or in Accessory or Retained Accessory Power mode.
- ▶ Open/close the cover manually when power is not provided to the cupholder cover by slowly pushing or pulling the chrome tab.

See Storage in your Owner Manual.

ULTRAVIEW SUNROOF



OPEN/CLOSE THE SUNSHADE

- ▶ Press the front or rear of the  **Front Sunshade** switch (A) to express-open or express-close the front sunshade.
- ▶ Press the  **Rear Sunshade** switch (B) to express-open or express-close the rear sunshade.

OPEN/CLOSE THE SUNROOF

- ▶ Press the rear of the  **Sunroof** switch (C) to vent the sunroof. Press the  switch again to express-open the sunroof.
- ▶ Press the front of the  **Sunroof** switch to express-close the sunroof.

See Keys, Doors and Windows in your Owner Manual.

MEMORY SEATS



SET MEMORY POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power outside mirrors and power steering column to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound. Immediately press and hold button 1 until two beeps sound.

Repeat these steps using button 2 for a second driver.

To store driver's seat and power steering column positions for more clearance when exiting the vehicle, repeat steps 1 and 2 using the  **Exit** button.

RECALL POSITIONS

- ▶ Press button 1, 2 or  **Exit**. The button must be held down until the seat, mirrors and power steering column reach the set position.

Note: To change the Auto Memory Recall settings, go to Comfort and Convenience in the Vehicle Settings menu.

See Seats and Restraints in your Owner Manual.

EXTERIOR LIGHTING



EXTERIOR LIGHTING CONTROLS

 **Off/On**

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system♦.

 **Parking Lamps**

 **Headlamps**

ADAPTIVE FORWARD LIGHTING (INCLUDED WITH HID HEADLAMPS)♦

The Adaptive Forward Lighting (AFL) system pivots the headlamps left or right in the direction of travel.

Note: The AFL system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

See Lighting in your Owner Manual.

♦ Optional equipment

WINDSHIELD WIPERS



Wipers with Rear Camera Mirror Washer♦ shown

HI Fast Wipes

LO Slow Wipes

INT Intermittent (Rainsense™ Sensitivity)

When in Rainsense mode, rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

Note: When entering an automatic car wash, turn off the Rainsense windshield wipers.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

 **Rear Camera Mirror Washer♦**

Push the lever away from you to spray washer fluid on the rear camera mirror lens.

See Instruments and Controls in your Owner Manual.

DRIVER ASSISTANCE SYSTEMS

The driver assistance systems use advanced technologies to help avoid collisions by providing visual, audible and/or tactile (vibration) alerts.

Safety Alert Seat – The driver's seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible alerts may be selected instead of Safety Alert Seat pulsing alerts. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

Forward Collision Alert – The  Vehicle Ahead indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses.

- ▶ To set the alert timing, press the  **Following Gap** button on the left side of the steering wheel.

Following Distance

Indicator – The following time to the vehicle ahead is indicated in seconds on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.



Adaptive Cruise Control

– If a vehicle is detected ahead, the vehicle accelerates or brakes moderately to maintain the driver-selected cruise speed and following gap.

- ▶ To set a following gap, press the  **Following Gap** button on the left side of the steering wheel.

Lane Keep Assist with Lane Departure Warning – May help avoid crashes due to unintentional lane departures. The  is green if the system is available to assist. It may assist by gently turning the steering wheel and display an amber  if the vehicle approaches a detected lane marking without using a turn signal in that direction. If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse three times on the side of the departure direction as the lane marking is crossed.

- ▶ To turn the systems on or off, press the  **Lane Keep Assist** button on the left side of the Cadillac CUE screen.

Front and Rear Automatic Braking – Automatically applies the brakes in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead or behind, and with some objects behind.

- ▶ To change the setting to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.
- ▶ To turn the Rear Automatic Braking system on or off, press the  **Parking Assist** button on the right side of the Cadillac CUE screen. This will also turn the Parking Assist and Rear Cross Traffic Alert systems on/off.

Side Blind Zone Alert with Lane Change Alert – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

DRIVER ASSISTANCE SYSTEMS

Rear Cross Traffic Alert – With the vehicle in Reverse, a warning of approaching cross traffic is displayed on the touch screen from the Rear Vision Camera, and the left or right side of the driver's seat pulses to indicate the direction of the cross traffic.

- ▶ To turn the system on or off, press the **P** **Parking Assist** button on the right side of the Cadillac CUE screen. This will also turn the Parking Assist and Rear Automatic Braking systems on/off.

Automatic Safety Belt Tightening – While driving, the front safety belts automatically tighten during emergency braking or steering maneuvers, and release when driving conditions return to normal.

See Driving and Operating in your Owner Manual.

AUTO HEATED AND VENTILATED SEATS

When the vehicle is on, the auto heated and ventilated seats will be activated at the level required by the vehicle's interior temperature. The heated or ventilated seat level is shown on the seat control indicators. Turn off the heated or ventilated seats using the seat controls.

- ▶ To turn the auto heated or ventilated seats feature on or off, go to Settings > Vehicle > Climate and Air Quality.

See Keys, Doors and Windows in your Owner Manual.

ADAPTIVE REMOTE START

STARTING THE VEHICLE

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button until the turn signal lamps flash.
When the vehicle starts, the doors remain locked, and the parking lamps will light and remain on while the vehicle is running. The engine will continue running for 10 minutes. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.
3. Before driving, simultaneously press the brake pedal and the **ENGINE START/STOP** button to turn on the ignition.

CANCELING A REMOTE START

- ▶ Press and hold the **Remote Start** button until the parking lamps turn off.

CLIMATE CONTROL OPERATION


During a remote start, the automatic climate control system will operate at the same setting as when the vehicle was last turned off.

HEATED/VENTILATED SEAT OPERATION

During a remote start, the heated/ventilated seats will turn on automatically if enabled in the Vehicle Settings menu. When it is cold outside, the heated seats turn on; and when it is hot outside, the ventilated seats turn on. The temperature performance of an unoccupied seat may be reduced. The heated/ventilated seats turn off when the ignition is turned on. The seats can be turned on manually if desired.

See Keys, Doors and Windows in your Owner Manual.

PADDLE SHIFT AUTOMATIC TRANSMISSION

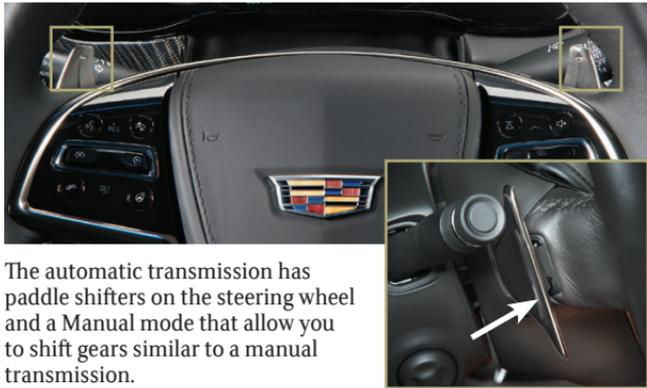

The automatic transmission has paddle shifters on the steering wheel and a Manual mode that allow you to shift gears similar to a manual transmission.

TEMPORARY TAP MODE

- ▶ While in Drive (D), use either paddle behind the steering wheel to temporarily take control of gear selection. Automatic shifting returns if no manual shifts have been made after 10 seconds.
- ▶ Pull the right paddle to upshift or the left paddle to downshift. The current gear will be displayed on the instrument cluster.

PERMANENT TAP MODE

- ▶ Press the M (Manual) button on top of the shift lever to enable the Manual mode. Use the paddles to manually shift the transmission.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur.

See Driving and Operating in your Owner Manual.

STABILITRAK®/TRACTION CONTROL SYSTEMS

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak** button on the center console. The  **Traction Control Off** light will illuminate on the instrument cluster.
- ▶ Press the button again to turn on traction control.



See Driving and Operating in your Owner Manual.

DRIVER MODE CONTROL SYSTEM

The Driver Mode Control System automatically adjusts steering, automatic transmission and Magnetic Ride Control (if equipped) settings in real time.

- ▶ Press the **MODE** button on the center console to select the Tour (default at each ignition cycle), Sport, Snow/Ice, or Track mode.

See Driving and Operating in your Owner Manual.

AUTOMATIC PARKING ASSIST

Automatic Parking Assist steers the vehicle to help park in parallel and perpendicular spaces.

1. Press the **Automatic Parking Assist** button on the right side of the Cadillac CUE touch screen. A beep sounds and a parking assist display is shown on the touch screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button during the search process.
3. The system searches for parking spaces to the right of the vehicle. To search for a parking space to the left, touch the Select Side screen button.
4. Once a space is found, shift the vehicle into Reverse to engage automatic steering.
5. Remove your hands from the steering wheel and accelerate or brake as required. Shifting directions and a progress arrow will be displayed on the Cadillac CUE screen.
6. Parking Complete is displayed and a beep sounds when the parking maneuver is complete.

See Driving and Operating in your Owner Manual.



ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the **(P) Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.



Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive away.

See Driving and Operating in your Owner Manual.

TIRE PRESSURE MONITOR

The **(!) Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

CADILLAC ONLINE OWNER CENTER

Create an account at my.cadillac.com for access to an online Owner Manual, helpful how-to videos, your service history and warranty status, OnStar reports (active OnStar account required), and more.

myCADILLAC and ONSTAR MOBILE APPS

The myCadillac mobile app connects owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance.

Download the OnStar RemoteLink mobile app and enjoy select features for 5 years from date of vehicle delivery. With a compatible mobile device, owners can access many services, including remotely starting/stopping the vehicle, locking/unlocking the doors, and locating the vehicle on a map (on properly equipped vehicles). To learn more about OnStar services, press the blue OnStar button, call 1-888-466-7827, visit onstar.com or refer to your Owner Manual.

Download the mobile apps from your compatible mobile device's app store.



CADILLAC CUE SUPPORT

**1-885-4-CUE-NOW
(1-855-428-3669)**

For information or assistance operating the Cadillac CUE infotainment system, call Cadillac CUE Support or visit my.cadillac.com/learn.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2016 by General Motors. All rights reserved.

