

2017



ESCALADE Convenience & Personalization Guide

cadillac.com

Review this guide for an overview of some important features in your Cadillac Escalade. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More detailed information can be found in your Owner Manual.

INSTRUMENT PANEL

Instrument Panel
Illumination Control/
Exterior Lamp
Control

4WD
Control

Head-Up
Display
Controls ♦

Windshield
Wipers Lever

Instrument
Cluster/Driver
Information
Center

Driver Mode Control/
Adjustable Pedals/
Traction Control and
StabiliTrak Buttons

Cadillac
CUE
Touch
Screen

Glove Box/Lane Keep
Assist ♦/Parking Assist/
Automatic Parking
Assist ♦



Power Mirror
Control/Door
Lock Switch/
Window
Buttons

Cruise
Control/Voice
Recognition/
Heated Steering
Wheel Buttons

Power Tilt/
Telescope
Steering Wheel
Control

Audio Steering
Wheel Controls/
5-way Control

Engine Start/
Stop Button

Heated/
Cooled Seat
Buttons

Climate
Controls

Audio
System
Controls

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors. Press and hold for 4 seconds to open all windows.



Liftglass

Press twice to open the liftglass.



Power Liftgate

Press twice to open or close the power liftgate.



Remote Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 4.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps flash and the horn sounds.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds or until the  button is pressed again.

Door Key

Press the button (A) on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door if needed.

Note: If a transmitter is left in the vehicle when locking the vehicle, the Remote Left in Vehicle Alert may sound. To change the Remote Keyless Entry settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, liftgate and ignition without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or the liftgate.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad on the liftgate handle to open the power liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

PUSHBUTTON START

START

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket in the center console storage compartment to enable the engine to start. Replace the transmitter battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The yellow indicator on the button will illuminate.

See Driving and Operating in your Owner Manual.

ADAPTIVE REMOTE START

STARTING THE VEHICLE

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button until the turn signal lamps flash (about 4 seconds).

When the vehicle starts, the doors remain locked and the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.

3. Before driving, press the brake pedal and then press the **ENGINE START/STOP** button to turn on the ignition.

CANCELING A REMOTE START

- ▶ Press and hold the **Remote Start** button until the parking lamps turn off.

HEATED/COOLED SEAT OPERATION

Remote Start Auto Heated/Cooled Seats – The heated or cooled seats will turn on during a remote start when outside temperatures warrant if the Remote Start Heated or Cooled Seats option is selected in the Settings menu. Go to Settings > Vehicle > Remote Lock, Unlock, Start. During a remote start, the seat button indicators do not illuminate. The heated or cooled seats turn off when the ignition is turned on. For the seats to remain on after the remote start, the Auto Heated and Cooled Seats feature must be enabled.

Auto Heated and Cooled Seats – Anytime the vehicle is on, the heated or cooled seats will activate automatically at the level required by the vehicle's interior temperature. The seat button indicators will illuminate when the heated or cooled seats are on. To enable this feature, go to Settings > Vehicle > Climate and Air Quality.

See Keys, Doors and Windows in your Owner Manual.

STEERING WHEEL CONTROLS

VOICE RECOGNITION

Push to Talk

Press to interact with the OnStar, Bluetooth or Cadillac CUE system. Wait for the beep before speaking.

End Call/Mute

Press to end/decline a call or mute the audio system.

See Instruments and Controls in your Owner Manual.

CRUISE CONTROL

On/Off

SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed.

RES Resume Speed

With Cruise Control on, press the control bar up fully to resume the previous set speed.

+ - Adjust Speed

When active, press the control bar up (+) or down (-) lightly to increase or decrease the set speed by 1-mph increments; press and hold to continue increasing/decreasing speed.

With Adaptive Cruise Control♦, press and release the control bar up (+) or down (-) to increase or decrease the set speed by 1 mph increments; press and hold momentarily to increase or decrease the set speed to the next 5-mph interval on the speedometer.



Cancel

Press to cancel cruise control without erasing the set speed from memory.

ADAPTIVE CRUISE CONTROL♦

Follow Distance Gap

Press repeatedly to set a following gap of Far, Medium, or Near.

Adaptive Cruise Control (ACC) enhances traditional cruise control by maintaining a driver-selected following gap between your vehicle and a vehicle detected directly ahead. Once a speed is set using the Cruise Control buttons on the steering wheel, the vehicle will maintain the selected gap distance by braking or accelerating.

When a slower vehicle is detected ahead, the  **Vehicle Ahead** symbol is displayed and the vehicle brakes moderately to maintain the selected following gap. The ACC system may slow your vehicle to a stop behind the detected vehicle. When the ACC system is holding the vehicle at a stop, always be prepared to manually apply the brakes.

If driver action is required to apply sufficient braking behind a detected vehicle, a visual alert flashes on the windshield and the Safety Alert Seat pulses. See Safety Alert Seat on page 14.

Note: Changing the gap settings automatically changes the alert timing sensitivity for the Forward Collision Alert system.

See Driving and Operating in your Owner Manual.

HEATED STEERING WHEEL

On/Off

See Instruments and Controls in your Owner Manual.

STEERING WHEEL CONTROLS

5-WAY CONTROL

Moves left/right, up/down, and in.

<> Left/Right

Press to move between the display zones on the instrument cluster.
Press the left < to exit a center display menu.

^ v Up/Down

Press the control bar up or down to scroll through a menu.

SEL Select

Press to select a highlighted menu item.

See Instruments and Controls in your Owner Manual.

AUDIO CONTROLS

🔊+ 🔊- Volume

Press the 🔊+ or 🔊- to increase or decrease the volume.

⏮ ⏪ Next/Previous

Press ⏮ or ⏪ to go to the next or previous favorite radio station or track.

See your Cadillac CUE Infotainment System Manual.



INSTRUMENT CLUSTER



CLUSTER DISPLAY ZONES

Use the 5-way control on the steering wheel to move between the different display zones and scroll through the different menus in each cluster configuration.

CLUSTER CONFIGURATIONS

1. Use the five-way control on the steering wheel to view the Options page in one of the display zones on the cluster.
2. Press SEL (Select) to enter the Options menu.
3. Scroll down to highlight Display Layout; press SEL.
4. Scroll up or down to highlight one of the cluster displays; press SEL.
5. Press < to exit the menu.

See Instruments and Controls in your Owner Manual.

DRIVER INFORMATION CENTER



The Driver Information Center (DIC) on the instrument cluster can be set to display a variety of vehicle information.

DIC MENUS

Use the 5-way control on the steering wheel to view the menus:

-  **Info** – display trip and fuel information
-  **Audio** – browse music or change the audio source
-  **Phone** – view active call and scroll through contacts
-  **Navigation** – view active route or change prompts

INFO MENU

1. Use the 5-way control on the steering wheel to display the Options page in one of the display zones. Press **SEL** to enter the Options menu.
2. Scroll  down to highlight Info Pages; press **SEL**.
3. Scroll  up or  down to move through the Info items.
4. Press **SEL** to select or deselect an item to display.

See Instruments and Controls in your Owner Manual.

HEAD-UP DISPLAY ♦



The Head-Up Display (HUD) projects some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image on the windshield. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View, Audio/Phone View, Navigation View, and Performance View.

Brightness

Lift up or press down to brighten or dim the display.

Hold down to turn off the display.

See Instruments and Controls in your Owner Manual.

TOUCH SCREEN AND CONTROLS

Applications:
Touch the screen icon to access the desired application.

VOLUME
Touch arrows or swipe finger on or above the chrome bar.

Power/Mute:
Press and hold to turn Cadillac CUE On/Off.
Press to mute audio.

Driver's Temperature Control

OFF
Climate Control Power Off

Driver's Heated/
Cooled Seat Control

AUTO
Automatic Climate Control Operation

Defrost Mode



Additional Pages:
Touch to view additional pages of applications.

Interaction Selector:
Touch to display the favorites list.

Home Page

Passenger's Temperature Control

Climate Control Fan Speed

Passenger's Heated/
Cooled Seat Control

Recirculation Mode

Rear Window Defog

Storage Compartment with USB Port:
Press and hold the bright bar to open/close.

The controls use capacitive technology – simply touch the icon/text to access a feature or adjust a function.

CADILLAC CUE MENUS

Cadillac CUE offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access the following items. You can use simple gestures on the touch screen just as you would on a smartphone, such as tap, drag, pinch and spread, to interact with the Cadillac CUE system. For assistance, call 1-855-4-CUE-NOW (1-855-428-3669) or visit my.cadillac.com/learn.



Audio

- Radio Band
- Media
- Seek Up/Down
- Tune
- Browse
- Menu

Navigation

- Zoom Out
- Zoom In
- Reset
- Destination
- Map Menu
- Seek Up/Down
- Mute/Unmute
- Cancel a Destination

Phone

- Voice Recognition
 - Contacts
 - Recent
 - Keypad
 - Voice Mail
 - Phones
- Note: Press and hold the  **Push to Talk** steering wheel button to activate Handset Voice Recognition. See page 11.

Climate

- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- Sync Temperature Settings
- A/C Mode
- Automatic Climate On/Off
- Air Distribution Settings
- Front/Rear Settings
- Fan Speed

Settings

- Time and Date
- Rear Seat Reminder
- Language
- Valet Mode
- Teen Driver
- Radio
- Vehicle
- Bluetooth
- Apple CarPlay
- Android Auto
- Voice
- Display
- Rear Camera
- Return to Factory Settings
- Software Information

CADILLAC CUE FEATURES

SETTING THE TIME

1. Touch **Settings** on the Home page.
2. Touch **Time** and **Date**.
3. Touch **Set Time**.
4. Touch + or – to adjust the hours, minutes, and AM or PM.
5. Touch **< BACK** to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

STORING FAVORITES

Radio stations from all bands (AM, FM or XM[®]), media (song, artist, album and genre with device connected to a USB port), phone contacts and navigation destinations can be stored in any order.

1. Display or select the desired radio station, media favorite, navigation destination or contact.
2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button until a beep is heard.
4. Repeat the steps to store another favorite item.

PORTABLE AUDIO DEVICES

USB ports are located in the console front storage bin and inside the console.

- ▶ Connect an iPod[®], iPhone[®], MP3 player, a USB flash drive or a USB mass storage device to a USB port.
- ▶ Touch **Media** until the connected device is shown. Search for music on-screen or by voice commands.

CADILLAC COLLECTION[◆]

In-vehicle apps — connecting to music, news, weather, travel information and more — are available for download to the radio through the Collection icon on the home page.

Downloading and using the apps requires Internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

Visit my.cadillac.com/learn for more information.

APPLE CARPLAY™ AND ANDROID AUTO™[◆]

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play store.
2. Connect your compatible Apple iPhone or Android phone to a USB data port in the console front storage bin or inside the console. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-CUE-NOW (1-855-428-3669) or visit my.cadillac.com/learn.

See your Cadillac CUE Infotainment System Manual.

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free (after pairing your Bluetooth-enabled phone), using the voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will say “Command please,” followed by a tone.
3. After the tone, say what you want it to do using natural speech. (Example: “Call Amanda” or “Tune FM 104.3.”)

HANDSET VOICE RECOGNITION

Handset Voice Recognition pass-thru allows access to the voice recognition commands on a compatible, paired cell phone; i.e. Siri or Voice Command. For more information, visit my.cadillac.com/learn.

- ▶ To activate Handset Voice Recognition, press and hold the **Push to Talk** steering wheel button.

See your Cadillac CUE Infotainment System Manual.

ONSTAR® WITH 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle’s built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the rearview mirror, wait for the prompt, and then say “Wi-Fi settings.” The information will be displayed on the screen. Or touch the OnStar icon on the touch screen and select Settings.

For more information and assistance, press the blue OnStar button, call 1-888-466-7827 or go to onstar.com.

See your Cadillac CUE Infotainment System Manual.

◆ Optional equipment

BLUETOOTH® SYSTEM

Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. For more information, visit my.cadillac.com/learn.

PAIR A PHONE

1. To use voice recognition, press the **Push to Talk** button; after the tone, say “Pair Phone,” or

Use the touch screen to select **Phone > Pair Device**.

2. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.



4. If your phone prompts you to accept the connection or phone book download, select Always Accept and Allow.

STREAMING AUDIO

- ▶ With a paired device connected via Bluetooth, touch **Media** until Bluetooth is displayed on the touch screen to stream audio from the device.

Control operation using the device controls. For full control of the mobile device, it may be necessary to connect the device to a USB port.

See your Cadillac CUE Infotainment System Manual.

WIRELESS CHARGING

The Wireless Charging system is located on the storage tray on top of the center console. To check mobile device compatibility, visit my.cadillac.com/learn.

1. The vehicle must be On.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  symbol on the pad, aligned with the rear rib.
4. Move the device slowly until the battery charging symbol displays on the Cadillac CUE screen. If not charging, remove the device for 3 seconds, and rotate it 180 degrees.

See your Cadillac CUE Infotainment System Manual.

VEHICLE PERSONALIZATION

Many vehicle features can be customized in the Vehicle Settings menu on the Cadillac CUE touch screen.

1. Touch **Settings** on the Home page.
2. Touch **Vehicle** from the Settings menu.
3. Touch the desired menu item.
4. Touch the desired feature and setting. Settings are saved automatically.
5. Touch **Back** to exit each menu.



See Instruments and Controls in your Owner Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. A Report Card records vehicle data about driving behavior.


When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

See your Cadillac CUE Infotainment System Manual.

REAR CAMERA MIRROR

The rear camera mirror provides a wide angle view of the area behind the vehicle. It is not a replacement for the normal rearview mirror and is best used when the driver's normal view is obstructed, such as by rear seat passengers or a rear seat entertainment screen.

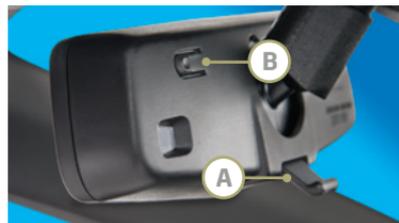

- ▶ Pull or push the lever (A) at the bottom of the mirror to turn the video display on or off. When off, the mirror is a normal rearview mirror.
- ▶ To adjust the brightness of the display, press and release the button (B) on the top back of the mirror without covering the light sensor. There are 5 brightness settings.

See Keys, Doors and Windows in your Owner Manual.

LIGHTING

 **Off/On**

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system♦.



 **Parking Lamps**

 **Headlamps**

 **Instrument Panel Brightness**

Rotate the thumbwheel to adjust the instrument panel lighting.

DOME LAMPS

OFF

Press to turn off the dome lamps at all times, even when a door is open.

DOOR

Press to have the dome lamps turn on automatically when a door is open.

ON

Press to turn on all dome lamps.



See Lighting in your Owner Manual.

♦ Optional equipment

WINDSHIELD WIPERS

 **Fast Wipes**

 **Slow Wipes**

 **INT Intermittent**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.



 **Auto – Rainsense™ On/Off**

Press to turn the Rainsense wipers on/off. Use the  INT band to adjust the wiper cycling based on the amount of moisture on the windshield. Rotate the band upward to increase the moisture sensitivity setting and the wipers will cycle more frequently.

OFF

 **Single Wipe**

 **Washer Fluid**

Push the paddle forward to wash the windshield.

Rear  OFF-INT-ON

Slide the switch to activate the rear wiper.

 **Rear Washer Fluid**

Press the button on the end of the lever to spray washer fluid on the rear window and rear camera mirror lens♦.

See Instruments and Controls in your Owner Manual.

DRIVER ASSISTANCE SYSTEMS

The driver assistance systems use advanced technologies to help avoid collisions by providing visual, audible and/or tactile (vibration) alerts.

Safety Alert Seat ♦ – The driver's seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

Forward Collision Alert ♦ – The  **Vehicle Ahead** indicator illuminates in green on the instrument cluster when a vehicle is detected and illuminates in amber when following a vehicle ahead too closely.

When approaching a vehicle directly ahead much too rapidly, a visual alert flashes on the windshield and the Safety Alert Seat pulses.

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, Near or Off.
- ▶ To set the Forward Collision Alert and Forward Automatic Braking systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

Side Blind Zone Alert/Lane Change Alert ♦ – While driving, the Side Blind Zone Alert/Lane Change Alert displays a   warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

Following Distance Indicator ♦ – The following time to the vehicle ahead is indicated in seconds on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

Lane Keep Assist with Lane Departure Warning ♦ – The system may help avoid crashes due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. It may assist by gently turning the steering wheel and display an amber  if the vehicle approaches a detected lane marking without using a turn signal in that direction.

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse three times on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the Lane Keep Assist with Lane Departure Warning system on or off, press the  **Lane Keep Assist** button on the right side of the Cadillac CUE touch screen. The button illuminates when the system is on.

Forward Automatic Braking ♦ – If the system detects that a front-end collision situation is imminent while following a detected vehicle, and the driver has not already applied the brakes, the system automatically applies the brakes to help reduce the collision's severity. The system may even help avoid the collision at very low speeds.


- ▶ To set the Forward Automatic Braking and Forward Collision Alert systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

Rear Automatic Braking ♦ – When the vehicle is in Reverse, the system may apply the brakes in potential collision situations to help reduce damage or help avoid collisions at lower speeds.

Automatic Safety Belt Tightening ♦ – While driving, the front safety belts automatically tighten during emergency braking or steering maneuvers, and release when driving conditions return to normal.

SURROUND VISION

When the vehicle is in Reverse, the Surround Vision System displays a bird's-eye view of the vehicle along with the front or rear camera views on the touch screen.

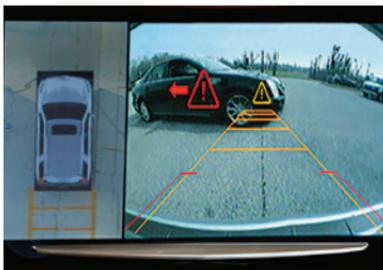

REAR CROSS-TRAFFIC ALERT

When the vehicle is in Reverse, the Rear Cross-Traffic Alert system warns of traffic coming in either direction by displaying a visual alert on the touch screen and the left or right side of the Safety Alert Seat pulses (see page 14).

- ▶ To turn the Surround Vision System guidance lines or Rear Park Assist symbols on or off, go to Settings > Rear Camera.

See Driving and Operating in your Owner Manual.

FRONT AND REAR PARKING ASSIST

During low-speed parking maneuvers, the system provides "distance-to-closest object" information in the Driver Information Center and a caution symbol on the Rear Vision Camera.

When the vehicle should be stopped immediately to avoid a collision, a continuous audible tone sounds or the Safety Alert Seat pulses (page 14).

- ▶ To turn the system on or off, press the **P** **Parking Assist** button on the right side of the Cadillac CUE touch screen.

See Driving and Operating in your Owner Manual.

◆ Optional equipment

AUTOMATIC PARKING ASSIST

Automatic Parking Assist steers the vehicle to help park in parallel and perpendicular spaces.

1. Press the **P** **Automatic Parking Assist** button on the right side of the Cadillac CUE touch screen. A beep sounds and a parking assist display is shown on the touch screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button during the search process.
3. The system searches for parking spaces to the right of the vehicle. To search for a parking space to the left, touch the Select Side screen button.
4. Once a space is found, shift the vehicle into Reverse to engage automatic steering.
5. Remove your hands from the steering wheel and accelerate or brake as required. Shifting directions and a progress arrow will be displayed on the Cadillac CUE screen.
6. Parking Complete is displayed and a beep sounds when the parking maneuver is complete.

See Driving and Operating in your Owner Manual.

TIRE PRESSURE MONITOR

The **(U)** **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed in the Driver Information Center.**

See Vehicle Care in your Owner Manual.


AUTOMATIC TRANSMISSION

RANGE SELECTION MODE

Range Selection Mode allows the driver to select the range of gears for the current driving conditions.

1. Move the shift lever to the L (Manual) position.
2. Press the + (plus) or – (minus) button (A) on the shift lever to select a lower or higher gear. The current gear is displayed next to the L on the Driver Information Center.

The transmission will be limited to the gear selected and lower gears. If vehicle speed is too high or too low for the requested gear, the shift will not occur.

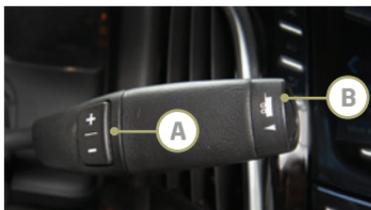

TOW/HAUL MODE

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- To turn the system on or off, press the  Tow/Haul Mode button (B) on the end of the shift lever.

See Driving and Operating in your Owner Manual.

DRIVER MODE CONTROL SYSTEM

The Driver Mode Control system automatically adjusts steering, automatic transmission and Magnetic Ride Control settings in real time.

- ▶ Press the **Mode** button on the left side of the Cadillac CUE touch screen to view the menu on the Driver Information Center. Press the button again to select the Tour or Sport mode.

See Driving and Operating in your Owner Manual.

STABILITRAK®/TRACTION CONTROL SYSTEMS

The Traction Control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off Traction Control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  Traction Control/StabiliTrak OFF button on the left side of the Cadillac CUE touch screen to turn Traction Control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner Manual.



COOL BOX

The Cool Box (Platinum model only) in the center console provides cooled storage for cold beverages or other items. It is not a refrigerator.

- ▶ Press the  Cool Box button on the left side of the front storage bin to turn the Cool Box on or off.

See Storage in your Owner Manual.



POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the RKE transmitter twice.
- ▶ Press the **Power Liftgate** knob on the overhead console.
- ▶ Press the touchpad (A) on the liftgate handle to open the liftgate.
- ▶ Press the button (B) next to the liftgate latch to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the **Power Liftgate** knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the  button next to the liftgate latch (B) for 3 seconds. The turn signals will flash when the setting is saved.



HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight in and out under the center of the rear bumper. Do not swing your foot side-to-side.

The RKE transmitter must be within 3 feet of the liftgate.

See Keys, Doors and Windows in your Owner Manual.

◆ Optional equipment

POWER ASSIST STEPS

The power assist steps lower automatically when a door is opened and retract after the doors are closed.

- ▶ To deploy the steps for cleaning and car washes, with the ignition on and the vehicle in Park or with the vehicle running and in Neutral, select the  **Run Board** screen button on the Cadillac CUE touch screen and then select the Extended option.
- ▶ To disable or enable the steps, with the ignition on and the vehicle in Park or Neutral, select the  **Run Board** screen button and then select On or Off.

See Keys, Doors and Windows in your Owner Manual.

SUNROOF

OPEN/CLOSE THE SUNROOF

- ▶ Press the rear of the  **Sunroof Tilt** switch to vent the sunroof.
- ▶ Fully press the rear of the  **Sunroof Slide** switch to express-open the sunroof.
- ▶ Fully press the front of either  **Sunroof** switch to express-close the sunroof.




See Keys, Doors and Windows in your Owner Manual.

POWER FRONT SEATS

SEAT ADJUSTMENTS

A. Seat Cushion Adjustment

Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

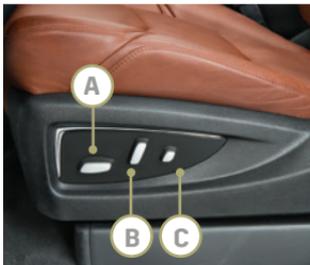

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Move the rear control fore/aft to increase/decrease lumbar support or up/down to raise/lower the lumbar location.

ADDITIONAL SEAT ADJUSTMENTS (PLATINUM MODEL)

D. Feature Select Control

Press and release the control to display the seat adjustment features on the Cadillac CUE screen. Press and hold to scroll through the adjustments.



E. 4-Way Control Pad

Use the 4-way control pad to make adjustments up, down, forward, or rearward to the selected feature.

F. Massage On/Off

With the ignition on, press to recall the last massage type and intensity.

SET MEMORY POSITIONS

With the vehicle in Park and the ignition On or in Accessory mode:

1. Adjust the power driver's seat, power adjustable pedals, power outside mirrors, and power tilt/telescopic steering column to the desired positions.
2. Press and release the **SET** button. A beep will sound. Immediately press and hold button **1** until two beeps sound.
3. Repeat the steps using button **2** for a second driver.



To store driver's seat, adjustable pedals and steering column positions for more clearance when exiting the vehicle, repeat steps 1 and 2 using the **EXIT** button.

RECALL POSITIONS

- ▶ Press button **1**, **2** or **EXIT**. Depending on vehicle state, the button may need to be held down until the seat, pedals, mirrors and steering column reach the set position.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned On/Off (for exit recall, the driver's door must be opened).

- ▶ To set the Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience > Auto Memory Recall or Easy Exit Options.

See Seats and Restraints in your Owner Manual.

REAR SEATS

FOLDING 2ND-ROW SEATS

The 2nd-row seats fold and tumble to provide more cargo space and access to the 3rd-row seats.

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Lift the lever on the lower outboard side of the 2nd-row seat. The seatback will fold forward.
3. Lift the lever again to tumble the seat forward.



POWER FOLDING 2ND-ROW SEATS

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.



2. Press the  **Seat Release** button (A) on the panel behind the rear doors or the  **x2 x2** button (B) in the rear cargo area to fold the seat forward. Press either button again to tumble the seat forward.

UNFOLDING 2ND-ROW SEATS

1. Pull down the seat until it latches to the floor.
2. Lift up the seatback until it locks in place.

POWER FOLDING/UNFOLDING 3RD-ROW SEATS

1. With the vehicle in Park, lower the head restraint, unbuckle the safety belt, and make sure nothing is on the seat.
2. Press and hold the bottom of the  **Seat Release** button (C) in the rear cargo area to fold the seat flat.
3. Press and hold the top of the  button to raise the seatback.



See Seats and Restraints in your Owner Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

CADILLAC ONLINE OWNER CENTER

Create an account at my.cadillac.com for access to an online Owner Manual, helpful how-to videos, your service history and warranty status, OnStar reports (active OnStar account required), and more.

myCADILLAC MOBILE APP

The myCadillac mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information, OnStar vehicle diagnostic information and Roadside Assistance.



The myCadillac mobile app also enables users to send destinations to the navigation system (if equipped), send remote commands — including remotely starting/stopping the vehicle and locking/unlocking doors — and locate the vehicle on a map (on properly equipped vehicles).

To learn more about OnStar services, press the blue OnStar button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your owner manual.

Download the mobile apps from your compatible mobile device's app store.

CADILLAC CUE SUPPORT

1-855-4-CUE-NOW
(1-855-428-3669)

For information or assistance operating the Cadillac CUE infotainment system, call Cadillac CUE Support or visit my.cadillac.com/learn.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2016 by General Motors. All rights reserved.

