

2018




CT6 Convenience & Personalization Guide

cadillac.com

Review this quick reference guide for an overview of some important features in your Cadillac CT6. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More detailed information can be found in your Owner's Manual.

INSTRUMENT PANEL

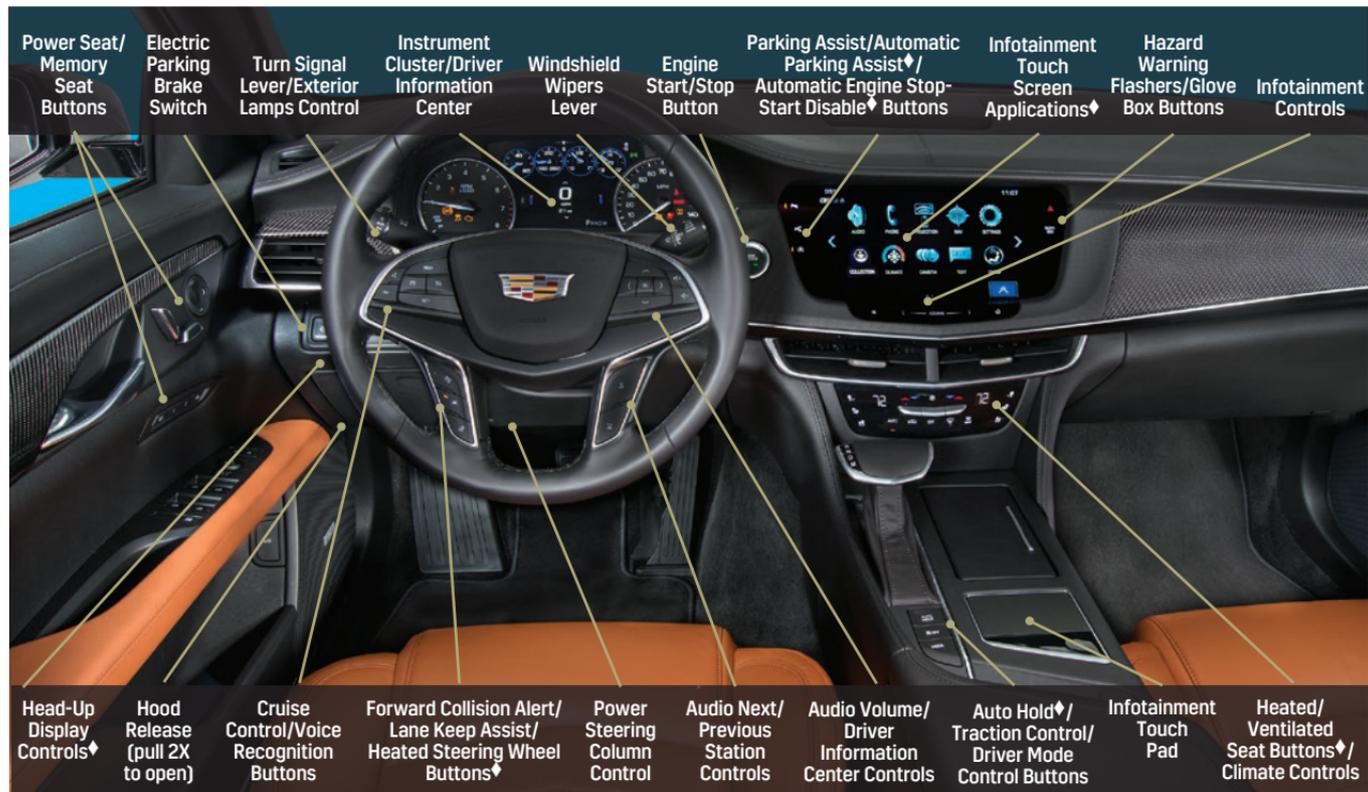

REMOTE KEYLESS ENTRY TRANSMITTER

Lock

Press to lock all doors.

Press and hold for 1 second to fold the power mirrors.

Unlock

Press to unlock the driver's door only or all doors.

Press and hold for 1 second to unfold the power mirrors.

Press and hold to open all windows.

Remote Start

Press and release the  Lock button and then immediately press and hold the  to start the engine.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold for 3 seconds to activate the alarm. Press it again to cancel the alarm.

Trunk Release

Press twice to open the trunk. Press once to stop power trunk operation.♦

Door Key

Press the button on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door.

Note: To change the Remote Lock and Unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk without removing the transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or the trunk.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.



KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the Keyless Locking and Unlocking settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.


See Keys, Doors and Windows in your Owner's Manual.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

START

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

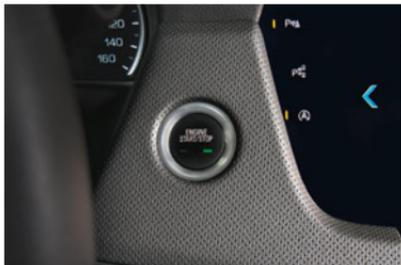

Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket in the center console storage area to enable the engine to start. Replace the transmitter battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal **NOT** depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START (IF EQUIPPED)

A fuel-saving stop/start system has been integrated with the engine. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read **AUTO STOP**. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read **OFF**.

The engine may remain running or restart if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current settings for the climate control or defog system have not been reached.
- The Auto Stop time is greater than 2 minutes.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **(A)** button left of the infotainment touch screen when the engine is running to turn off the system. The button indicator is not illuminated when the system is off.

The **(A)** is green on the instrument cluster when the system is active and is white when the system is not active.

See Driving and Operating in your Owner's Manual.

STEERING WHEEL CONTROLS

A. VOICE RECOGNITION

Push to Talk

Press to answer an incoming call or to use voice recognition with the OnStar, Bluetooth or infotainment system.

Press and hold to activate voice pass-thru/Siri® Eyes Free.

End Call/Mute

Press to end/decline a call or mute the audio system.

See your Infotainment System Manual.

B. CRUISE CONTROL/ ADAPTIVE CRUISE CONTROL♦

On/Off

SET– Set Speed

With Cruise Control on, press the SET– button to set the cruise speed.


RES+ Resume Speed

With Cruise Control on, press the RES+ button to resume the previous set speed.

Adjust Speed

With a cruise speed set, press the RES+ or SET– button to the first detent to increase or decrease the set speed by 1-mph increments; press to the second detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

♦ Optional equipment

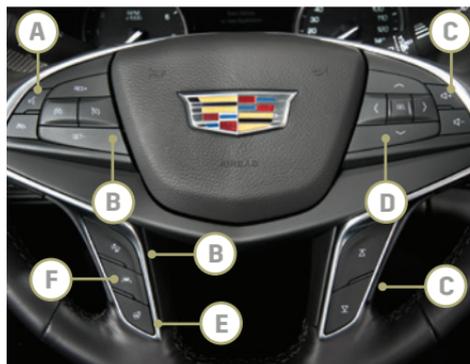

Cancel

Press to cancel cruise control without erasing the set speed from memory.

Press and hold to switch between regular cruise control and Adaptive Cruise Control♦.

When Adaptive Cruise Control is active, a green  indicator illuminates and the following gap is displayed.

Following Gap (Adaptive Cruise Control♦/ Forward Collision Alert♦)

Press to select a gap setting (the time between your vehicle and a detected vehicle) of Far, Medium, or Near.

See Driving and Operating in your Owner's Manual.

C. AUDIO CONTROLS

Volume

Press  or  to increase or decrease the volume.

Next/Previous

Press  or  to go to the next or previous favorite radio station or track.

See your Infotainment System Manual.

D. DRIVER INFORMATION CENTER CONTROLS

Left/Right

Press to view the left or right cluster display.

Up/Down

Press to scroll up or down through a menu.

SEL Select

Press to select a highlighted menu item.

E. HEATED STEERING WHEEL♦

On/Off

See Instruments and Controls in your Owner's Manual.

F. LANE KEEP ASSIST♦

On/Off

Press to turn Lane Keep Assist on or off.

See Driving and Operating in your Owner's Manual.

INSTRUMENT CLUSTER



Up-level cluster shown

CLUSTER DISPLAYS

Use the controls on the right side of the steering wheel to move through the different cluster display zones.

- ▶ Press the < or > to move between the display zones. Press the left < to exit a display menu.
- ▶ Press the ^ or v to move through the menus.
- ▶ Press the **SEL (Select)** button to open a menu or select a setting.



RECONFIGURABLE INSTRUMENT CLUSTER

The up-level cluster display layout can be changed.

1. Use the controls to view the Settings menu. Press **SEL (Select)**.
2. Scroll to view Display Theme. Press the > to view the themes.
3. Scroll to highlight the desired theme. Press **SEL**.
4. Press the < to exit the menu.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER



Base cluster shown

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information, including Info, Audio, Phone, Navigation, and Settings items. The DIC Info displays feature commonly used trip and fuel information, including a digital speedometer, trip displays and fuel range. The items in the Info displays can be selected in the Info Pages menu.

INFO PAGES MENU

1. Use the controls on the right side of the steering wheel to view the Settings menu on the cluster. Press **SEL (Select)**.
2. Scroll to view Info Pages. Press the > to view the pages.
3. Scroll to move through the list of possible info pages.
4. Press **SEL** to select or deselect an item.
5. Press the < to exit the menu.

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY ♦

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also may be displayed.



The HUD controls are located on the left side of the instrument panel.

HUD HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.

Hold down to turn off the display.

HUD Rotation

To adjust the angle of the HUD image to compensate for windshield variations, use the Driver Information Center controls to view the Options menu and select HUD Rotation.

See Instruments and Controls in your Owner's Manual.

♦ Optional equipment

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the **(P) Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.



See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR ♦

The rear camera mirror provides a wide angle camera view of the area behind the vehicle.

- ▶ Pull or push the lever (A) at the bottom of the mirror to turn the video display on or off.
- ▶ To adjust the brightness of the display, press and release the button (B) on the top back of the mirror without covering the light sensor. There are 5 brightness settings.



See Keys, Doors and Windows in your Owner's Manual.

INFOTAINMENT TOUCH SCREEN AND TOUCH PAD

Refer to your Owner's Manual for important safety information about using the infotainment system while driving.



Applications:
Touch the screen icon to access an application

Power/Mute:
Press and hold to turn the system On/Off; press to mute audio

VOLUME:
Touch the arrows or swipe your finger to adjust the volume

Home Screen

Additional Pages:
Touch to view additional pages of applications

Your CT6 offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access an item. You can use simple gestures on the touch screen just as you would on a tablet, such as tap, drag, pinch and spread, to interact with the infotainment system.



The touch pad integrated into the center console can be used to select features on the infotainment touch screen.

- ▶ Use a single finger on the touch pad to move the cursor around selectable elements on the touch screen. Press the touch pad to select or activate a highlighted item.
- ▶ Use 2 finger gestures to control features on a sourced area, such as to scroll up or down a list or to reveal a map.
- ▶ Use 3 finger gestures to activate the menu item on a list.

Handwriting Recognition can be used to input characters instead of picking them from the keyboard.

- ▶ Touch the globe button from the keyboard to open the Handwriting Recognition screen.

See your Infotainment System Manual.

INFOTAINMENT FEATURES

Use a Bluetooth or USB connection to link a smartphone, cell phone, USB flash drive or portable audio player/iPod® to the infotainment display. For assistance, call 1-855-428-3669 or visit my.cadillac.com/learn.

SETTING THE TIME

1. Touch **Settings** on the Home screen.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch + or – to adjust the hours, minutes, and AM or PM.
5. Touch < **Back** to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

STORING FAVORITE STATIONS

Mixed-audio favorites, including all radio station bands (AM, FM and SiriusXM♦), navigation, applications, and contacts can be stored in any order.

1. Display the desired radio station, navigation destination or contact.
2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button.
4. Repeat the steps to store another favorite item.

♦ Optional equipment

PORTABLE AUDIO DEVICES

Several USB ports and auxiliary input jacks are located in the vehicle.

- ▶ Connect an iPod®, iPhone®, MP3 player, or a USB flash drive to a USB port or auxiliary input jack.

- ▶ Touch **Audio**, and then **Media**.

until the connected device is shown. The system will read the device and build a list of voice commands. Search for music on-screen or by voice commands.



CADILLAC COLLECTION♦

In-vehicle apps — connecting to music, news, weather, travel information and more — are available for download to the radio through the Collection icon on the home page.

Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

TEXT MESSAGE ALERTS

Text message alerts play a text message over the audio system and allow a response with a preset message. The text messaging feature must be set up when the cell phone is paired. Messages can be viewed on the touch screen only when the vehicle is not moving. For more information, visit my.cadillac.com/learn.

- ▶ Touch **Text Inbox** to view the text message inbox.
- ▶ Touch the **speaker icon** to listen to a message.

See your Infotainment System Manual.

INFOTAINMENT FEATURES

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free (after pairing your Bluetooth-enabled phone), using the natural voice recognition system.

1. Press the  **Push to Talk** on the steering wheel.
 2. The radio will say “Command please,” followed by a beep.
 3. After the beep, say what you want it to do.
- **Phone (using your paired phone)** – Example command: “Call Amanda” or “Call 555-1212”
 - **Media Music Device Search (when connected to USB only)** – Example command: “Play artist [name]” or “Play song [name]”
 - **Radio control** – Example command: “Tune FM 104.3” or “Tune XM Classic Vinyl”
 - **Help** – Say “Help” for voice recognition assistance.

VOICE PASS-THRU/SIRI® EYES FREE

Voice Pass-Thru/Siri Eyes Free allows access to the voice recognition commands on a cell phone; i.e. Siri or Voice Command. See the cell phone manufacturer’s user guide to determine if the cell phone supports this feature.

- ▶ To activate Voice Pass-Thru/Siri Eyes Free, press and hold the  **Push to Talk** steering wheel button.

APPLE CARPLAY™ AND ANDROID AUTO™

Apple CarPlay or Android Auto capability allows use of select smartphone apps through the infotainment display. If available, a  Projection icon will appear on the home page.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible smartphone by plugging the phone USB cable into a USB data port. Use your device’s factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home screen.

For more information on using Apple CarPlay or Android Auto, call 1-855-428-3669 or visit my.cadillac.com/learn.

VALET MODE

- ▶ To lock/unlock the infotainment screen and the glove box, select Valet Mode under Settings and enter a passcode. It can be used when it’s desired that only an authorized user has access to personalized features.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.cadillac.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair Phone."
To use the touch screen, select Phone > Pair Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the touch screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See your Infotainment System Manual.

OVER-THE-AIR SOFTWARE UPDATES

The infotainment system can download and install vehicle software updates over a wireless internet connection, which can be accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a secured Wi-Fi hotspot. The system will prompt high priority updates to be downloaded and installed.

- ▶ To check for updates manually, go to Settings > Software Information > System Update. Follow the on-screen prompts.

Visit my.cadillac.com/learn for more information.

See Instruments and Controls in your Owner's Manual.

ONSTAR® WITH 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the infotainment screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, and system details and limitations.

See OnStar in your Owner's Manual.

WIRELESS CHARGING

The wireless charging system is located under the center console armrest. To check mobile device compatibility, visit my.cadillac.com/learn. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the mobile device face up on the symbol on the pad and aligned with the left edge of the pad.
4. The battery charging symbol will display on the infotainment screen. If not charging, remove the device for 3 seconds, and rotate it 180 degrees.

See Instruments and Controls in your Owner's Manual.

NAVIGATION



Enter a destination using the Single Line Destination feature. Approximate your desired destination and the system's auto-fill function will enter the necessary information.

1. Touch **Navigation** on the Home page.
2. Touch **Destination**.
3. Touch the desired destination option to plan a route. Enter the address or other information.
4. Touch ✓.
5. Select the desired name from the generated list.
6. Touch **Go**.

See your Infotainment System Manual.

VEHICLE PERSONALIZATION

Many vehicle features can be customized using the Settings menus on the infotainment system. The Settings menus may include Time and Date, Language, Valet Mode, Radio, Vehicle, Bluetooth, Voice, Display, Rear Camera, and Return to Factory Settings.

1. Touch **Settings** on the Home screen.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Touch **< Back** to exit each menu.



See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. A Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, the Driver Information Center displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

See your Infotainment System Manual.

MEMORY SEATS

SET MEMORY POSITIONS

 
With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power outside mirrors and power steering column to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound. Immediately press and hold button **1** until two beeps sound.



Repeat these steps using button **2** for a second driver.

To store driver's seat and power steering column positions for more clearance when exiting the vehicle, repeat steps 1 and 2 using the

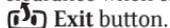

RECALL POSITIONS

- ▶ Press and hold button **1**, **2** or  **Exit** until the seat, mirrors and power steering column reach the previously set position.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned On/Off (for exit recall, the driver's door must be opened).

- ▶ To set the Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience.

See Seats and Restraints in your Owner's Manual.

POWER SEATS (PLATINUM MODEL)◆

Seat controls, a 4-way control pad with a Feature Select toggle control, and a massage button are located on the driver's door, front passenger's door and the rear seat armrest. Adjustment features are displayed on the front and rear infotainment screens.

FEATURE AND MESSAGE SELECTION

- ▶ With the ignition On, toggle the Feature Select control to display seat adjustment features and massage options.
- ▶ Use the 4-way control pad to make adjustments up, down, forward, or rearward to the selected feature or to select the massage type and intensity.
- ▶ Press the massage button to recall the last massage type and intensity.

See Seats and Restraints in your Owner's Manual.

AUTO HEATED SEATS/STEERING WHEEL◆ AND VENTILATED SEATS◆

When the vehicle is on, the auto heated seats and auto heated steering wheel or auto ventilated seats will be activated at the level required by the vehicle's interior temperature. The heated or ventilated seat level is shown on the seat control indicators. Turn off the heated or ventilated seats using the seat controls. Turn off the heated steering wheel using the steering wheel control.


- ▶ To turn the auto heated seats and auto heated steering wheel or auto ventilated seats feature on or off, go to Settings > Vehicle > Climate and Air Quality.

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS

FRONT CLIMATE CONTROLS

The climate control settings can be adjusted using the climate control buttons or the touch screen.

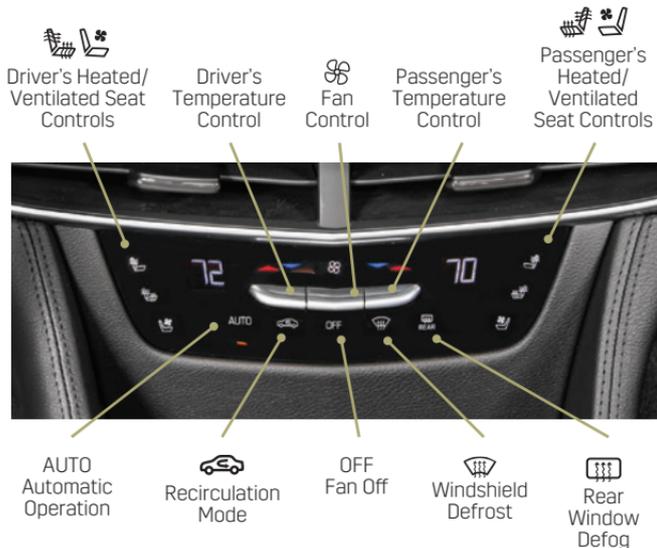

AUTOMATIC OPERATION

- ▶ Press **AUTO**. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. If the air delivery mode or fan speed is manually adjusted, automatic operation is turned off.

SYNC TEMPERATURE SETTINGS

- ▶ Touch **Climate Controls**, and then **SYNC**, on the touch screen to link all climate zone settings to the driver's settings.

REAR CLIMATE CONTROLS

The rear climate control settings can be adjusted using the rear climate control buttons on the rear of the center console or the touch screen.

- ▶ Touch the **Rear Climate Controls** icon on the touch screen and then touch **Controls Lockout** to lock/unlock the rear seat controls.



EXTERIOR LIGHTING



 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **IntelliBeam System**◆

Press the button on the end of the lever with the lamp control in the **AUTO** or  **Headlamps** position to turn the automatic high-beam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

◆ Optional equipment

WINDSHIELD WIPERS



HI Fast Wipes

LO Slow Wipes

AUTO Rainsense™ Sensitivity

Rotate the band to adjust the moisture sensitivity (with Rainsense enabled; go to Settings > Vehicle > Comfort and Convenience) or to adjust the delay between wipes (with Rainsense disabled).

Note: When entering an automatic car wash, move the wiper lever to the Off position.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield and activate the wipers.

 **Rear Camera Mirror Washer**◆

Push the lever away from you to spray washer fluid on the rear camera mirror lens.

See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety Alert Seat – The driver's seat pulses — left side, right side or simultaneously — to alert the driver of the direction of potential hazards.

- ▶ Audible alerts may be selected instead of Safety Alert Seat pulsing alerts. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

Forward Collision Alert – The  Vehicle Ahead indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ Press the  **Following Gap** button on the steering wheel to set the alert timing to Far, Medium, or Near.

Lane Keep Assist with Lane Departure Warning – The system may help avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and display an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the steering wheel.

Forward/Reverse Automatic Braking – The brakes may be applied automatically in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead or behind, and with some objects behind.

- ▶ To set Forward Automatic Braking to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Auto Collision Preparation.
- ▶ To set Reverse Automatic Braking to off, press the  **Parking Assist** button on the left side of the infotainment screen.

Lane Change Alert with Side Blind Zone Alert – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

Front Pedestrian Braking – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 ft. and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

DRIVER ASSISTANCE SYSTEMS

Night Vision – A thermal heat image of the view ahead displays on the instrument cluster when it is dark outside. An amber indicator displays when a pedestrian or animal is detected; and a red alert displays on the HUD and the Safety Alert Seat pulses or beeps sound (if selected) when approaching a pedestrian too quickly.

- ▶ To view the Night Vision image, use the Driver Information Center controls on the steering wheel to scroll through the center display zone until the image is shown.

Front and Rear Vision Camera – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the touch screen. After shifting from Reverse to Drive, a view of the area in front of the vehicle displays. Vehicle speed must be below 5 mph.

- ▶ Press the  Camera icon on the infotainment screen to activate the front cameras when the vehicle is in Drive.

Front and Rear Parking Assist – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center, the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses 5 times or beeps sound (if selected).

Rear Cross Traffic Alert – When the vehicle is in Reverse, the system warns of traffic coming in either direction by displaying a red alert on the touch screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

- ▶ To turn Parking Assist, Rear Cross Traffic Alert and Reverse Automatic Braking on or off, press the  **Parking Assist** button on the left side of the infotainment screen.

Automatic Safety Belt Tightening – The front safety belts automatically tighten during emergency braking or steering maneuvers, and release when driving conditions return to normal.

See Driving and Operating in your Owner's Manual.

AUTOMATIC PARKING ASSIST

Automatic Parking Assist steers the vehicle and applies the brakes at idle speed to help park in parallel and perpendicular spaces.

1. While in Drive, press the  **Automatic Parking Assist** button on the left side of the infotainment screen. A beep sounds and a parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button on the infotainment screen.
3. Once a space is found, shift the vehicle into Reverse or Drive as directed and follow the instructions on the infotainment screen. The vehicle automatically steers and brakes, moving at idle speed into a detected parking space. The driver must follow the instructions, select gears, and override braking and acceleration as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner's Manual.

SURROUND VISION

The Surround Vision system displays a bird's-eye view of the area surrounding the vehicle on the touch screen when the vehicle is in Reverse.

SURROUND VISION RECORDER

Views from the 360° camera views can be recorded to an SD card in the card reader located in the trunk.

- ▶ To activate or deactivate recording, touch Video Recorder on the infotainment screen, and then touch .

Once activated, the system will record until it has been turned off. The recorded video can be played when the vehicle is in Park.

See Driving and Operating in your Owner's Manual.

TAP SHIFT AUTOMATIC TRANSMISSION



The automatic transmission has paddle shifters on the steering wheel and a Manual mode that allows you to shift gears similar to a manual transmission.

- ▶ To temporarily take control of gear selection while in Drive (D), use either paddle behind the steering wheel. Automatic shifting returns after the accelerator pedal is held steady for 6 seconds.
- ▶ To enter Permanent Tap Shift Mode, move the shift lever to Manual (M). Use the paddles to manually shift the transmission. Shift to Drive to return to automatic shifting.
- ▶ In either mode, pull the right paddle to upshift or the left paddle to downshift. The current gear will be displayed on the instrument cluster.

If current speed is too high or too low for the requested gear, the shift will not occur. SHIFT DENIED will display on the instrument cluster.

Note: For information on using the paddle shifters for Regen on Demand on the CT6 PLUG-IN, refer to your CT6 PLUG-IN Convenience & Personalization Guide.

TRACTION CONTROL AND STABILITRAK® SYSTEMS

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck, and rocking the vehicle is required.

- ▶ Press the  **OFF Traction Control/StabiliTrak OFF** button on the center console. The  Traction Control Off light will illuminate on the instrument cluster. Press the button again to turn on traction control.

See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL

Driver Mode Control automatically adjusts the steering, suspension, and powertrain calibrations in real time.

- ▶ Press the **MODE** button on the center console to select the Tour (default at each ignition cycle), Sport, or Snow/Ice mode.



Note: For information on Driver Modes on the CT6 PLUG-IN, refer to your CT6 PLUG-IN Convenience & Personalization Guide.

See Driving and Operating in your Owner's Manual.

AUTOMATIC VEHICLE HOLD ◆

Automatic Vehicle Hold will hold the vehicle stationary after the brake pedal has been released and until the accelerator pedal is pressed. The indicator illuminates in green on the instrument cluster when the system is holding the vehicle.

- ▶ To turn the system on or off, press the **AUTO HOLD** button on the center console with the driver's safety belt fastened, the driver's door closed and the engine on.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR

The **(L) Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Refer to your Owner's Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.

HOOD RELEASE

- ▶ To open the hood, pull and release the hood release handle on the lower-left side of the instrument panel. Pull and release the handle again to fully open the hood. There is not a secondary latch under the hood.

See Vehicle Care in your Owner's Manual.

ULTRAVIEW SUNROOF ◆



OPEN/CLOSE THE SUNSHADES

- ▶ Press the **F Front Sunshade** switch on the overhead console to open or close the front sunshade.
- ▶ Press the **R Rear Sunshade** switch on the overhead console or rear doors to open or close the rear sunshade.
- ▶ Press the **Rear Window Sunshade** switch on the overhead console or rear doors to open or close the rear window sunshade.

OPEN/CLOSE THE SUNROOF

- ▶ Pull the **TILT** switch to vent the sunroof. Press the switch to close the sunroof.
- ▶ Fully pull the **SLIDE** switch to express-open the sunroof. Fully press the switch to express-close the sunroof.

See Keys, Doors and Windows in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

CADILLAC ONLINE OWNER CENTER

Create an account at my.cadillac.com for access to an online Owner Manual, helpful how-to videos, your service history and warranty status, OnStar reports (active OnStar account required), and more.

MYCADILLAC AND CT6 OWNER GUIDE APPS

The MyCadillac app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, OnStar Vehicle Diagnostic information, Roadside Assistance and more. The app also enables you to send remote commands, manage your Wi-Fi hotspot and data, and send destinations to the navigation system (vehicles must be properly equipped).



The CT6 Owner Guide app covers the operation of many of the features on your CT6, such as setting driver preferences, using the infotainment system and understanding how various safety systems work. It also provides access to many online resources and Cadillac's comprehensive owner benefits.



Visit my.cadillac.com/learn for more information. Download the mobile apps from your compatible mobile device's app store.

To learn more about OnStar services, press the blue OnStar button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

INFOTAINMENT SYSTEM SUPPORT

1-855-428-3669

For information or assistance operating the infotainment system, call Infotainment System Support or visit my.cadillac.com/learn.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2017 by General Motors. All rights reserved.

