



GETTING TO KNOW YOUR **2018 SILVERADO**



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Silverado. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.chevrolet.com/learn.


For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Memory Seat Controls* 4WD Control* Integrated Trailer Brake Control* Instrument Panel Illumination Control/ Exterior Lamp Control Turn Signal/Windshield Wipers Lever Driver Information Center Tow/Haul Button

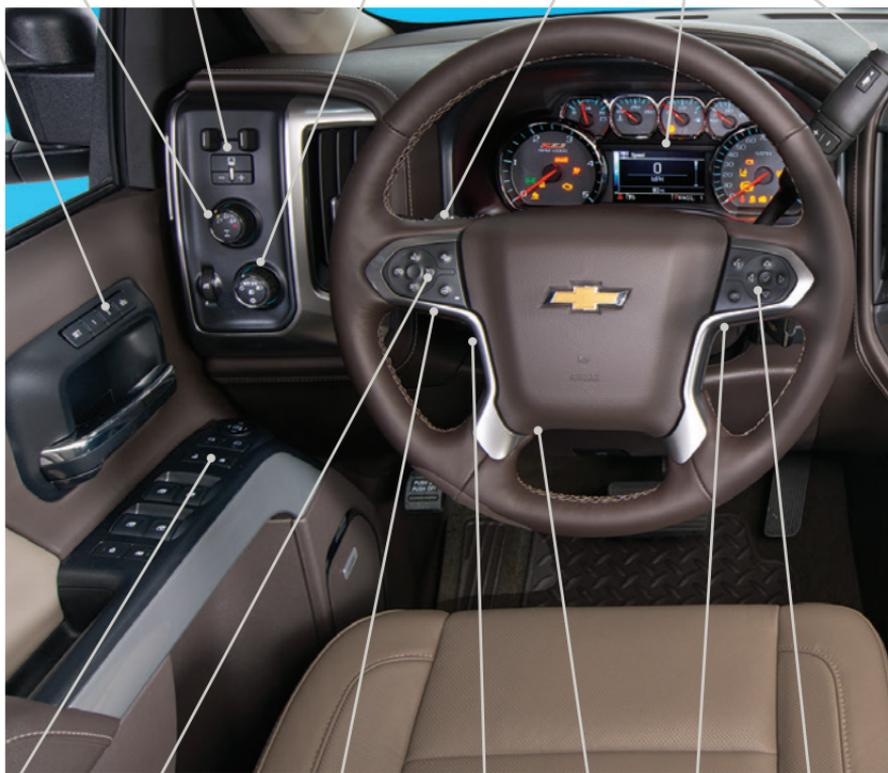

Power Mirror Control*/ Door Lock Switch/Window Buttons Cruise Control/ Collision Alert*/Heated Steering Wheel* Buttons Audio Next/ Previous Favorite Station Controls (behind steering wheel) Telescoping Steering Wheel Control* Tilt Steering Wheel Lever Audio Volume Controls (behind steering wheel) Voice Recognition Buttons/ Driver Information Center Controls

SYMBOLS

	Low Fuel		StabiliTrak Active		Hill Descent Control
	Traction Control Off		StabiliTrak Off		Diesel Exhaust Brake (diesel models only)
	BRAKE Brake System		Security		Lights On Reminder
	Cruise Control Set		Tow/Haul Mode		Airbag Readiness


Driver's Heated/
Vented Seat
Buttons♦

Infotainment
System (8-inch*
screen shown)♦

Climate
Controls♦

Passenger's
Heated/Vented
Seat Buttons♦

USB Port♦
(in glove box; LT and LTZ
bench seat models only)

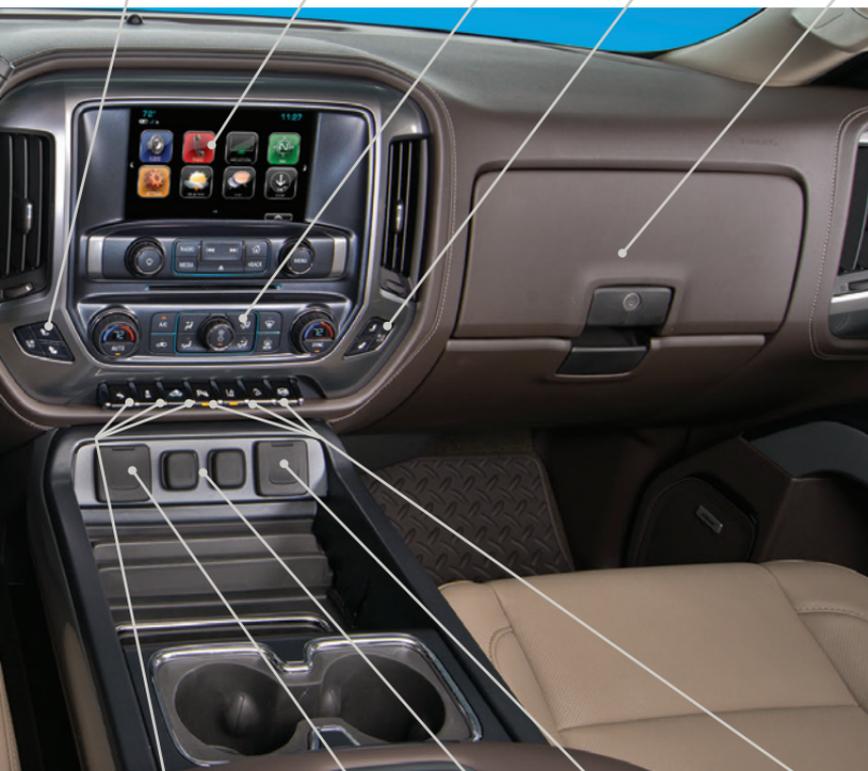

Adjustable Pedals
Switch*/Traction Control
and StabiliTrak Button/
Cargo Box Lamp Button

USB
Ports♦

Accessory
Power
Outlets♦

110V
Outlet♦

Front and Rear Parking Assist♦/
Lane Keep Assist♦(LD models)/
Lane Departure Warning♦(HD
models)/Hill Descent Control♦/Diesel
Exhaust Brake (if equipped) Buttons

Note: Diesel model shown.

-  Check Engine
-  Antilock Brake System
-  Low Tire Pressure
(single rear wheel
models only)

-  Door Ajar
-  Oil Pressure
-  Charging System
-  Safety Belt Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)◆

Unlock

Press to unlock the driver's door. Press again to unlock all doors and tailgate. Press and hold to lower all windows.

Lock

Press to lock all doors and tailgate.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start◆

Press and release the **Lock** button and then press and hold the **Remote Vehicle Start** button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes.
- Press and hold the **Remote Vehicle Start** button until the parking lamps turn off to cancel a remote start.

Note: If the remote start heated/vented seat option is selected, the heated/vented seat button indicators do not illuminate and the temperature performance of the unoccupied seat may be reduced during the remote start. The heated/vented seat turns off when the ignition is turned on.

See Keys, Doors and Windows in your Owner's Manual.

DOOR LOCKS

DOOR LOCKS

- ▶ To lock or unlock all doors, press the power door **Lock/Unlock** button, located on the front doors.

Note: To change the lock and unlock settings, go to Settings > Vehicle > Power Door Locks.

- ▶ To open a locked door from inside, pull the inside door handle to unlock the door and then pull the door handle again to open the door.
- ▶ To prevent passengers from opening a rear door (if equipped) from the inside or opening a rear window, press the **Rear Door Security Lock/Rear Window Lockout** button located on the driver's door. The button indicator will illuminate.

LOCKING TAILGATE

- ▶ To lock or unlock the tailgate, use the door key or the key fob◆.

See Keys, Doors and Windows in your Owner's Manual.

POWER MIRRORS◆

POWER MIRROR ADJUSTMENT

- ▶ Press the **Power Mirror Selector** switch to select the driver's or passenger's mirror; use the four-way control to adjust the mirror.

POWER FOLDING MIRROR

- ▶ Press the **Power Folding Mirror** button to fold or unfold the mirrors.

POWER SEATS

SEAT ADJUSTMENTS

A. Seat Cushion Adjustment


Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Move the rear control to adjust the lumbar support.

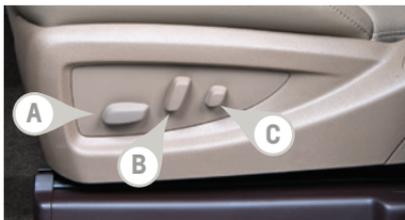

SET MEMORY POSITIONS

1. With the vehicle in Park, adjust the driver's seat, power outside mirrors and adjustable pedals to the desired positions.
2. Press and release the **SET** button and then press and hold button **1** on the driver's door until two beeps sound.
3. Repeat the steps using button **2** for a second driver.



SET EXIT POSITION

1. Adjust the driver's seat and adjustable pedals to the desired positions.
2. Press and release the **SET** button and then press and hold the **Exit** button on the driver's door until two beeps sound.

RECALL POSITIONS

- ▶ With the vehicle in Park and the ignition on, press and release button **1** or **2** or the **Exit** button to recall the stored position.
- ▶ At any time, press and hold button **1** or **2** on the driver's door until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- ▶ To set the Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience > Auto Memory Recall or Easy Exit Options.

See Seats and Restraints in your Owner's Manual.

HEAD RESTRAINTS

- ▶ To raise the head restraint, pull the head restraint up.
- ▶ To lower the head restraint, press the button on top of the seatback and push the head restraint down.

TILT/TELESCOPING* STEERING WHEEL

- ▶ With the vehicle in Park, pull the lever (A) on the left side of the steering column to adjust the tilt position of the steering wheel. The steering wheel can then be moved up or down. Release the lever to lock the steering wheel in place.
- ▶ With the vehicle in Park, push down the lever* (B) closer to the instrument panel on the left side of the steering column to move the steering wheel in or out. Pull up the lever to lock the steering wheel in place.



See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

3.5-INCH* DRIVER INFORMATION CENTER

Menu Items

- ▶ Turn the reset stem on the instrument cluster to scroll through the following menu items: Digital Speedometer, Trip Odometer, Fuel Range, Average Fuel Economy, Tire Pressure, Remaining Oil Life, Transmission Fluid Temperature, Trailer Brake, Hourmeter, and Units.



Reset an Item

- ▶ Press the reset stem to set a menu item or clear a message. Press and hold the stem to reset a menu item.

4.2-INCH* COLOR DRIVER INFORMATION CENTER*

Use the control pad on the right side of the steering wheel to view the Info (includes the trip odometers and fuel information), Audio, Phone, Navigation, and Settings menus.

Menu Items

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to move through the menus.
- ▶ Press ✓ to open a menu or select/deselect a setting. Press and hold to reset/clear an item.



See Instruments and Controls in your Owner's Manual.

LIGHTING

AUTOMATIC HEADLAMP SYSTEM

Rotate the knob to activate the exterior lights.

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps**♦

Press to turn the fog lamps on or off.



INSTRUMENT PANEL LIGHTING

 **Instrument Panel Brightness**

Rotate the thumbwheel to adjust the instrument panel lighting.

CARGO LAMP

 **Cargo Box Lamp**

With the vehicle in Park, press to turn the cargo lamp and under-rail pickup box lights♦ on or off. The button indicator will illuminate when the lights are on.



See Lighting in your Owner's Manual.

INTELLIBEAM SYSTEM♦ (LD MODELS ONLY)

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions when the lamp control is in the AUTO position and the system is activated, indicated by a green  indicator on the instrument cluster. A blue  indicator appears when the high-beam headlamps are on.

The system is turned off if the high/low-beam changer or the flash-to-pass feature is used.

▶ Activate the high/low-beam changer on and then off within 2 seconds to turn on the IntelliBeam system.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

CLIMATE CONTROLS



RECIRCULATION MODE

- ▶ Press  **Recirculation Mode** to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle.

Note: When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

See Climate Controls in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS



AUTOMATIC OPERATION

1. Press **AUTO**.
2. Set the temperature for the driver and front passenger. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature.

If the functions are manually adjusted, automatic operation is turned off.

RECIRCULATION MODE

- Press **Recirculation Mode** to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle.

Note: When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

SYNC TEMPERATURE SETTINGS

- Press **SYNC** to link the passenger's temperature setting to the driver's setting. If the passenger's setting is adjusted, the different passenger's temperature setting is displayed.

See Climate Controls in your Owner's Manual.

WINDSHIELD WIPERS

Rotate the band on the lever to activate the wipers.

 **Fast Wipes**

 **Slow Wipes**

 **INT Intermittent**

Adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

OFF

 **Single Wipe**

 **Washer Fluid**

Push the paddle forward to spray washer fluid on the windshield.



See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

 **Push to Talk**

Press to answer an incoming call or to use natural voice recognition with the audio, Bluetooth, navigation or OnStar system.

Press and hold to activate Voice Pass-Thru (Siri Eyes Free or Voice Command) on a paired, compatible cell phone.

 **End Call/Mute**

Press to end or decline a call.
Press to mute/unmute the vehicle speakers.

Volume
(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station
(behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station button shown. Volume button is located behind the right side of the steering wheel.

See your Infotainment System Manual.

CHEVROLET MYLINK RADIO WITH 7-INCH* COLOR SCREEN

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications:
Touch the screen
icon to access the
application



Home
page



SEEK
Previous radio
station or
track



Power/
Volume



SEEK
Next radio
station or
track



Press to view Phone screen
or answer a call/Press
and hold to access
Push to Talk

SETTING THE TIME

1. Touch Settings on the home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **◀BACK** to exit the menu.

STORING FAVORITES

Up to 25 AM, FM and SiriusXM[♦] radio stations can be stored, in any order, on up to five pages.

1. Tune in the desired radio station.
2. Touch the **<** or **>** button to display where the station is to be stored.
3. Touch and hold one of the preset screen buttons until a beep is heard.
4. Repeat the steps for each desired station.

For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

See Infotainment System in your Owner's Manual.

CHEVROLET MYLINK RADIO WITH 8-INCH* COLOR SCREEN


Refer to your Owner's Manual for important information about using the infotainment system while driving.



MANAGING HOME PAGE ICONS

1. Press the **Home** button.
2. To enter edit mode, touch and hold the home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.
4. Press the **Home** button to exit edit mode.

For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

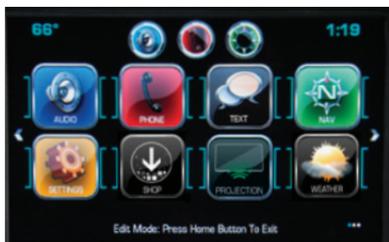

CHEVROLET MYLINK RADIO WITH 8-INCH* COLOR SCREEN

SETTING THE TIME

1. Touch Settings on the home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **BACK** to exit the menu.



STORING FAVORITES

Up to 60 radio stations from all bands (AM, FM or SiriusXM⁺), media (song, artist, album, and genre when connected to a USB port), phone contacts and navigation destinations⁺ can be stored in any order.

1. Select the desired radio station, media favorite, navigation destination or contact.
 2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
 3. Touch and hold one of the favorite screen buttons until a beep is heard, indicating it is stored.
 4. Repeat the steps to store another favorite item.
- To change the number of favorites displayed, go to Settings > Radio.

NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
(Example: "Call Amanda" or "Tune FM 104.3." Say "Help" for assistance.)

CHEVROLET SHOP

In-vehicle apps, connecting to music, news, weather, travel information and more, are available for download to the radio through the **SHOP** icon on the home page.

Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

PORTABLE AUDIO DEVICES

An accessory power outlet, dual USB ports and auxiliary jack are located in the center seat console (bench seat) or center console storage compartment (bucket seats).

- An iPod[®], iPhone[®], MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Chevrolet MyLink will read the device and build a list of songs. Search for music on-screen or by voice commands.
- Press the **MEDIA** button to select a portable device as the audio source.

See your Infotainment System Manual.

APPLE CARPLAY™ AND ANDROID AUTO™

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

See your Infotainment System Manual.

WIRELESS CHARGING

The Wireless Charging system is located on the storage tray on top of the center console. To check mobile device compatibility, visit my.chevrolet.com/learn. See your phone retailer for details on required phone accessories.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  symbol on the pad, aligned with the rear rib.
4. Move the device slowly until the battery charging symbol displays on the infotainment screen. If not charging, remove the device for 3 seconds and rotate it 180 degrees.

See your Infotainment System Manual.

ONSTAR® WITH 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet through the vehicle's built-in Wi-Fi hotspot.

- To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, details, and system limitations.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Bluetooth streaming audio is available with the MyLink system. For more information, visit my.chevrolet.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone," or

Use the **MENU** knob or the touch screen to select the **Phone** icon > **Phones** > **Pair Device**.

2. Start the pairing process on the phone. Locate Chevrolet MyLink on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, select Always Accept and Allow.



STREAMING AUDIO

- ▶ With a paired device connected via Bluetooth, press the **MEDIA** button until Bluetooth is displayed on the touch screen to stream audio from the device. Control audio operation using the device controls.

See your Infotainment System Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. A Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

See your Infotainment System Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the audio controls and menus or the touch screen buttons.

CHANGING VEHICLE SETTINGS

The Vehicle Settings menu may include Climate and Air Quality, Collision/Detection Systems, Comfort and Convenience, Lighting, Power Door Locks, and Remote Lock/Unlock/Start.

Use the **MENU** knob or the touch screen to:

1. Select Settings on the home page.
2. Select Vehicle.
3. Select the desired menu item.
4. Select the desired feature and setting. Settings are saved automatically.
5. Select **BACK** to exit each menu.



See Instruments and Controls in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the **On/Off** button. The **Cruise Control** symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button. The **Cruise Control** symbol will illuminate in green on the instrument cluster.



ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed.

When the system is active, press once to increase speed 1 mph; press and hold to continue increasing the speed.

SET- Set/Coast

When the system is active, press once to decrease speed 1 mph; press and hold to continue decreasing the speed.

Cancel

Press to cancel the cruise control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the cruise control.

The set speed is erased when cruise control or the vehicle ignition is turned off.

AUTOMATIC TRANSMISSION

RANGE SELECTION MODE

Range Selection Mode allows the driver to select the range of gears desired for the current driving conditions.

1. Move the shift lever to the L (Manual) position.
2. Press the **+** (plus) or **-** (minus) button (A) on the shift lever to select a lower or higher gear. The current gear is displayed next to the L on the Driver Information Center.



The transmission will be limited to the gear selected and lower gears. If vehicle speed is too high or too low for the requested gear, the shift will not occur.

TOW/HAUL MODE

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- ▶ Press the  **Tow/Haul Mode** button (B) on the end of the shift lever to turn the system on or off.

See Driving and Operating in your Owner's Manual.

INTEGRATED TRAILER BRAKE CONTROL (ITBC)

The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the Driver Information Center.



- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons on the control panel.
- ▶ Squeeze the levers together on the control panel (left lever does not move) to manually apply the trailer brakes.

See Driving and Operating in your Owner's Manual.

DIESEL EXHAUST BRAKE (DIESEL MODELS ONLY)

The engine exhaust brake enhances the vehicle brake system by using engine braking and automatically downshifting the transmission, depending on the length of time the brakes are applied, to help slow the vehicle on downhill grades.

- ▶ Press the  **Diesel Exhaust Brake** button on the center of the instrument panel to turn the system on or off.



See your Duramax Diesel Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

SAFETY ALERT SEAT ♦ – The driver's seat pulses – left side, right side, or simultaneously – to alert the driver of potential hazards.

- ▶ Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

FORWARD COLLISION ALERT ♦ – The  Vehicle Ahead indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ Press the  **Collision Alert** button on the left side of the steering wheel to set the alert timing to Far, Medium, Near, or Off.



LOW-SPEED FORWARD AUTOMATIC BRAKING ♦ (LD MODELS ONLY) – The brakes may be applied automatically in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Auto Collision Preparation.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING ♦ (LD MODELS ONLY) – The system may help avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.

- ▶ Press the  **Lane Keep Assist** button on the center of the instrument panel to turn the system on or off.

LANE DEPARTURE WARNING ♦ (HD MODELS ONLY) – When crossing a detected lane marking without using a turn signal in that direction, the system flashes an amber  indicator on the instrument cluster and the Safety Alert Seat pulses or beeps sound (if selected) on the side of the lane departure direction.

- ▶ Press the  **Lane Departure Warning** button on the center of the instrument panel to turn the system on or off.

REAR VISION CAMERA – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment system. Vehicle speed must be below 5 mph.

- ▶ To turn the Guidelines or Rear Park Assist Symbols on or off, go to Settings > Rear Camera.

DRIVER ASSISTANCE SYSTEMS

FRONT AND/OR REAR PARKING ASSIST † – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses 5 times or beeps sound (if selected).

- ▶ To turn the system on or off, press the  **Parking Assist** button on the center of the instrument panel.

See Driving and Operating in your Owner's Manual.

TRACTION CONTROL AND STABILITRAK SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the center of the instrument panel to turn traction control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL † (Z71)

Hill Descent Control sets and maintains vehicle speed from 2–14 mph while descending a steep incline in a forward or reverse gear.

1. Press the  **Hill Descent Control** button on the center of the instrument panel. Vehicle speed must be below 31 mph to enable the system. The Hill Descent Control symbol will illuminate on the instrument cluster.
2. Increase or decrease speed by applying the accelerator or brake pedal or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes when the system is actively applying the brakes to maintain vehicle speed.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR (SINGLE REAR WHEEL MODELS ONLY)

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed on the Driver Information Center.**

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure.

Refer to your Owner's Manual for information about normal monthly tire maintenance.

ROADSIDE ASSISTANCE

1-800-CHEV-USA
(1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP



The myChevrolet mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myChevrolet mobile app also enables users to send remote commands – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.chevrolet.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2017 General Motors. All rights reserved.



GENERAL MOTORS

84016526 A