



GETTING TO KNOW YOUR **2018 TAHOE/SUBURBAN**



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Tahoe/Suburban. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.chevrolet.com/learn. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Instrument Panel Illumination Control/Exterior Lamp Control

4WD Control

Integrated Trailer Brake Control

Traction Control and StabiliTrak/Front and Rear Parking Assist*/Lane Keep Assist*/Hill Descent Control*/Adjustable Pedals*/Power Assist Step* Buttons

Turn Signal/Windshield Wipers Lever

Driver Information Center



Cruise Control/Collision Alert*/Heated Steering Wheel* Buttons

Audio Next/Previous Favorite Station Controls (behind steering wheel)

Tilt/Telescopic* Steering Wheel Control

Voice Recognition Buttons/Driver Information Center Controls

Audio Volume Controls (behind steering wheel)

SYMBOLS



Low Fuel



Traction Control Off



Lane Keep Assist Warning



Vehicle Ahead

BRAKE Brake System



Cruise Control Set



StabiliTrak Active



StabiliTrak Off



Security



Tow/Haul Mode



Lights On Reminder



Airbag Readiness



Check Engine



Antilock Brake System



Low Tire Pressure



Door Ajar



Oil Pressure



Charging System



Safety Belt Reminder



Hill Descent Control

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner's Manual.

◆ Optional equipment

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB) ♦

Unlock

Press to unlock the driver's door.
Press again to unlock all doors.

Lock

Press to lock all doors.

Press and hold the **Lock/Unlock** buttons to automatically fold/unfold the power mirrors♦.

Note: To change the Auto Mirror Folding setting, go to *Settings > Vehicle > Comfort and Convenience*.

Liftglass ♦

Press twice to open the liftglass.

Power Liftgate ♦

Press twice to open or close the power liftgate.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.
Press and hold to activate the alarm.
Press again to cancel the alarm.

Remote Vehicle Start

Press and release the  **Lock** button and then press and hold the  button until the turn signal lamps flash (about 4 seconds) to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes.
- Remote Start can be extended once by repeating the remote start procedure.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.
- The heated/ventilated seats♦ will turn on during a remote start (if selected in the Vehicle Settings menu) when outside temperatures warrant.

Note: If a key fob is left in the vehicle when locking the vehicle, the Remote Left in Vehicle Alert may sound. To change the remote lock, unlock, and remote start settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start*.

See *Keys, Doors and Windows* in your Owner's Manual.

HANDS-FREE PROGRAMMABLE POWER LIFTGATE ♦

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the RKE transmitter twice.
- ▶ Press the  **Power Liftgate** knob on the overhead console.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the liftgate latch to close the liftgate.

HANDS-FREE OPERATION ♦

- ▶ To open or close the liftgate hands-free, kick your foot straight in and out under the center of the rear bumper. Do not swing your foot side-to-side. The Remote Keyless Entry transmitter must be within 3 feet of the liftgate.

PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the **Power Liftgate** knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate latch for 3 seconds. The turn signals will flash when the setting is saved.



See *Keys, Doors and Windows* in your Owner's Manual.

KEYLESS ENTRY SYSTEM

The Keyless Entry System enables operation of the doors and ignition without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

STARTING THE ENGINE

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine.

Note: The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory position.

See Driving and Operating in your Owner's Manual.

POWER FRONT SEATS

SEAT ADJUSTMENTS

A. Seat Cushion Adjustment

Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Move the rear control fore/aft to increase/decrease lumbar support or up/down to raise/lower the lumbar location.



SET MEMORY POSITIONS*

1. With the vehicle in Park and the ignition on, adjust the power driver's seat, power adjustable pedals*, power outside mirrors*, and power tilt/telescopic steering column* to the desired positions.
2. Press and release the **SET** button and then press and hold button **1** on the driver's door until two beeps sound.
3. Repeat the steps using button **2** for a second driver.



SET EXIT POSITION

1. With the vehicle in Park and the ignition on, adjust the power driver's seat, power adjustable pedals power*, and power tilt/telescopic steering column* to the desired positions.
2. Press and release the **SET** button and then press and hold the  Exit button on the driver's door until two beeps sound.

RECALL POSITIONS

- ▶ With the vehicle in Park and the ignition on, press and release button **1** or **2** or the  Exit button to recall the stored position.
- ▶ With the vehicle off or not in Park, press and hold button **1** or **2** or the  Exit button until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- ▶ To set the Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience > Auto Memory Recall or Easy Exit Options.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

FOLDING 2ND-ROW SEATS

The 2nd-row seats fold and tumble to provide more cargo space and access to the 3rd-row seats.

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Lift the lever on the lower outboard side of the 2nd-row seat. The seatback will fold forward.
3. Lift the lever again to tumble the seat forward.



POWER FOLDING 2ND-ROW SEATS*

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Press the  **Seat Release** button (A) on the panel behind the rear doors or the  **x2** button (B) in the rear cargo area to fold the seat forward. Press either button again to tumble the seat forward.



UNFOLDING 2ND-ROW SEATS

1. Pull down the seat until it latches to the floor.
2. Lift up the seatback until it locks in place.

FOLDING 3RD-ROW SEATS

The 3rd-row seats fold to provide more cargo space.

1. Lower the head restraint, unbuckle the safety belt, and make sure nothing is on the seat.
2. Lift the lever on the rear of the seat. The seatback will fold forward.



UNFOLDING 3RD-ROW SEATS

- ▶ Pull the strap on the rear of the seat to raise the seatback to the upright position.

POWER FOLDING/UNFOLDING 3RD-ROW SEATS*

1. With the vehicle in Park, lower the head restraint, unbuckle the safety belt, and make sure nothing is on the seat.
2. Press and hold the bottom of the  **Seat Release** button (C) in the rear cargo area to fold the seat flat.
3. Press and hold the top of the  button to raise the seatback.

DRIVER INFORMATION CENTER/CUSTOMIZABLE DRIVER DISPLAY◆

The Driver Information Center (DIC) or Customizable Driver Display on the instrument cluster displays a variety of vehicle information and warning messages.

Use the control pad on the right side of the steering wheel to select the Info (includes trip and fuel information), Audio, Phone, Navigation◆, and Settings menus.

CONTROLS

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to move through the menus.
- ▶ Press ✓ to open a menu or select/deselect a setting. Press and hold ✓ to reset a setting.

CHANGING DISPLAY THEMES

The Customizable Driver Display features three display themes: Standard, Technology, and Media. The style of the display will change depending on the selected theme.

1. Use the control pad to display the Settings menu.
2. Select Display Theme.
3. Select the desired theme.



Driver Information Center



Customizable Driver Display

See Instruments and Controls in your Owner's Manual.

REAR SEAT REMINDER

A chime may sound and a Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not directly detect objects in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed, indicating that there may be an item or passenger in the rear seat.

- ▶ To turn this feature on or off, go to Settings > Rear Seat Reminder.

See Seats and Restraints in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

HEAD-UP DISPLAY◆

The Head-Up Display (HUD) projects some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image on the windshield. It cannot be adjusted side-to-side.

INFO

Press to select a display view.



Lift up or press down to brighten or dim the display. Hold down to turn off the display.



See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition◆ with the audio, Bluetooth◆ or navigation◆ system.

Press and hold to activate voice pass-thru or Siri® Eyes Free◆.

End Call/Mute

Press to end or reject a call.

Press to mute/unmute the vehicle speakers.

Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station

(behind left side of steering wheel)

Press the top or bottom button to display the current station or track. Press the top or bottom button again to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station button shown. Volume button is located behind the right side of the steering wheel.

See your Infotainment System Manual.

CHEVROLET MYLINK RADIO WITH 8-INCH* COLOR SCREEN


Refer to your Owner's Manual for important information about using the infotainment system while driving.



MANAGING HOME PAGE ICONS

The home page icons (A) can be arranged in any order.

1. Press the Home button.
2. To enter edit mode, touch and hold the home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.
4. Press the Home button to exit edit mode.

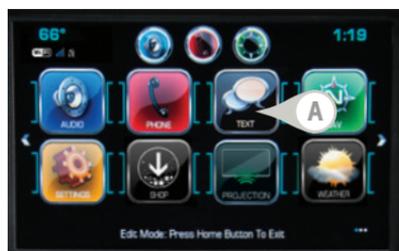

CHEVROLET MYLINK RADIO WITH 8-INCH* COLOR SCREEN

STORING FAVORITES

Up to 60 radio stations from all bands (AM, FM or XM[†]), media (song, artist, album, and genre with device connected to a USB port), phone contacts and navigation destinations[†] can be stored in any order.

1. Select the desired radio station, media favorite, navigation destination or contact.
 2. Touch and drag up the  **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
 3. Touch and hold one of the favorite screen buttons until a beep is heard, indicating it is stored.
 4. Repeat the steps to store another favorite item.
- To change the number of favorites displayed, go to Settings > Radio.

NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
(Example: “Call Amanda” or “Tune FM 104.3.” Say “Help” for assistance.)

CHEVROLET SHOP

In-vehicle apps – connecting to audio, weather, travel information and more – are available for download to the radio through the SHOP icon on the home page.

Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle’s OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

VOICE PASS-THRU AND SIRI® EYES FREE

Voice pass-thru allows access to the voice recognition commands on a paired cell phone; i.e. Siri® Eyes Free or Voice Command.

- To activate voice pass-thru, press and hold the  **Push to Talk** steering wheel button.

TEXT MESSAGE ALERTS

Text message alerts play a text message over the audio system and allow a response with a preset message. The text messaging feature must be set up when the cell phone is paired. Messages can be viewed on the infotainment screen only when the vehicle is not moving.

- Touch  **Text** to view the text message inbox.

For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. **Not all devices will support all functions.** Bluetooth streaming audio is available with the MyLink system. For more information, visit my.chevrolet.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone," or use the **MENU** knob or the infotainment screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

STREAMING AUDIO

- ▶ With a paired device connected via Bluetooth, press the **MEDIA** button until Bluetooth is displayed on the touch screen to stream audio from the device. Control audio operation using the device controls. For full control of the device, connect it to a USB port.

See your Infotainment System Manual.

WIRELESS CHARGING◆

The Wireless Charging system for mobile devices is located on the storage tray on top of the center console. To check mobile device compatibility, visit my.chevrolet.com/learn. See your phone retailer for details on required phone accessories.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  symbol on the pad, aligned with the rear rib.
4. Move the device slowly until the battery charging symbol displays on the infotainment screen. If not charging, remove the device for 3 seconds and rotate it 180 degrees.

See Instruments and Controls in your Owner's Manual.

TEEN DRIVER MODE

Teen Driver Mode allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. A Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver Mode settings, or access the Report Card, go to Settings > Teen Driver.

APPLE CARPLAY™ AND ANDROID AUTO™

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

See your Infotainment System Manual.

ONSTAR® 4G WI-FI HOTSPOT

With the vehicle's built-in 4G Wi-Fi® hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet using OnStar's 4G LTE signal.

- ▶ To retrieve the SSID and password for the hotspot, press the  **OnStar Voice Command** button on the rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance, press the blue **OnStar** button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability and system limitations.

See your Infotainment System Manual.

REAR SEAT INFOTAINMENT SYSTEM

The system includes a Blu-ray/DVD/CD player, two USB ports, HDMI/MHL input, wireless digital headphones (2-channel), and a remote control.

- ▶ Press the release button to open the video screen. Push up the screen when not in use. The screen turns on/off automatically.
- ▶ Use the remote control to select the same or a different source for each screen from the rear seats.
- ▶ To access the Rear Seat Infotainment controls from the front seat, select Video on the Home page.



See your Infotainment System Manual.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the audio controls and menus or the touch screen buttons♦.

CHANGING VEHICLE SETTINGS

The Vehicle Settings menu may include Climate and Air Quality, Collision/Detection Systems, Comfort and Convenience, Lighting, Power Door Locks, and Remote Lock/Unlock/Start.

Use the **MENU** knob or the touch screen to:

1. Select **Settings** on the home page.
2. Select **Vehicle**.
3. Select the desired menu item.
4. Select the desired feature and setting. Settings are saved automatically.
5. Select **BACK** to exit each menu.



See *Instruments and Controls* in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

SAFETY ALERT SEAT♦ – The driver's seat pulses – left side, right side, or simultaneously – to alert the driver of potential hazards.

- ▶ Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

FORWARD COLLISION ALERT♦ – The  Vehicle Ahead indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ Press the  **Collision Alert** button on the left side of the steering wheel to set the alert timing to Far, Medium, or Near. The setting is displayed on the Driver Information Center.
- ▶ To set the Forward Collision Alert and Forward Automatic Braking systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.



DRIVER ASSISTANCE SYSTEMS

FORWARD AUTOMATIC BRAKING † – The brakes may be applied automatically in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead.

- ▶ To set the Forward Automatic Braking and Forward Collision Alert systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING † – The system may help avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.

- ▶ Press the  Lane Keep Assist button on the left side of the instrument panel to turn the system on or off.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT † – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

REAR VISION CAMERA – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment system. Vehicle speed must be below 5 mph.

- ▶ To turn the Rear Vision Camera Guidelines or Rear Park Assist Symbols on or off, go to Settings > Rear Camera.

REAR CROSS TRAFFIC ALERT † – When the vehicle is in Reverse, the system warns of traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

FRONT[†] AND REAR PARKING ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses 5 times or beeps sound (if selected).

- ▶ To turn the system on or off, press the  Parking Assist button on the left side of the instrument panel.



AUTOMATIC CLIMATE CONTROLS

- AUTO Driver's Temp. Control/ Automatic Operation
- A/C/  Air Conditioning Control/ Recirculation Mode
-  Vent Mode/ Floor Mode
-  Fan Speed Control/ On/Off
-  Defog Mode/ Bi-level Mode
-  Defrost Mode/ Rear Window/ Outside Mirror Defogger
- SYNC Passenger's Temp. Control/ Link setting to driver's setting



-  Driver's Heated/ Ventilated Seat Buttons
-  Rear Power Control
- AUTO Rear Automatic Operation
-  Rear Fan Speed
-  Rear Air Delivery
- Rear Temperature
- R CTRL  Rear Control Lock-out
-  Passenger's Heated/ Ventilated Seat Buttons

AUTOMATIC OPERATION

1. Press **AUTO**.
2. Set the temperature. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature.

If the functions are manually adjusted, automatic operation is turned off.

SYNC TEMPERATURE SETTINGS

- Press **SYNC** to link the passenger's and rear climate temperature settings to the driver's setting. When the passenger's or rear climate setting is adjusted, the different temperature setting is displayed.

REAR CLIMATE CONTROLS

- Press the  **Power** button to turn the rear climate controls on/off.
- Press the **R CTRL**  button to lock out the rear controls. Rear climate control operation is controlled using the front controls.

See Climate Controls in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Rotate the band on the lever to activate the wipers.

 **Fast Wipes**

 **Slow Wipes**

 **INT Intermittent**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

 **AUTO – Rainsense™ On/Off**

Press to have the wipers operate automatically when moisture is detected on the windshield. Rotate the INT band to adjust the sensitivity setting.

OFF

 **Single Wipe**

 **Washer Fluid**

Push the paddle forward to spray washer fluid on the windshield.



REAR WIPER

Slide the switch to activate the rear wipers.

OFF

INT Intermittent

ON

See Instruments and Controls in your Owner's Manual.

LIGHTING

DOME LAMPS

OFF

Press to turn off the lamps at all times, even when a door is open.

DOOR

Press to have the lamps turn on automatically when a door is open.

ON

Press to turn on all dome lamps.

INSTRUMENT PANEL LIGHTING

 **Instrument Panel Brightness**

Rotate the thumbwheel on the left side of the instrument panel to adjust the instrument panel lighting.



See Lighting in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed.

When the system is active, press once to increase speed 1 mph; press and hold to continue increasing speed.

SET- Set/Coast

When the system is active, press once to decrease speed 1 mph; press and hold to continue decreasing speed.

Cancel

Press to cancel the cruise control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the cruise control.

The set speed is erased when cruise control or the vehicle ignition is turned off.



ADAPTIVE CRUISE CONTROL

Adaptive Cruise Control enhances traditional cruise control by maintaining a driver-selected following gap between your vehicle and a vehicle detected directly ahead. Once a speed is set, the vehicle will maintain the selected gap distance by braking or accelerating.

When a slower vehicle is detected ahead, the  Vehicle Ahead symbol is displayed and the vehicle brakes moderately to maintain the selected following gap. If driver action is required, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected).

SELECTING THE FOLLOWING GAP

- ▶ Press the  **Follow Distance Gap** button (also the Forward Collision Alert  setting) on the left side of the steering wheel to set a following gap of Far, Medium or Near.

See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL

Hill Descent Control sets and maintains vehicle speed from 2–14 mph while descending a steep incline in a forward or reverse gear.

1. Press the  **Hill Descent Control** button on the left side of the instrument panel. Vehicle speed must be below 31 mph to enable the system. The Hill Descent Control symbol will illuminate on the instrument cluster.
2. Increase or decrease speed by applying the accelerator or brake pedal, or use the Cruise Control +/- buttons. The adjusted speed becomes the new set speed. The  symbol flashes when the brakes are being applied to maintain vehicle speed.

See Driving and Operating in your Owner's Manual.

TRACTION CONTROL AND STABILITRAK SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the left side of the instrument panel to turn traction control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner's Manual.

INTEGRATED TRAILER BRAKE CONTROL (ITBC)

The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the Driver Information Center.

- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons on the control panel.
- ▶ Squeeze the levers together (left lever does not move) on the control panel to manually apply the trailer brakes.



See Driving and Operating in your Owner's Manual.

TOW/HAUL MODE

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- ▶ Press the  **Tow/Haul Mode** button on the end of the shift lever to turn the system on or off.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed on the Driver Information Center.**

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure.

Refer to your Owner's Manual for information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA
(1-800-243-8872)

TTY Users: 1-888-889-2438

 
As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP



The myChevrolet mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, vehicle diagnostic information and Roadside Assistance.

The myChevrolet mobile app also enables users to send remote commands – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.chevrolet.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2017 General Motors. All rights reserved.



GENERAL MOTORS

84016529 A