



GETTING TO KNOW YOUR **2018 TRVERSE**



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Traverse. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.chevrolet.com/learn.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Memory
Seat
Buttons

Cruise Control/
Forward Collision
Alert/Heated Steering
Wheel Buttons

Turn Signal
Lever/
IntelliBeam
Control

Driver
Information
Center

Voice Recognition
Buttons/Driver
Information Center
Controls

Windshield
Wipers
Lever



Power
Mirror/
Window
Switches

Power
Liftgate
Control

Instrument
Panel/
Exterior
Lamp
Controls

Audio Next/
Previous Favorite
Station Controls
(behind steering
wheel)

Steering
Wheel
Adjustment
Control

Audio Volume
Controls
(behind
steering wheel)

Engine
Start/Stop
Button

SYMBOLS

	Low Fuel		StabiliTrak Off		Lights On Reminder
	Traction Control Off		Forward Collision Alert		Airbag Readiness
	BRAKE Brake System		Security		Engine Oil Pressure
	Cruise Control		Electric Parking Brake		Check Engine
	Adaptive Cruise Control		Service Electric Parking Brake		Lane Keep Assist

Hazard
Warning
Flashers
Button

Infotainment
System Touch
Screen

Infotainment
System
Controls

Storage
Compartment/
USB Port (behind
touch screen)♦

Climate
Controls



Driver's
Heated/
Vented Seat
Buttons♦

Electric
Parking
Brake
Switch

Driver Mode
Control/Traction
Control-StabiliTrak
Off Button/
Lane Keep Assist
Button♦

Shift
Lever

Wireless
Charging
Pad♦

USB Ports/
Accessory
Power Outlet

Passenger's
Heated/
Vented Seat
Buttons♦



Vehicle Ahead



Pedestrian Ahead



Antilock Brake System



Low Tire Pressure



StabiliTrak Active



Door Ajar



Charging System



Driver Safety Belt
Reminder



Passenger Safety Belt
Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER

Lock

Press to lock all doors.

Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.

Power Liftgate[†]

Press twice to open or close the liftgate. Press once to stop power liftgate operation.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold to activate the alarm.

Press again to cancel the alarm.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

Remote Vehicle Start[†]

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes. Repeat the steps for an additional 10 minutes.
- To cancel a remote start, press and hold the  button until the parking lamps turn off.

Key Release

In case of loss of vehicle power, press the button on the side of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM[†]

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of a front door or the trunk.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The button indicator will be green.



Note: If the transmitter battery is weak, place the transmitter in the pocket in the center console storage compartment to enable the engine to start. Replace the transmitter battery as soon as possible.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button.


ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The button indicator will be amber.

See *Driving and Operating* in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving engine stop/start system automatically stops and restarts the engine to help conserve fuel. The system may turn off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system, climate controls and other accessories will continue to operate. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

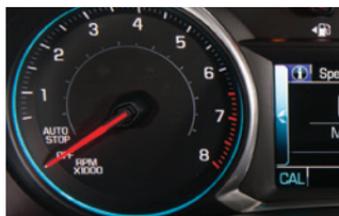

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time is greater than 2 minutes.

See *Driving and Operating* in your Owner's Manual.

POWER FRONT SEATS

SEAT CONTROLS

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.



MEMORY SEATS

1. Adjust the seat, power outside mirrors and power steering wheel.

2. Press and release the **SET** button; a beep will sound.

3. Immediately press and hold button 1 or 2 until two beeps sound.

► To save a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button.



RECALL MEMORY POSITIONS

► Press and hold button 1, 2, or  **Exit** until the saved position is reached.

The memory/exit positions can be programmed to be recalled automatically.

► To set the Auto Memory Recall or Easy Exit options, go to Settings > Vehicle > Comfort and Convenience.

See Seats and Restraints in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

► With the vehicle parked, push down the lever or use the power control under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.



See Instruments and Controls in your Owner's Manual.

REAR SEATS

ENTER OR EXIT THE 3RD-ROW SEATS

1. Remove anything on the 2nd-row seat or the floor in front of or behind the seat.
2. On the passenger-side seat, pull the handle on top of the seatback (bench seat only) or on the side of the seatback (A) and pull the seat forward.
3. After entering/exiting, move the seatback rearward until it locks in place.

Note: The 2nd-row passenger-side seat can be moved for 3rd-row entry/exit with a forward facing child seat installed. Remove a rearward facing child seat before moving the 2nd-row seat.



RECLINE THE 2ND-ROW SEATBACKS

- ▶ While seated, pull the lever on the side of the seat cushion (B) and move the seatback to the desired position.



SLIDE THE 2ND-ROW SEATS

- ▶ Lift the bar under the seat cushion (C) to slide the seat forward or rearward.

FOLD THE 2ND-ROW SEATS

1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever on the side of the seat cushion (B) and fold the seatback forward.
3. To raise the seatback, lift it up until it locks in place.

FOLD THE 3RD-ROW SEATS

1. Adjust the 2nd-row seat to allow the 3rd-row seat to fold fully flat.
2. Remove anything on or under the 3rd-row seat.
3. Use the Remote Keyless Entry transmitter door key in the mini-buckle slot to disconnect the mini-latch of the center safety belt and stow the mini-latch in the headliner.
4. Pull the release strap to release the seatback and fold the seatback forward or press the power seatback switches† on the passenger's side of the rear cargo area.

REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect objects in the rear seat; instead, under certain conditions, it detects when a rear door has been opened, indicating that there may be something in the rear seat.



POWER LIFTGATE◆

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the Power Liftgate knob on the driver's door.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the pull handle to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

- ▶ Turn the Power Liftgate knob to the 3/4 mode position.
- ▶ Open the liftgate.
- ▶ Adjust the liftgate manually to the desired height.
- ▶ To save the setting, press and hold the button next to the liftgate pull handle until the turn signals flash and a beep sounds.

HANDS-FREE OPERATION◆

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The RKE transmitter must be within 3 feet of the liftgate.

PROJECTED LOGO◆

The vehicle logo is projected on the ground near the rear bumper, indicating the kicking motion location for hands-free operation, when an RKE transmitter is detected within 6 feet of the liftgate or hands-free operation has occurred. The logo is shown for 1 minute, depending on operating conditions.



See *Keys, Doors and Windows* in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM◆

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See *Instruments and Controls* in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

DIC CONTROLS

Use the controls on the right side of the steering wheel to select the Info (includes trip and fuel information), Audio, Phone, Navigation, and Options menus.

- ▶ Press the ◀ or ▶ button to move between the display zones. Press the ◀ button to go back to the previous screen.
- ▶ Press the ▲ or ▼ button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.



INFO PAGES MENU

1. Use the controls to display the Options menu. Press ✓.
2. Scroll to display Info Pages. Press ▶ to view the items.
3. Select Edit List and press ▲ or ▼ to scroll through the list of items.
4. Press ✓ to select or deselect an item to display.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Voice Pass-Thru (Siri or Voice Command) on a paired, compatible cell phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

+ - Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station button shown

INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications:
Touch the screen
icon to access
the application



Home
page

SEEK
Previous radio
station or track

Power/
Volume

SEEK
Next radio
station or
track

Press to
answer a call
or view Phone
screen
(7-inch*
screen)

Press to
open storage
compartment*
(8-inch*
screen)

CHEVROLET MYLINK

Chevrolet MyLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®, and offers hands-free voice control. For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM*) can be stored in any order.

1. Tune in the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite station.

INFOTAINMENT SYSTEM

NATURAL VOICE RECOGNITION*

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
 - Example Phone command (using your paired phone): “Call Amanda” or “Dial 555-1212”
 - Example Media Music Device Search command (when connected to USB only): “Play artist [name]” or “Play song [name]”
 - Example Radio command: “Tune FM 104.3” or “Tune XM Classic Vinyl”
 - Help: Say “Help” for voice recognition assistance

CHEVROLET SHOP

In-vehicle apps – connecting to music, news, weather, travel information and more – are available for download to the infotainment system through the SHOP icon on the home page. Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle’s OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

APPLE CARPLAY™ AND ANDROID AUTO™

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your phone by plugging the compatible phone USB cable into a USB data port. Use your device’s factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.



PORTABLE AUDIO DEVICES

An iPod®, iPhone®, MP3 Player, a USB flash drive or a portable USB hard drive can be connected to a USB data port located at the front of the center console or inside the center console storage compartment.

- ▶ Touch the **Audio** screen button to select a portable device as the audio source.

The USB ports on the rear of the center console are for charging only.

Visit my.chevrolet.com/learn for more information about the infotainment system.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.chevrolet.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone."
To use the screen buttons, touch the Phone icon and then select Pair or Search Device.
2. Start the pairing process on the phone. Locate your vehicle or Chevrolet MyLink on the phone.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Depending on the phone, your phone book may be downloaded automatically.

See *Infotainment System in your Owner's Manual*.

ONSTAR® WITH 4G LTE AND WI-FI®

With the vehicle's built-in Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet using OnStar's 4G LTE signal.

- ▶ To retrieve the SSID and password for the hotspot, go to Settings > Wi-Fi > Manage Wi-Fi Networks > Information icon; or press the **OnStar Voice Command** button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the infotainment screen.

For assistance, press the blue **OnStar** button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, details, and system limitations.

See your *Infotainment System Manual*.

TEEN DRIVER◆

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. A Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, the Driver Information Center displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

See your *Infotainment System Manual*.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the Settings menus and the touch screen buttons. The Settings menus may include Time and Date, Rear Seat Reminder, Language, Valet Mode, Teen Driver, Radio, Vehicle, Bluetooth, Apple CarPlay, Android Auto, USB Auto Launch, Voice, Display, Rear Camera, Return to Factory Settings, Software Information, and Wi-Fi.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press **<BACK** to exit each menu.



See Instruments and Controls in your Owner's Manual.

WIRELESS CHARGING

The Wireless Charging system is located at the front of the center console. To check device compatibility, visit my.chevrolet.com/learn. See your phone retailer for details on required phone accessories.

1. The vehicle must be on, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  on the pad.
4. The charging symbol will appear on the infotainment screen when charging. If not charging, remove the device for 3 seconds and rotate it 180 degrees.



See Instruments and Controls in your Owner's Manual.

AUTOMATIC TRANSMISSION

Electronic Range Select Mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving on a downhill grade or towing a trailer.

- ▶ Move the shift lever to L (Low).
- ▶ Press the **+** (plus) or **-** (minus) button on the shift lever to increase or decrease the gear range available. The current gear will be displayed on the Driver Information Center.



If vehicle speed is too high or too low for the requested gear, the shift will not occur.

TRACTION SELECT

The Traction Select system automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions.

- ▶ Rotate the Driver Mode Control knob on the center console to select:

/1 Tour (front-wheel drive models) or

/2 Tour (AWD models)

/4 All-Wheel Drive (AWD models)

* Snow (front-wheel drive models)

Off-Road (AWD models)

Tow/Haul



The AWD indicator will illuminate when an all-wheel drive mode is selected.

Note: The modes displayed vary depending on vehicle equipment.

See *Driving and Operating in your Owner's Manual*.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the **On/Off** button. The Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** position to set the speed. The **SET-** symbol will illuminate in green.



ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

SET- Set/Coast

When active, press to decrease speed.

Cancel

Press the **Cancel** button, or press the brake pedal, to cancel the cruise control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL

The system maintains the set speed and a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically.

- ▶ Press the **Following Gap** button to select a gap setting of Far, Medium or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the **Cancel** button to switch between regular cruise control and Adaptive Cruise Control.

DRIVER ASSISTANCE SYSTEMS

TRACTION CONTROL AND STABILITRAK® – The full-time Traction Control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction Control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn Traction Control on or off, press the  **Traction Control/StabiliTrak Off** button on the center console.

FORWARD COLLISION ALERT♦ – The  Vehicle Ahead indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near. The setting is displayed on the Driver Information Center.

FOLLOWING DISTANCE INDICATOR♦ –

The following distance is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

FORWARD AUTOMATIC BRAKING♦ –

The brakes may be applied automatically in potential collision situations to help reduce damage or help avoid collisions with detected vehicles directly ahead.

- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.



FRONT PEDESTRIAN DETECTION♦ – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 feet and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and beeps sound. The system may prepare the brakes or automatically brake the vehicle.

- ▶ To set the system to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT♦ – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help avoid collisions due to unintentional lane departures. The Lane Keep Assist indicator is green on the instrument cluster if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber indicator.

If active driver steering is not detected, the amber indicator may flash and 3 beeps may sound on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the Lane Keep Assist button on the center console.

REAR VISION CAMERA – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. Vehicle speed must be below 5 mph.

- ▶ To turn the guidelines on or off, go to Settings > Rear Camera.

SURROUND VISION – The Surround Vision system displays a bird's-eye view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 5 mph.

- ▶ To switch to the front or rear camera view, touch the front or rear camera button at the bottom of the infotainment screen.



REAR PARKING ASSIST – During low-speed parking maneuvers, “distance to closest object” information is provided on the Driver Information Center. A beep sounds when an object is detected and 5 beeps sound when an object is very close.

REAR CROSS TRAFFIC ALERT – When the vehicle is in Reverse, the system warns of traffic coming in either direction by displaying a red alert on the infotainment screen and sounding beeps from the left or right side of the vehicle.

- ▶ To turn Rear Parking Assist and Rear Cross Traffic Alert on or off, go to Settings > Vehicle > Collision/Detection Systems.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR

The rear camera mirror provides a wide angle view of the area behind the vehicle.

- ▶ Pull or push the lever at the bottom of the mirror to turn the video display on or off.
- ▶ To adjust the brightness of the display, press and release the button on the top back of the mirror without covering the light sensor. There are 5 brightness settings.

See Keys, Doors and Windows in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS



AUTOMATIC OPERATION

- ▶ Press **AUTO**.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning, and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, automatic operation for that function is turned off.

REAR CLIMATE CONTROLS

The rear climate control settings can be adjusted using the control panel on the rear of the center console or the rear climate display on the infotainment screen.

- ▶ To lock/unlock the rear controls from the front seat, select Rear Control Lockout on the infotainment screen.

See Climate Controls in your Owner's Manual.

SUNROOF/SUNSHADE

- ▶ Press and release the **SLIDE** switch to express-open the sunroof.
- ▶ Press and release the **Close** switch to express-close the sunroof.
- ▶ To open the sunshade, press the latch button on the handle while pushing up to unlatch it.
- ▶ To close the sunshade, pull the handle forward until it latches.

See Keys, Doors and Windows in your Owner's Manual.

EXTERIOR LIGHTING

EXTERIOR LAMP CONTROLS

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps***

INTELLIBEAM SYSTEM*

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ To turn the IntelliBeam system on or off, press the  button on the turn signal lever with the lamp control in the AUTO or  Headlamps position.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph. The system is turned off if the fog lamps are turned on.



See Lighting in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the wiper lever.

HI Fast wipes

LO Slow wipes

INT Intermittent wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1X Single wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.



REAR WINDOW WIPER

Turn the end of the wiper lever.

OFF

INT Intermittent
ON

 **Rear Washer Fluid**

Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the (P) **Parking Brake** switch on the center console.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.

See *Driving and Operating* in your Owner's Manual.

CARGO STORAGE

UNDERFLOOR REAR CARGO STORAGE

Lift up the rear cargo floor for additional storage space.

Remove the storage bin to access the spare tire. Refer to your Owner's Manual for instructions.


See *Storage* in your Owner's Manual.



REFUELING THE VEHICLE

- ▶ To open the fuel door, press and release the center of the rear edge of the door. It will pop out slightly. Pull the door open.
- ▶ The vehicle's capless fuel system does not have a fuel cap. Fully insert the fuel pump nozzle before starting to fill the tank.

Note: When using a portable gas can, insert the funnel adapter, stored with the spare tire, into the capless fuel fill.

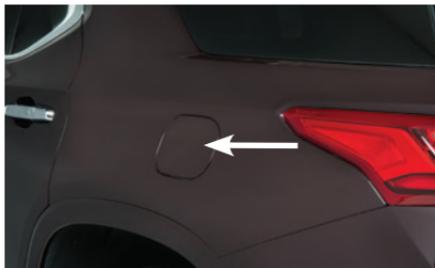

See *Driving and Operating* in your Owner's Manual.

TIRE PRESSURE MONITOR

The (T) Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

See *Vehicle Care* in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA
(1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP



The myChevrolet mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myChevrolet mobile app also enables users to send remote commands – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.chevrolet.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2017 General Motors. All rights reserved.



GENERAL MOTORS

84456134 A