



GETTING TO KNOW YOUR **2020 BLAZER**



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Blazer. Some optional equipment described in this guide may not be included in your vehicle.


More information can be found in your Owner's Manual and at my.chevrolet.com/learn.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.




INSTRUMENT PANEL

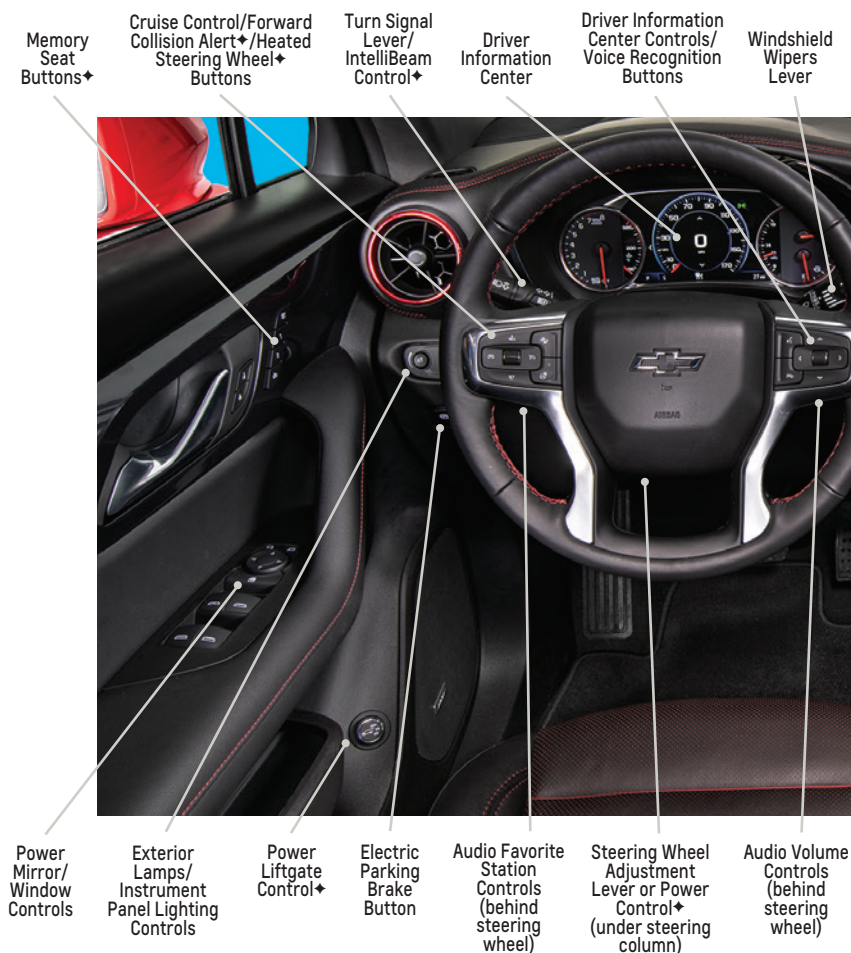

SYMBOLS

	Low Fuel		Lane Keep Assist		Electric Parking Brake
	Brake System		Vehicle Ahead		Check Engine
	Cruise Control Set		Airbag Readiness		Traction Control Off
	Security		Engine Oil Pressure		

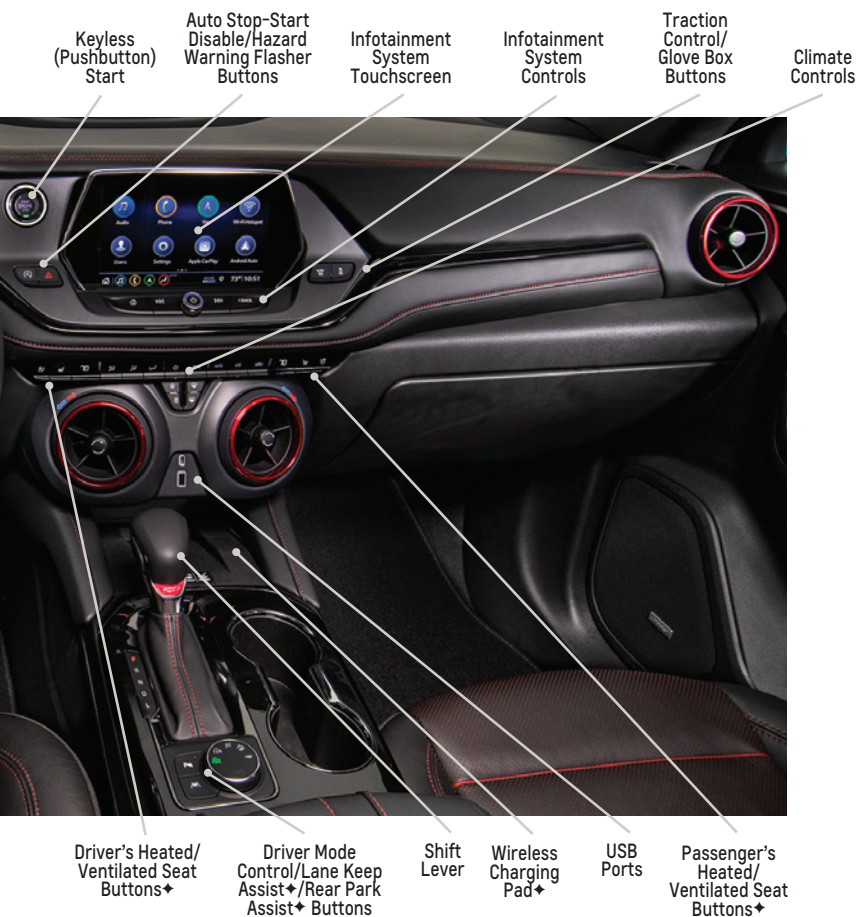

RS model shown



Lights On Reminder



Seat Belt Reminder



Antilock Brake System



Door Ajar



Charging System



Low Tire Pressure

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors.

Press and hold to lower all windows[†], if enabled in the Vehicle Settings.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The horn will sound 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.



Power Liftgate[†]

Press twice to open or close the liftgate.

Press once to stop power liftgate operation.



Remote Vehicle Start[†]

Press and release the Lock button and then press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes.
- To cancel a remote start, press and hold the button until the parking lamps turn off.
- The heated/ventilated seats[†] will turn on, if enabled in the Vehicle Settings.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock and Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry (RKE) transmitter from your pocket or purse. The transmitter must be within 3 feet of the liftgate or the door being unlocked.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors and liftgate.
- ▶ Press the button on a passenger door handle to unlock all doors and liftgate.
- ▶ Press the touchpad on the bottom of the liftgate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and the liftgate immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock and Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry (RKE) transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The green button indicator will illuminate.

Note: If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the front cupholder in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories with the engine off. The amber button indicator will illuminate.

See *Driving and Operating* in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop has reached the maximum allowed time.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the  button on the center of the instrument panel to turn off the engine stop/start system. The button indicator is illuminated when the system is on.

The system is turned on each time the vehicle is started.



POWER FRONT SEATS

POWER SEAT ADJUSTMENTS

A. Seat Cushion Adjustment

Move the control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the top of the control to recline or raise the seatback.

C. Lumbar Adjustment

Move the control to adjust the lumbar support.



SET MEMORY POSITIONS

1. With the vehicle in Park, adjust the driver's seat, power steering column, and power outside mirrors to the desired positions.
 2. Press and release the **SET** button on the driver's door. A beep will sound.
 3. Immediately press and hold button **1** or **2** until two beeps sound.
- To store a seat position for more clearance when exiting the vehicle, repeat these steps using the **Exit** button instead of button **1** or **2**.

RECALL MEMORY POSITIONS

- Press and hold button **1**, **2**, or **Exit** until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- To set the recall options, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

REAR SEAT ADJUSTMENTS

- Pull the lever (A) on the side of the seat and move the seatback to the desired position. Release the lever.
- Lift up the bar (B) under the seat and slide the seat to the desired position.



FOLDING THE REAR SEAT

1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever (A) on the side of the seat and fold the seatback forward. From the cargo area, pull the lever on each side of the cargo area to fold the driver-side rear seatback or passenger-side rear seatback.

See Seats and Restraints in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, pull the lever under the steering column to adjust the steering wheel up or down and closer or farther away. Push up the lever to lock the steering wheel in place.
- ▶ With the vehicle parked, use the power control[◆] under the steering column to adjust the steering wheel up or down and closer or farther away.



Power control[◆] shown

See Instruments and Controls in your Owner's Manual.

POWER LIFTGATE[◆]

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the Power Liftgate button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the Power Liftgate knob (A) on the driver's door.
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the button (C) left of the liftgate latch to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob (A) to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button (C) left of the liftgate latch until the turn signals flash and a beep sounds.



HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper between the exhaust pipe and the license plate. The RKE transmitter must be within 3 feet of the liftgate. The vehicle logo is projected on the ground near the rear bumper to indicate the kicking motion location. The logo is shown for 1 minute, depending on operating conditions.



See Keys, Doors and Windows in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

DIC CONTROLS

Use the controls on the right side of the steering wheel to view the Info and Options menus (base DIC) or the Info, Audio, Navigation, Phone and Options menus (midlevel and uplevel DIC♦).

- ▶ Press the < or > button to move between the display zones.
- ▶ Rotate the thumbwheel up or down to move through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.

SELECT INFO PAGES♦

1. Use the controls to open the Options menu.
2. Scroll to Info Pages. Press the > button to enter the menu.
3. Scroll through the list of items.
4. Press the thumbwheel to select or deselect an item to display in the Info menu.

See Instruments and Controls in your Owner's Manual.



ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the (P) **Parking Brake** button on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) button.

See Driving and Operating in your Owner's Manual.



UNIVERSAL REMOTE SYSTEM♦

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

MANAGING HOME PAGE ICONS

1. Press the Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See your Infotainment System Manual.

INFOTAINMENT SYSTEM

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order. The audio source options are on the left side of the page.

1. Display the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.

Note: To change the number of favorites displayed, go to *Settings > System > Favorites*.

NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Press to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech. Examples: "Call Dave" or "Tune to 99.5 FM." Say "Help" for assistance.

SIRIUSXM[®] WITH 360L

SiriusXM with 360L provides subscribers an enhanced in-vehicle listening experience with unique satellite and streaming channels, on-demand content, personalized recommendations, and an interactive interface. For the full SiriusXM with 360L experience, OnStar Connected Access is required. Learn more about OnStar services at onstar.com.

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
 2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.
- Press the  **Home** button to exit Apple CarPlay. To return to the last page viewed in Apple CarPlay, press and hold the  **Home** button.

ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
 2. Connect your compatible phone by plugging the phone's USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
 3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.
- Press the  **Home** button to exit Android Auto. To return to the last page viewed in Android Auto, press and hold the  **Home** button.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.chevrolet.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Press to Talk** button; after the beep, say "Pair phone"; or to use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Depending on the phone, your phone book may be downloaded automatically.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, go to Settings > System > Phones and select the  Information icon.

See your Infotainment System Manual.

AUDIO STEERING WHEEL CONTROLS

Press to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth Voice Recognition (Siri or Voice Command) on a paired mobile phone.



End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

+ - Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.



Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.

Next/Previous Favorite Station buttons shown

See your Infotainment System Manual.

PORTABLE AUDIO DEVICES

An iPod®, iPhone®, MP3 Player, a USB flash drive or a portable USB hard drive can be connected to the USB data ports located on the center of the instrument panel.

- ▶ To play a device, touch Audio on the infotainment screen; and then touch USB from the sources list or touch More to view the USB option.

See your Infotainment System Manual.

4G LTE WI-FI® HOTSPOT◆

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.chevrolet.com/learn.

See your Infotainment System Manual.

WIRELESS CHARGING◆

The Wireless Charging system for smartphones is located at the front of the center console. Visit my.chevrolet.com/learn to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be on, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the smartphone, face up, on the pad.
4. The ⚡ charging symbol will appear on the infotainment screen when charging. If not charging, remove the device for 3 seconds and rotate it 180 degrees.



See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION


Some vehicle features can be customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press < to exit each menu.



See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS

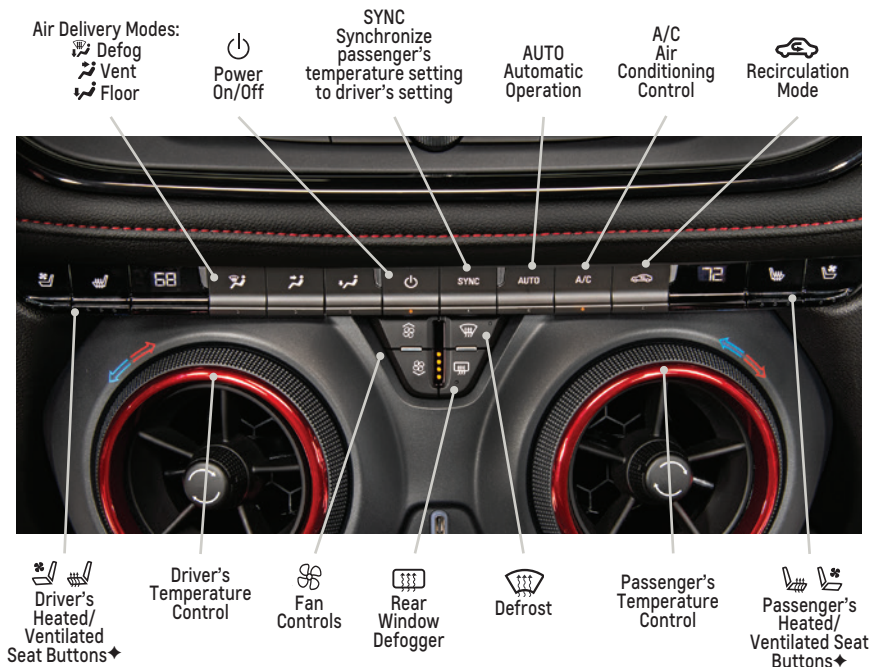

AUTOMATIC OPERATION

- Press **AUTO**.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If a function is manually adjusted, the Auto indicator turns off and automatic operation for that function is canceled.

See Climate Controls in your Owner's Manual.

AUTO HEATED/VENTILATED SEATS ♦

When the vehicle is on, the automatic heated seats and heated steering wheel or automatic ventilated seats will activate based on the vehicle's interior temperature. Manually turn off the heated or ventilated seats using the seat controls. Manually turn off the heated steering wheel using the steering wheel control.

- To turn the auto heated seats and auto ventilated seats on or off, go to Settings > Vehicle > Climate and Air Quality > Auto Heated Seats or Auto Cooled Seats.

LIGHTING

LAMP CONTROLS

Rotate the knob to activate the exterior lamps.

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Instrument Panel Brightness**

Press the knob to extend it. Rotate the knob to adjust the instrument panel lighting.

INTELLIBEAM SYSTEM♦

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ With the lamp control in the **AUTO** or  **Headlamps** position, press the  button on the turn signal lever to turn the IntelliBeam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.



WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the lever to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever to wash the windshield.



REAR WINDOW WIPER

Turn the end of the wiper lever.

OFF

INT Intermittent Wipes

ON

 **Rear Washer Fluid**

Push the lever to wash the rear window.

See Instruments and Controls in your Owner's Manual.

SUNROOF

The sunroof has a comfort stop feature that stops the sunroof from fully opening. This reduces potential wind noise.

- ▶ Press and release the rear of the  **Sunroof** switch (A) to vent the sunroof. Press the rear of the switch again to express-open the sunroof to the comfort stop position. Press it again to fully open the sunroof.
- ▶ Press and release the front of the  **Sunroof** switch (A) to express-close the sunroof.
- ▶ Press and release the rear or front of the  **Sunshade** switch (B) to express-open or express-close the sunshade. Press it again to stop the sunshade.



See Keys, Doors and Windows in your Owner's Manual.

DRIVER MODE CONTROL

The Driver Mode Control automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions on Front-Wheel Drive (FWD) and All-Wheel Drive (AWD) models.

- ▶ Rotate the Driver Mode Control knob on the center console to select the desired mode.

FWD Models

-  Tour – Use for normal driving
-  Snow/Ice – Use for enhanced acceleration on snowy roads
-  Sport – Use for enhanced handling and acceleration on dry pavement



FWD model shown

AWD Models

-  Tour – Use for normal driving
-  All-Wheel Drive – Use for enhanced responsiveness
-  Sport – Use for enhanced handling and acceleration on dry pavement
-  Off-Road – Use for enhanced driving on unpaved roads
-  Tow/Haul – Use to reduce shift cycling when towing or hauling heavy loads



AWD model shown

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT – The driver's seat pulses – left side, right side or simultaneously – to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. This is also the Adaptive Cruise Control–Advanced following gap setting.

FORWARD AUTOMATIC BRAKING – In potential front-end imminent collision situations with detected vehicles, the brakes may be applied, if you haven't already done so, to help reduce damage or avoid collisions at very low speeds.

- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center, if selected in the Info Pages. If no vehicle is detected ahead, dashes are displayed.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn on or off, press the  **Lane Keep Assist** button (A) on the center console.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS


FRONT PEDESTRIAN BRAKING – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 ft. and displays an amber pedestrian indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

REAR CROSS TRAFFIC ALERT – When the vehicle is in Reverse, the system warns of cross-traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

- ▶ To turn only Rear Cross Traffic Alert on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.
- ▶ To turn Rear Park Assist and Rear Cross Traffic Alert on or off, press the **P**  **Park Assist** button (B) on the center console.

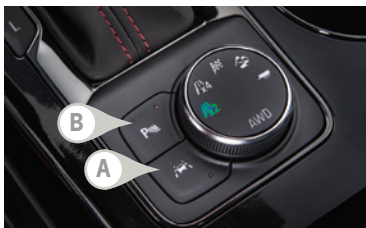

See Driving and Operating in your Owner's Manual.

REAR VISION CAMERA/SURROUND VISION

REAR VISION CAMERA

When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. Vehicle speed must be below 8 mph.

SURROUND VISION

The Surround Vision system displays rear, front or side camera views along with a view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive. Vehicle speed must be below 8 mph. Camera view buttons are at the bottom of the screen.

- ▶ Touch one of the Camera buttons on the infotainment screen to change the camera view.
- ▶ Touch the Guidance Lines button to change the guidelines.
- ▶ Touch the Top Down View button to display an image of the area surrounding the vehicle along with the rear camera view.



See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR♦

The rear camera mirror provides a wider, less obstructed field of view to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, tilt or zoom feature.

C. < > Adjustment

Press and release either button to adjust the selected feature setting.

See Keys, Doors and Windows in your Owner's Manual.



CRUISE CONTROL

SETTING CRUISE CONTROL

- ▶ Press the **On/Off** button. The Cruise Control symbol will illuminate in white on the instrument cluster.
- ▶ When traveling at the desired speed, press the thumbwheel down to the SET position to set the speed. The symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

+ RES Resume/Accelerate

Press the thumbwheel up to resume a set speed. When active, press up to increase speed 1 mph; press and hold to continue increasing speed.

- SET Set/Coast

When active, press the thumbwheel down to decrease speed 1 mph; press and hold to continue decreasing speed.



Cancel

Press the button, or press the brake pedal, to cancel Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL-ADVANCED♦

The system maintains the set speed and a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the **Following Gap** button to select a following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert♦ setting.
- ▶ Press and hold the **Cancel** button to switch between regular Cruise Control and Adaptive Cruise Control-Advanced.

TRACTION CONTROL

The traction control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- Press the  **Traction Control** button on the center of the instrument panel to turn traction control off or on again. The  Traction Control Off light illuminates on the instrument cluster when the system is off.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

With the ignition On or in Accessory mode, the Tire Fill Alert will provide visual and audible alerts to help when inflating a tire to the recommended tire pressure (does not apply to spare tire). When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

See Vehicle Care in your Owner's Manual.

CARGO STORAGE FEATURES

UNDERFLOOR REAR CARGO STORAGE

- Lift up the rear cargo floor for additional storage space. Use the hook to hold up the floor cover while in use.

CARGO MANAGEMENT SYSTEM

The cargo management system features a rail system and cargo fence that divides the cargo area for smaller items.

Adjust the Fence Position

1. Turn each knob on the posts to align the  Unlock symbol with the button arrow.
2. Push the button and slide the fence to the desired position along each rail until it clicks into place.
3. Turn each knob to the  Lock position.

Remove the Fence

1. Turn each knob on the posts to align the  Unlock symbol with the button arrow.
2. Press the buttons on the rail sliders and pull up the posts to remove the fence. Store the fence in front of the spare tire under the cargo floor.
3. Move the rail sliders to the open slot on the rail to remove the sliders.



ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red Emergency button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, push the blue OnStar button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service required) and more. Create an account today at **my.chevrolet.com**.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 General Motors. All rights reserved.



GENERAL MOTORS

84373193 A