



GETTING TO KNOW YOUR **2020 EQUINOX**



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Equinox. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.chevrolet.com/learn.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Power Mirror/Window Switches

Heated Steering Wheel* / Cruise Control/Forward Collision Alert/Lane Keep Assist Buttons

Turn Signal Lever/IntelliBeam Control

Driver Information Center

Voice Recognition Buttons/Driver Information Center Controls

Windshield Wipers Lever



Memory Seat Buttons*

Power Liftgate Control*

Instrument Panel/Exterior Lamp Controls

Audio Next/Previous Favorite Station Controls (behind steering wheel)

Steering Wheel Adjustment Lever

Audio Volume Control (behind steering wheel)

Engine Start/Stop Button

SYMBOLS



Low Fuel



Traction Control Off

BRAKE



Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security



Electric Parking Brake



Electric Parking Brake Service



Lights On Reminder



Airbag Readiness



Engine Oil Pressure



Check Engine



Lane Keep Assist

Driver's Heated/
Ventilated Seat
Buttons ♦

Infotainment
System Touch
Screen

Infotainment
System
Controls

Hazard
Warning
Flashers Button

Climate
Controls

Passenger's
Heated/Ventilated
Seat Buttons ♦



AWD Control ♦/
Tow-Haul Mode
Control ♦

Electric
Parking Brake
Switch

Shift
Lever

Wireless
Charging
Pad ♦

USB Ports/
Accessory
Power Outlet



Vehicle Ahead



Antilock Brake System



Low Tire Pressure



Door Ajar



Charging System



Driver Seat Belt
Reminder



Passenger Seat Belt
Reminder

*Refer to your Owner's Manual
to learn about the information
being relayed by the lights,
gauges and indicators of the
instrument cluster.*

*See Introduction in your
Owner's Manual.*

♦ *Optional equipment*

REMOTE KEYLESS ENTRY TRANSMITTER

Lock

Press to lock all doors.

Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.

Power Liftgate[†]

Press twice to open or close the liftgate. Press once to stop power liftgate operation.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The horn will sound 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start[†]

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press and hold the  button until the parking lamps turn off.

Key Release

In case of loss of vehicle power, press the button on the side of the transmitter to pull out the door lock key from the transmitter. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the front doors and liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the liftgate or door being opened.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on the front passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.

KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the button on any front door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.



KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The button indicator will be green.

Note: If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the front cupholder in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button. The button indicator will be amber.

See Driving and Operating in your Owner's Manual.



AUTO ENGINE STOP/START OPERATION


The engine stop/start system automatically stops and restarts the engine to help conserve fuel. When the brake pedal is pressed and the vehicle is at a complete stop, the engine stop/start system may turn off the engine, referred to as an Auto Stop, if operating conditions are met. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system and other accessories will continue to operate.

When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time has reached the maximum allowed time.

See Driving and Operating in your Owner's Manual.

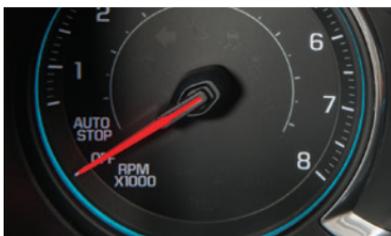

POWER SEATS

POWER SEAT ADJUSTMENTS

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the round control to adjust the amount of lumbar support.



MEMORY SEATS

1. Adjust the seat and power outside mirrors.
2. Press and release the **SET** button; a beep will sound.
3. Immediately press and hold button **1** or **2** until two beeps sound.

To store a seat position for when exiting the vehicle, repeat these steps using the  **Exit** button instead of button **1** or **2**.

RECALL MEMORY POSITIONS

- ▶ Press and hold button **1**, **2**, or  **Exit**.
- ▶ For automatic recall, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

RECLINING THE REAR SEAT

- ▶ Pull the lever (A) on top of the seatback and move the seatback to the desired position. Release the lever.



FOLDING THE REAR SEAT

1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever (A) on top of the seatback – a tab near the lever is visible when the seatback is unlatched – and fold the seatback forward.

From the cargo area, pull the top lever* (B) (passenger's side seat) or bottom lever* (C) (driver's side seat) located on the passenger's side of the cargo area to fold either seatback.



3. Stow the seat belt in the belt clip.

See Seats and Restraints in your Owner's Manual.

REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect people or items in the rear seat; instead, under certain conditions, it detects when a rear door has been opened, indicating that there may be something in the rear seat.



See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the **Power Liftgate** knob (A) on the driver's door.
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the button (C) next to the pull handle to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

- ▶ Turn the Power Liftgate knob (A) to the 3/4 mode position.
- ▶ Open the liftgate.
- ▶ Adjust the liftgate manually to the desired height.
- ▶ To save the setting, press and hold the button next to the pull handle (C) until the turn signals flash and a beep sounds.



HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper between the exhaust pipe and the license plate. The RKE transmitter must be within 3 feet of the liftgate.



See Keys, Doors and Windows in your Owner's Manual.


DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

Use the controls on the right side of the steering wheel to select the Trip, Vehicle, or Eco menus (base DIC) or the Home, Info (includes trip and fuel information), Audio, Navigation, Phone, and Options menus (midlevel and uplevel DIC*). Go to Options > Info Pages to select the info pages to display in the Info menu.

DIC CONTROLS

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.

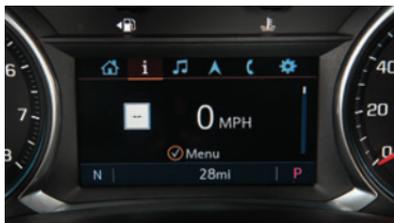

Uplevel DIC shown



See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth Voice Recognition/Siri® Eyes Free on a paired, compatible cell phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

+ - Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station button shown

See your Infotainment System Manual.

INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications Tray: Shortcuts to applications

Home page

Applications*: Touch a screen icon to access an application

SEEK Previous station or track

Power/VOL

SEEK Next station or track

Press to answer a call or view Phone screen (7-inch* screen)

BACK Return to previous screen (8-inch* screen) ↗

8-inch* screen shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touch screen, such as tap, drag and swipe, to interact with the system. For assistance, contact Customer Assistance at 1-855-478-7767 or visit my.chevrolet.com/learn.

MANAGING HOME PAGE ICONS

The Home page icons can be arranged in any order.

1. Press the  Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See your Infotainment System Manual.

INFOTAINMENT SYSTEM

Visit my.chevrolet.com/learn for more information about the infotainment system.

SETTING THE TIME

1. Touch Settings on the Home page.
 2. Select the System tab > Time/Date.
 3. Select Set Time.
 4. Touch the arrows to adjust the hours and minutes.
 5. Touch <BACK to exit the menu.
- Turn on Automatic Time and Date to have the time/date updated automatically.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order.

1. Tune in the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite station.



NATURAL VOICE RECOGNITION⁺

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
Examples: "Call Dave" or "Tune to 99.5 FM." Say "Help" for assistance.

APPS

In-vehicle apps are available for download to the infotainment system through the Apps icon on the Home page. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

PORTABLE AUDIO DEVICES

An iPod[®], iPhone[®], MP3 Player, a USB flash drive or a portable USB hard drive can be connected to a USB data port located at the front of the center console or inside the center console storage compartment.

- Touch **Audio** and then touch USB from the sources list or touch More to view the USB option.



The USB ports on the rear of the center console are for charging only.

INFOTAINMENT SYSTEM

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the icon to have your apps displayed.

ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the icon to have your apps displayed.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

To use a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.chevrolet.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone"; or use the Phone button or touch the Phone icon and then select Connect Phones > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, go to Settings > System > Phones and select the Information icon.

STREAMING AUDIO

With a paired device connected via Bluetooth, touch **Audio** and then touch Bluetooth from the sources list or touch More to view the Bluetooth option. Control audio operation using the device controls or infotainment controls.

See your Infotainment System Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, select the Wi-Fi Hotspot icon on the Home page or go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.chevrolet.com/learn.



See your Infotainment System Manual.

WIRELESS CHARGING

The Wireless Charging system for smartphones is located at the front of the center console. Visit my.chevrolet.com/learn to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the smartphone, face up, on the pad, aligned against the back of the bin.
4. The lightning charging symbol will display on the infotainment screen when charging. If not charging, remove the smartphone for 3 seconds and rotate it 180 degrees before placing it on the pad again.



See Instruments and Controls in your Owner's Manual.


TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, the Driver Information Center displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See your Infotainment System Manual.

CLIMATE CONTROLS

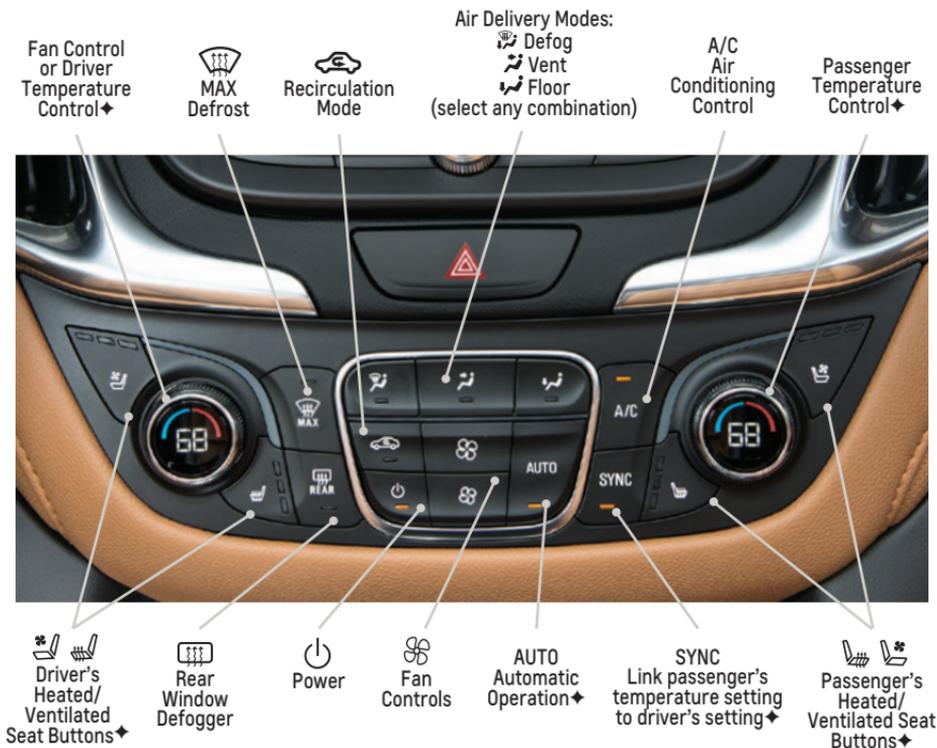

Dual automatic climate controls shown

AUTOMATIC OPERATION

- ▶ Press **AUTO**.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator turns off and automatic operation for that function is canceled.

AUTO DEFOG AND AUTO REAR WINDOW DEFOGGER

Auto Defog and Auto Rear Defog automatically turn on when the engine is started.

- ▶ Go to Settings > Vehicle > Climate and Air Quality to turn the Auto Defog and Auto Rear Defog settings on or off.

AIR VENTS

- ▶ Use the vent louvers to change the direction of the airflow. Move the slider knobs to open or close the vent.

See Climate Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT – The driver's seat may pulse on the left side, right side, or simultaneously, to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

TRACTION CONTROL AND STABILITRAK – The full-time Traction Control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction Control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn Traction Control off or on, use the DIC controls to display the Vehicle menu > TCS (base DIC) or Options menu > Traction & Stability (midlevel and uplevel DIC).

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber Lane Keep Assist Indicator.

If active driver steering is not detected, the amber Lane Keep Assist Indicator may flash and the Safety Alert Seat may pulse or beeps may sound (if selected), on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn on or off, press the Lane Keep Assist button (A) on the steering wheel.

FORWARD COLLISION ALERT – The Vehicle Ahead Indicator is green when a vehicle is detected and illuminates in amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the Collision Alert button (B) on the steering wheel to set the alert timing to Far, Medium or Near. The setting is displayed on the Driver Information Center.



FOLLOWING DISTANCE INDICATOR – The following distance is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

AUTOMATIC EMERGENCY BRAKING – In detected potential imminent collision situations with vehicles directly ahead, the system can provide alerts and enhance driver braking or apply the brakes, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

DRIVER ASSISTANCE SYSTEMS

FRONT PEDESTRIAN BRAKING – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 ft. and displays an amber indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT♦ – While driving, the system displays a 🚗 warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

REAR VISION CAMERA – When the vehicle is in Reverse, a view directly behind the vehicle is displayed on the infotainment screen.

HD SURROUND VISION CAMERA♦ – The Surround Vision system displays several front or rear camera views along with a view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 8 mph.

- ▶ Touch one of the Camera buttons on the infotainment screen to change the camera view.
- ▶ To turn the guidance lines on or off, touch the Guidance Lines button.
- ▶ Touch the Hitch button to view the area directly behind the vehicle to help align the vehicle's hitch ball♦ with a trailer coupler.



REAR CROSS TRAFFIC ALERT♦ – When the vehicle is in Reverse, the system warns of cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or 3 beeps sound (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

REAR PARK ASSIST♦ – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Park Assist.



See *Driving and Operating in your Owner's Manual*.

CRUISE CONTROL

SETTING CRUISE CONTROL

- ▶ Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
- ▶ When traveling at the desired speed, press the **-SET** button to set the speed. The  symbol will illuminate in green on the instrument cluster.



ADJUSTING CRUISE CONTROL

+ RES Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

- SET Set/Coast

When the system is active, press to decrease speed.

Cancel

Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory. The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL-CAMERA

The system enhances regular Cruise Control to maintain a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control-Camera.

See Driving and Operating in your Owner's Manual.

ALL-WHEEL DRIVE

The vehicle can operate in two-wheel drive (2WD) or all-wheel drive (AWD).

In 2WD, power is sent to the front wheels only and the vehicle may have better fuel economy. In AWD, power is sent to all four wheels for better traction.

- ▶ Press the **AWD** button in front of the shift lever to switch to AWD. The button indicator will flash when engaging AWD and stay illuminated when AWD is active. Press the button again to return to 2WD.



See Driving and Operating in your Owner's Manual.

EXTERIOR LIGHTING

EXTERIOR LAMP CONTROLS

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps** 

INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ Press the  button on the turn signal lever with the lamp control in the AUTO or  Headlamps position to turn the IntelliBeam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph. The system is turned off if the fog lamps are turned on.

See Lighting in your Owner's Manual.



WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

 *Optional equipment*

REAR WINDOW WIPER

Turn the end of the wiper lever.


OFF

INT Intermittent Wipes

ON

 **Rear Washer Fluid**

Push the lever away from you to spray washer fluid on the rear window.

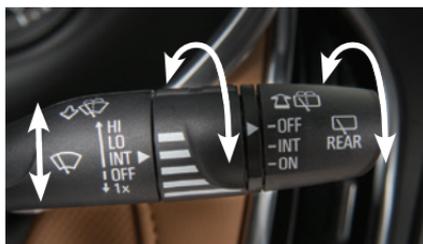

See Instruments and Controls in your Owner's Manual.

SUNROOF

The sunroof has a comfort stop feature that stops the sunroof from fully opening. This reduces potential wind noise.

- ▶ Press and release the rear of the  switch to express-open the sunroof to the comfort stop position. Press it again to fully open the sunroof.
- ▶ Press and release the front of the  switch to express-close the sunroof.
- ▶ Press the rear or front of the  switch to open or close the sunshade.



See *Keys, Doors and Windows* in your Owner's Manual.

CARGO STORAGE FEATURES

UNDERFLOOR REAR CARGO STORAGE

Lift up the rear cargo floor for additional storage space. Use the pull tabs to open or close the floor cover.

UMBRELLA STORAGE IN FRONT DOORS

The cargo bins in the front doors feature an upper storage area designed to store an umbrella.

CARGO COVER

Extend the cargo cover to cover items in the rear of the vehicle. Remove the cover if more space is needed for stowing items. Store the cover under the cargo floor.

See *Storage* in your Owner's Manual.



UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the (P) Parking Brake switch on the center console.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.

REFUELING THE VEHICLE

- ▶ To open the fuel door, press and release the center of the rear edge of the door. It will pop out slightly. Pull the door open.
- ▶ The vehicle's capless fuel system does not have a fuel cap. Fully insert the fuel pump nozzle before starting to fill the tank.

Note: When using a portable gas can, insert the funnel adapter, stored under the spare tire, into the capless fuel fill.

See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

Roadside Assistance and OnStar®

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at **my.chevrolet.com**.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 General Motors. All rights reserved.



GENERAL MOTORS

84314979 A