



GETTING TO KNOW YOUR **2020 SONIC**




chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Sonic. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.chevrolet.com/learn. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

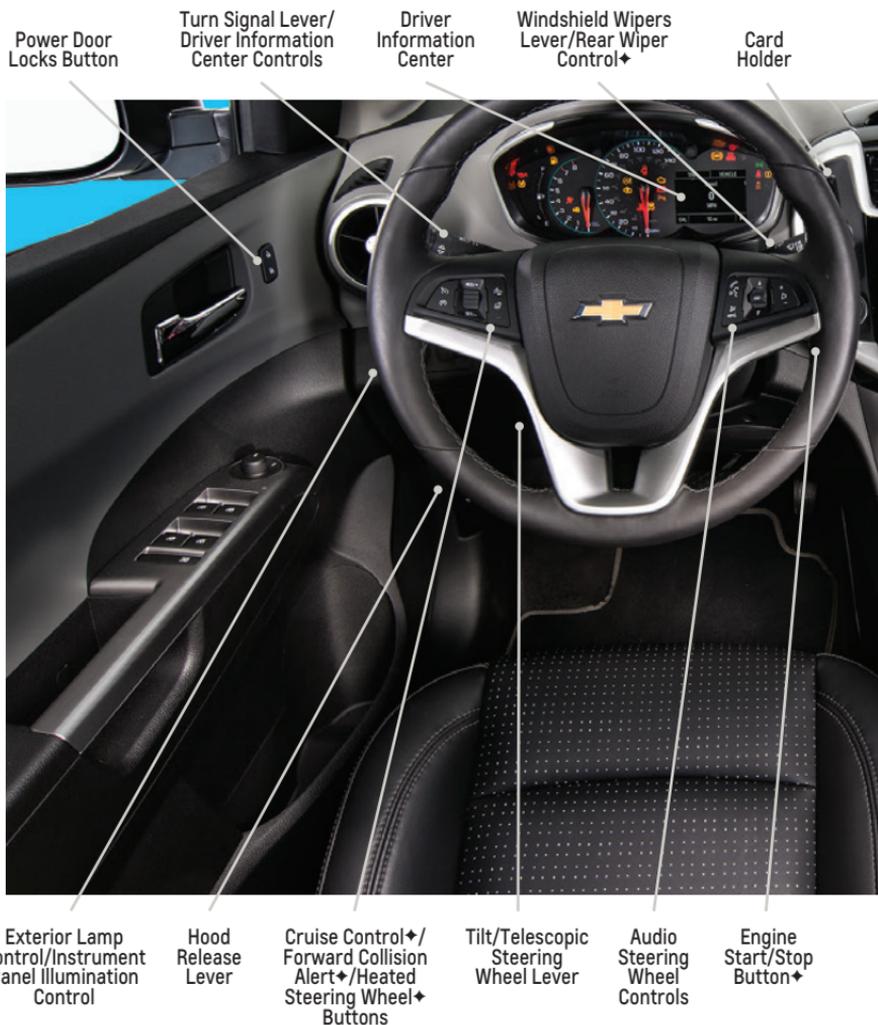

SYMBOLS

	Low Fuel		Brake System		Speed Sensitive Power Steering
	Door Ajar		Cruise Control Set		Low Tire Pressure
	Traction Control Off		StabiliTrak Active		Reduced Engine Power
	Engine Coolant Temperature		StabiliTrak Off		Code Set

Power Door Locks Button

Forward Collision Alert♦/Lane Departure Warning♦ Indicators

Infotainment System

Hazard Warning Flashers Button



Driver's Heated Seat Button♦

Trunk Release♦/Lane Departure Warning♦/Traction Control-StabiliTrak Buttons

USB Port/Accessory Power Outlet

Climate Controls

Passenger's Heated Seat Button♦

-  Security
-  Check Engine
-  Oil Pressure
-  Charging System
-  Seat Belt Reminder
-  Airbag Readiness
-  Antilock Brake System
-  Operate Pedal

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER

Unlock

Press to unlock the driver's door and trunk/liftgate. Press again to unlock all doors.

Lock

Press to lock all doors and trunk/liftgate.

Trunk

(Sedan model only)

Press twice to release the trunk.

Note: To change the remote lock and unlock settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start*.



Keyless Access System* transmitter shown

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold for 3 seconds to activate the alarm.

Remote Vehicle Start*

Press and release the **Lock** button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn the ignition to the On position before driving.

- During a remote start, the engine will run for 15 minutes.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

See *Keys, Doors and Windows* in your Owner's Manual.


KEYED IGNITION SYSTEM (IF EQUIPPED)

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

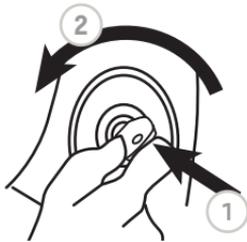

See *Driving and Operating* in your Owner's Manual.

KEYLESS ACCESS SYSTEM

Keyless Access enables operation of the doors and trunk/liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the trunk/liftgate.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors and the trunk/liftgate.
- ▶ Press the button on the passenger's door handle to unlock all doors and the trunk/liftgate.
- ▶ Press the touchpad above the rear license plate to open the trunk/liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and the trunk/liftgate immediately.
- ▶ If Passive Locking is turned on, all doors and the trunk/liftgate will lock automatically after a short delay once all doors and the trunk/liftgate are closed.

Note: To change the door lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park, press the brake pedal and then press the **ENGINE START/STOP** button. The green button indicator will illuminate.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press and hold the **ENGINE START/STOP** button.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the vehicle in accessory mode. The amber button indicator will illuminate.



See Driving and Operating in your Owner's Manual.

SEATS

MANUAL DRIVER'S SEAT

A. Seat Fore/Aft Adjustment

Lift the handle under the front of the seat near the center console to slide the seat forward or rearward.

B. Seat Height Adjustment

Ratchet the middle lever up or down repeatedly to raise or lower the seat.

C. Seatback Recline Adjustment

Lift the rear lever to recline or raise the seatback.



POWER DRIVER'S SEAT*

D. Seat Adjustment

Move the control to move the seat forward or rearward and to tilt, raise or lower the seat.

E. Seatback Recline Adjustment

Lift the lever to recline or raise the seatback.



FOLDING REAR SEATS

1. Make sure the safety belt is in the retainer hook.
2. Pull the lever on top of the seatback (F). When the red marking is visible, the seatback is unlatched.
3. Fold down the seatback.



See Seats and Restraints in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever on the left side of the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

DIC CONTROLS

A. MENU

Press to display the Trip menu (may include digital speedometer, trip odometers, fuel range, average fuel economy, average vehicle speed, instantaneous fuel economy, and navigation) or the Vehicle Information menu (may include remaining oil life, units and tire learn).



B.

Rotate the switch to scroll through the items of each menu.

C. SET/CLR

Press the button on the end of the lever to set a menu item or clear a message. Press and hold the button to reset a menu item.



Note: The  Code Set indicator displays with a number on the Driver Information Center when the status of the vehicle has changed and action may be needed to correct the condition. Refer to your Owner's Manual for code information.

See Instruments and Controls in your Owner's Manual.

LIGHTING

AUTOMATIC HEADLAMP SYSTEM

 Off/On

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 Parking Lamps

 Headlamps

 Fog Lamps*

Press to turn the fog lamps and parking lamps on or off.



INSTRUMENT PANEL LIGHTING

 Instrument Panel Brightness
Rotate and hold the thumbwheel to adjust the instrument panel lighting.

See Lighting in your Owner's Manual.

INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications:
Touch a screen
icon to access
the application



SEEK
Previous radio
station or track

Power/Volume

SEEK
Next radio
station or
track

Press to view
Phone screen or
answer a call

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player/iPod®. Touch an application icon on the screen to access an item. You can use simple gestures on the touch screen, such as tap, drag, and swipe, to interact with the system. For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

PORTABLE AUDIO DEVICES

A USB port and an auxiliary jack are located at the front of the center console to connect portable audio devices.

- ▶ Connect an iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device to the USB port.
- ▶ Touch Audio, and then touch More to select the USB device.

INFOTAINMENT SYSTEM

SETTING THE TIME

1. Select Settings on the Home page.
 2. Select System > Time/Date.
 3. Select Set Time.
 4. Touch the arrows to adjust the time.
 5. Touch < to exit the menu.
- ▶ Turn on Automatic Time and Date to have the time updated automatically as the system obtains information from the cellular network.



STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM⁺) can be stored in any order.

1. Select Audio on the Home page.
2. Tune in the desired radio station.
3. Select the desired page of favorite screen buttons.
4. Touch and hold one of the favorite screen buttons until a beep is heard. Favorites also can be saved by touching the ★ in a station or channel list.
5. Repeat the steps to store another favorite item.

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
 2. The Apple CarPlay icon will illuminate. Touch the icon to have your apps displayed.
- ▶ Press the **Home** button to exit Apple CarPlay. To return to the last page viewed in Apple CarPlay, press and hold the **Home** button.

ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
 2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
 3. The Android Auto icon will illuminate. Touch the icon to have your apps displayed.
- ▶ Press the **Home** button to exit Android Auto. To return to the last page viewed in Android Auto, press and hold the **Home** button.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.chevrolet.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say "Pair Phone."

To use the touch screen, select Phone > Connect Phones > > Add Phone.

2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See *Infotainment System in your Owner's Manual.*

4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.chevrolet.com/learn.

See *Infotainment System in your Owner's Manual.*

AUDIO STEERING WHEEL CONTROLS

► Volume

Press + or - to adjust the volume.

SRC Source

Press to select an audio source.

△▽ Next/Previous

Rotate the thumbwheel up or down to go to the next or previous favorite radio station or track.

Push to Talk

 Press to answer an incoming call or interact with the Bluetooth or OnStar system.

End Call/Mute

 Press to end or reject a call. Press to mute the vehicle speakers.



VEHICLE CUSTOMIZATION

Some vehicle features can be customized using the Settings menus on the infotainment screen. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Select <Back to exit each menu.



See Instruments and Controls in your Owner's Manual.

CRUISE CONTROL ♦

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, rotate the thumbwheel down to the SET/- position to set the speed. The  symbol will illuminate in green on the instrument cluster.

Note: Cruise Control does not operate at speeds below 25 mph. The automatic transmission may downshift to maintain the set speed when traveling down a steep grade.

ADJUSTING CRUISE CONTROL

RES/+ Resume/Accelerate

Rotate the thumbwheel up to resume a set speed.

When the system is active, rotate the thumbwheel up to increase speed.

SET/- Set/Coast

When the system is active, rotate the thumbwheel down to decrease speed.

Cancel

Press to cancel the Cruise Control but retain the set speed in memory.

Pressing the brake pedal also will cancel the Cruise Control.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.



See Driving and Operating in your Owner's Manual.

CLIMATE CONTROLS



Climate control system with heated seats⁺ shown

RECIRCULATION MODE

The  Recirculation Mode can help quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

DEFOG AND DEFROST MODE

When the Defog or Defrost Mode is selected, the air conditioning also will run when above certain ambient temperatures to help reduce air humidity.

See Climate Controls in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS AND WASHER

Move the lever up or down to operate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

OFF

1x Single Wipe

Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.



REAR WIPER AND WASHER

(5-door model only)

Press the switch on the end of the lever to operate the rear wiper.

ON

OFF

INT Intermittent Wipes

Washer Fluid

Push the lever away from you to spray washer fluid on the rear window.

Note: The rear wiper will automatically activate when the vehicle is in Reverse and the windshield wipers are turned on.

See Instruments and Controls in your Owner's Manual.

AUTOMATIC TRANSMISSION

MANUAL MODE

Manual Mode allows the driver to shift gears manually. This feature can be used to drive the vehicle in a sportier manner or to downshift when driving on a downhill grade to provide engine braking.

1. Move the shift lever to the Manual (M) position.
2. Press the + (plus) or - (minus) button on the side of the shift lever to upshift or downshift. The current gear will be displayed on the Driver Information Center.

If vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will downshift automatically.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

LANE DEPARTURE WARNING⁺

The  Lane Departure Warning indicator on the instrument panel is green when a lane marking is detected. If a detected lane marking is crossed without using a turn signal in that direction, the system flashes an amber  indicator and 3 beeps sound on the side of the departure direction.

- ▶ Press the  **Lane Departure Warning** button on the center console to turn the system on or off.

FORWARD COLLISION ALERT⁺

The  Vehicle Ahead indicator is green on the instrument panel when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- ▶ Press the  **Forward Collision Alert** button on the left side of the steering wheel to set the alert timing to Far, Medium, Near, or Off.

REAR VISION CAMERA

When the vehicle is in Reverse, a view of the area behind the vehicle is displayed on the infotainment screen.

- ▶ To turn the Rear Camera Park Assist Symbols on or off, go to Settings > Vehicle > Collision/Detection Systems.

REAR PARK ASSIST⁺

When the vehicle is in Reverse, detected objects are indicated by audible beeps. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 12 in. (30 cm), the beeps are continuous. The system operates only at speeds less than 5 mph.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems.

See Driving and Operating in your Owner's Manual.

TRACTION CONTROL AND STABILITRAK[®] SYSTEMS

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **StabiliTrak/Traction Control** button (A) to turn the system off or on.



See Driving and Operating in your Owner's Manual.

HILL START ASSIST

When stopped on a steep hill, the Hill Start Assist feature prevents the vehicle from rolling before driving off, whether facing uphill or downhill. During the transition between when the driver releases the brake pedal and starts to accelerate, Hill Start Assist holds the brake pressure (for up to 2 seconds) to ensure the vehicle doesn't roll.

Note: Hill Start Assist will not operate if StabiliTrak is disabled.

See *Driving and Operating* in your Owner's Manual.

TIRE PRESSURE MONITOR

The (⚠) Low Tire Pressure warning light on the instrument cluster illuminates and a message displays on the Driver Information Center when one or more of the vehicle's tires is significantly underinflated. The message shows the location of the low tire and the approximate pressure. Fill the tires to the proper tire pressures, which are listed on the Tire and Loading Information label located below the driver's door latch.

See *Vehicle Care* in your Owner's Manual.

STORAGE FEATURES (5-DOOR MODEL ONLY)

CARGO FLOOR LOAD COMPARTMENT

Additional storage space is available under the rear cargo floor cover.

Remove the Floor Cover

1. Lift up the cover and pull it out.
2. Store the cover on the bottom of the load compartment.

Install the Floor Cover

1. Align the front corners of the cover with the front slots (A) on both sides of the load compartment.
2. Lower the cover onto the lip around the load compartment.



CARGO COVER

Remove the Cargo Cover

1. Unhook the cords from the liftgate and push up on the underside of the cover at the front pins (B).
2. Slide the cover along the channels to store it behind the rear seats.

Install the Cargo Cover

1. Install the cover onto the front pins.
2. Hook the cords to the liftgate.



See *Storage* in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA
(1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

OnStar Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at my.chevrolet.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 General Motors. All rights reserved.



GENERAL MOTORS

84481548 A