



# GETTING TO KNOW YOUR **2020 SPARK**



[chevrolet.com](http://chevrolet.com)

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Spark. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at [my.chevrolet.com/learn](http://my.chevrolet.com/learn). For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.  
Please read your Owner's Manual for complete instructions.



# INSTRUMENT PANEL

Exterior Lamps Control/  
Instrument Panel  
Illumination Control

Turn Signal Lever/  
Driver Information  
Center Controls

Driver  
Information  
Center

Windshield  
Wipers Lever



Power Mirror/  
Window  
Switches\*

Traction Control/  
Lane Departure  
Warning\* Buttons

Cruise Control\*  
Forward Collision  
Alert\* Buttons

Tilt Steering  
Wheel Lever

Audio Steering  
Wheel Controls\*

## SYMBOLS

	Low Fuel		StabiliTrak Active		Airbag Readiness
	Traction Control Off		StabiliTrak Off		Check Engine
	BRAKE Brake System		Security		Charging System
	Cruise Control Set		Fog Lamps		

Infotainment System  
Touch Screen

Infotainment System  
Controls

Hazard Warning  
Flashers Button



Accessory Power  
Outlet/USB Ports/  
Auxiliary Jack

Shift Lever

Climate  
Controls



Seat Belt Reminder



Lane Departure Warning



Forward Collision Alert

*Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.*

**See Introduction in your Owner's Manual.**

## REMOTE KEYLESS ENTRY TRANSMITTER

### Unlock

Press to unlock the driver's door and fuel door.  
Press again to unlock all doors and liftgate.

### Lock

Press to lock all doors and liftgate.

### Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm.

**Note:** To change the remote lock and unlock settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start*.



See *Keys, Doors and Windows* in your Owner's Manual.

## KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.

### KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors and the liftgate.
- ▶ Press the button on the passenger's door handle to unlock all doors and the liftgate.
- ▶ Pull the handle above the license plate to open the liftgate.



### KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and the liftgate immediately.
- ▶ If Passive Locking is turned on, all doors and the liftgate will lock automatically after a short delay once all doors and the liftgate are closed.

**Note:** To change the door lock settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start*.

See *Keys, Doors and Windows* in your Owner's Manual.


## KEYED IGNITION SYSTEM (IF EQUIPPED)

### STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

### TURNING OFF THE VEHICLE

- ▶ Shift to Park (automatic transmission) or Neutral (manual transmission).
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

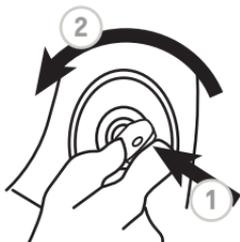

See *Driving and Operating in your Owner's Manual*.

## KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

### STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal (automatic transmission) or the clutch pedal (manual transmission) and then press the **ENGINE START/STOP** button. The green button indicator will illuminate.

**Note:** If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the pocket in the center console storage area to enable the engine to start. Replace the transmitter battery as soon as possible.



### STOPPING THE ENGINE/OFF

- ▶ Shift to Park (automatic transmission only) and press the **ENGINE START/STOP** button.

### ACCESSORY MODE

- ▶ With the engine off and the brake pedal (automatic transmission) or clutch pedal (manual transmission) not depressed, press the **ENGINE START/STOP** button to place the vehicle in accessory mode. The amber button indicator will illuminate.

See *Driving and Operating in your Owner's Manual*.

## STEERING WHEEL AND SEAT ADJUSTMENTS

### STEERING WHEEL AND DRIVER'S SEAT

#### A. Steering Wheel Adjustment

Pull down the lever to unlock the wheel and adjust its position. Lift the lever up securely to lock the wheel.

#### B. Seat Fore/Aft Adjustment

Lift the handle under the front of the seat to slide the seat forward or rearward.

#### C. Seat Height Adjustment

Ratchet the side lever up or down repeatedly to raise or lower the seat.

#### D. Seatback Recline Adjustment

Lift the rear lever to recline or raise the seatback.



### FOLDING REAR SEATS

1. Unbuckle the seat belts.
2. Press the button (A) on each post to remove the rear head restraints.
3. Slide the front seats forward.
4. Pull up the front of the rear seat cushion. Rotate the cushion up and forward.
5. Pull up the release knob (B) on top of the seatback. The red marking is visible when the seatback is unlatched.
6. Fold down the seatback.
7. Before unfolding the seat, place the seat belt in the retainer clip (C) so it doesn't cross the locking mechanism.



See Seats and Restraints in your Owner's Manual.



## DRIVER INFORMATION CENTER (DIC)

The DIC on the instrument cluster displays a variety of vehicle system information and warning messages.

### DIC CONTROLS

#### A. MENU

Press to display the:

**Vehicle Information menu** – may include remaining oil life, units and tire learn or tire pressure.

**Trip/Fuel menu** – may include digital speedometer, trip odometers, fuel range, instantaneous fuel economy, average fuel economy, average vehicle speed and timer.

#### B.

Rotate the band to scroll through the items of each menu.

#### C. SET/CLR

Press the button on the end of the lever to set or clear the displayed menu item.



See Instruments and Controls in your Owner's Manual.

## LIGHTING

### EXTERIOR LAMPS

Rotate the knob to activate the exterior lamps.

 Off/On

#### **AUTO Automatic Headlamp System**

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 Parking Lamps

 Headlamps

 Fog Lamps

Press to turn the fog lamps and parking lamps on or off.



### INSTRUMENT PANEL LIGHTING

 Instrument Panel Brightness

Rotate and hold the thumbwheel to adjust the instrument panel lighting.

See Lighting in your Owner's Manual.

## INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications:  
Touch a screen  
icon to access an  
application

Home  
page

SEEK  
Previous radio  
station or track

Power/Mute/  
Volume

SEEK  
Next radio  
station or  
track

Press to view  
Phone screen or  
answer a call

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player. Touch an application icon on the screen to access an item. You can use simple gestures on the touch screen just as you would on a tablet, such as tap, drag, and swipe, to interact with the system. For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn).

### MANAGING HOME PAGE ICONS

The Home page icons can be arranged in any order.

1. Press the  Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

## INFOTAINMENT SYSTEM

### SETTING THE TIME

1. Select Settings on the Home page.
2. Select System > Time/Date.
3. Select Set Time.
4. Touch the arrows to adjust the time.
5. Touch < to exit the menu.

Turn on Automatic Time and Date to have the time updated automatically as the system obtains information from the cellular network.



### STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM<sup>+</sup>) can be stored in any order.

1. Select Audio on the Home page.
2. Tune in the desired radio station.
3. Select the desired page of favorite screen buttons.
4. Touch and hold one of the favorite screen buttons until a beep is heard. Favorites also can be saved by touching the ★ in a station or channel list.
5. Repeat the steps to store another favorite item.

### PORTABLE AUDIO DEVICES

Two USB ports and an auxiliary jack are located at the front of the center console to connect portable audio devices.

- ▶ An iPod<sup>®</sup>, iPhone<sup>®</sup>, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port.
- ▶ Select Audio, and then touch More to select USB or AUX for the connected device.

### APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.

### ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.

See *Infotainment System* in your Owner's Manual.


## BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn) for more information.

### PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say "Pair Phone."  
To use the infotainment screen, select Phone > Phones or Connect Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

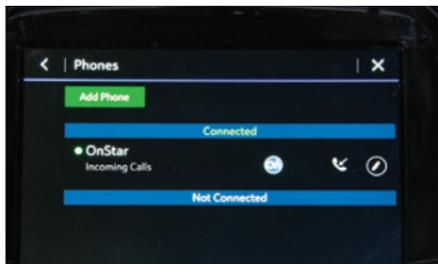

### STREAM AUDIO

With a paired device connected via Bluetooth, select Audio, and then touch More to select Bluetooth as the audio source. Control audio operation using the device controls or infotainment controls.

See *Infotainment System* in your Owner's Manual.

## AUDIO STEERING WHEEL CONTROLS ✦

### Volume

Press the + or - button to adjust the volume.

### SRC Source

Press to select an audio source.

### Next/Previous Favorite Station

Rotate the thumbwheel up or down to go to the next or previous favorite radio station or track.

### Push to Talk

 Press to answer an incoming call, or to use voice recognition with the Bluetooth or OnStar® system.

### End Call/Mute

 Press to end or decline a call. Press to mute/unmute the vehicle speakers.



See *Instruments and Controls* in your Owner's Manual.

## 4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, select the Wi-Fi Hotspot icon or go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn).

See Infotainment System in your Owner's Manual.

## VEHICLE CUSTOMIZATION

Some vehicle features can be customized using the Settings menus on the infotainment system. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Select < to exit each menu.



See Instruments and Controls in your Owner's Manual.

## WIPERS AND WASHERS

### WINDSHIELD WIPERS AND WASHER

Move the lever up or down to operate the windshield wipers.

#### HI Fast Wipes

#### LO Slow Wipes

#### INT Intermittent


Rotate the band up for more frequent wipes or down for less frequent wipes.

#### OFF

#### 1x Single Wipe

#### Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

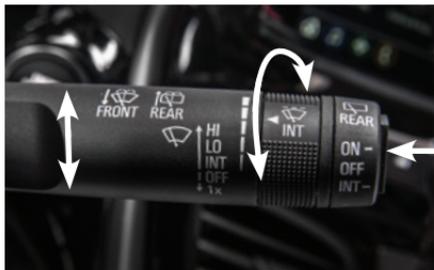

### REAR WIPER AND WASHER

Press the switch on the end of the lever to operate the rear wiper.

#### ON Continuous Wipes

#### OFF

#### INT Intermittent


#### Washer Fluid

Push the lever away from you to spray washer fluid on the rear window.

Note: To have the rear wiper automatically activate when the vehicle is in Reverse and the windshield wipers are turned on, go to Settings > Vehicle > Comfort and Convenience > Auto Wipe in Reverse Gear.

See Instruments and Controls in your Owner's Manual.

## CLIMATE CONTROLS

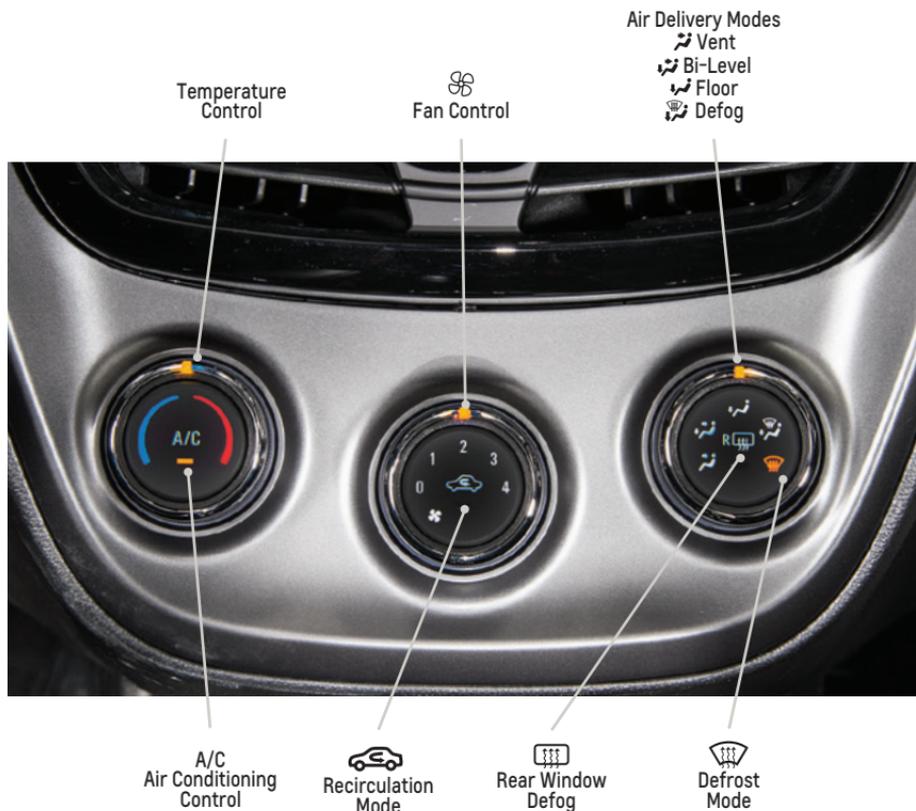

### RECIRCULATION MODE

- ▶ Press  **Recirculation Mode** to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle.

**Note:** When the Recirculation Mode is used for extended periods, the air humidity increases and the windows may fog.

See Climate Controls in your Owner's Manual.

## SUNROOF

The sunroof control is located on the overhead console.

- ▶ Press and release the  **Sunroof** switch to vent the sunroof. Press the  switch again to express-open the sunroof.
- ▶ Press and hold the  **Sunroof** switch to close the sunroof.

See Keys, Doors and Windows in your Owner's Manual.

## CRUISE CONTROL ✦

### SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the switch down to the **SET/-** position to set the speed. The symbol will illuminate in green on the instrument cluster.



### ADJUSTING CRUISE CONTROL

#### RES/+ Resume/Accelerate

Press the switch up to resume a set speed. When the system is active, press the switch up to increase speed.

#### SET/- Set/Coast

When the system is active, press the switch down to decrease speed.

#### **Cancel**

Press to cancel the Cruise Control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the Cruise Control.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

*See Driving and Operating in your Owner's Manual.*

## TRACTION CONTROL AND STABILITRAK SYSTEMS

The traction control system limits wheel-spin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **StabiliTrack/Traction Control** button (A) on the left side of the instrument panel to turn off traction control. The  Traction Control Off light will illuminate on the instrument cluster. Press the button again to turn on traction control.



*See Driving and Operating in your Owner's Manual.*

## DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

### LANE DEPARTURE WARNING+

The Lane Departure Warning Indicator on the instrument cluster is green when a lane marking is detected. If a detected lane marking is crossed without using a turn signal in that direction, the system flashes an amber indicator and 3 beeps sound on the side of the departure direction.

- ▶ Press the Lane Departure Warning button (A) on the left side of the instrument panel to turn the system on or off.



### FORWARD COLLISION ALERT+

The Vehicle Ahead indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- ▶ Press the Forward Collision Alert button on the left side of the steering wheel to set the alert timing to Far, Medium, or Near.

### AUTOMATIC EMERGENCY BRAKING+

In detected potential imminent collision situations with vehicles directly ahead, the system can provide alerts and enhance driver braking or apply the brakes, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

### REAR VISION CAMERA

When the vehicle is in Reverse, a view of the area behind the vehicle appears on the infotainment screen.

- ▶ Press the Guidelines button on the bottom of the screen to turn the guidelines on or off.

### REAR PARK ASSIST+

When the vehicle is in Reverse, detected objects are indicated by audible beeps. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 20 in. (50 cm), the beeps are continuous. The system operates only at speeds less than 5 mph.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Park Assist.

See *Driving and Operating* in your Owner's Manual.

## HILL START ASSIST

When stopped on a steep hill, the Hill Start Assist feature prevents the vehicle from rolling before driving off, whether facing uphill or downhill. During the transition between when the driver releases the brake pedal and starts to accelerate, Hill Start Assist holds the brake pressure (for up to 2 seconds) to ensure the vehicle doesn't roll.

*See Driving and Operating in your Owner's Manual.*

## REFUELING THE VEHICLE

1. Unlock the vehicle to unlock the fuel door.
2. Pull up the fuel door release handle on the floor near the driver's seat.
3. The fuel door will pop open. Pull the door open to refuel the vehicle.

*See Driving and Operating in your Owner's Manual.*



## ENGINE OIL LIFE SYSTEM

The Oil Life System calculates oil life based on vehicle use and displays a Change Engine Oil message on the Driver Information Center when it's necessary to change the engine oil and filter. The system should be reset to 100% only following an oil change.

*See Vehicle Care in your Owner's Manual.*

## TIRE PRESSURE MONITOR

The (⚠) Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center (DIC).

*See Vehicle Care in your Owner's Manual.*

## RECREATIONAL TOWING

Recreational towing means towing the vehicle behind another vehicle. Vehicles with an automatic transmission should be towed from the front with the two rear wheels on the ground and the two front wheels on a dolly. Vehicles with a manual transmission can be towed from the front with all four wheels on the ground (dinghy towing) or with the two rear wheels on the ground and the two front wheels on a dolly. Refer to your Owner's Manual for the proper towing procedure.

*See Vehicle Care in your Owner's Manual.*

## ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

### OnStar Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, call 1-888-466-7827, visit [onstar.com](http://onstar.com) or refer to your Owner's Manual.

## MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit [onstar.com](http://onstar.com) for more details. Download the mobile app from your compatible mobile device's app store.

## CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service required) and more. Create an account today at [my.chevrolet.com](http://my.chevrolet.com).

**We recommend always using ACDelco or genuine GM service parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 General Motors. All rights reserved.



GENERAL MOTORS

84321090 A