



# GETTING TO KNOW YOUR **2020 TRVERSE**



[chevrolet.com](https://chevrolet.com)

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Traverse. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at [my.chevrolet.com/learn](https://my.chevrolet.com/learn).

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.  
Please read your Owner's Manual for complete instructions.



# INSTRUMENT PANEL

Memory  
Seat  
Buttons

Cruise Control/  
Forward Collision  
Alert/Heated Steering  
Wheel Buttons

Turn Signal  
Lever/  
IntelliBeam  
Control

Driver  
Information  
Center

Voice Recognition  
Buttons/Driver  
Information Center  
Controls

Windshield  
Wipers  
Lever



Power  
Mirror/  
Window  
Switches

Instrument  
Panel/  
Exterior  
Lamp  
Controls

Power  
Liftgate  
Control

Audio Next/  
Previous Favorite  
Station Controls  
(behind steering  
wheel)

Steering  
Wheel  
Adjustment  
Control

Audio Volume  
Controls  
(behind  
steering wheel)

Engine  
Start/Stop  
Button

## SYMBOLS



Low Fuel



Traction Control Off

**BRAKE**

Brake System



Cruise Control



Adaptive Cruise Control-  
Advanced



StabiliTrak Off



Forward Collision Alert



Security



Electric Parking Brake



Service Electric Parking  
Brake



Lights On Reminder



Airbag Readiness



Engine Oil Pressure



Check Engine



Lane Keep Assist

Hazard  
Warning  
Flashers  
Button

Infotainment  
System Touch  
Screen

Infotainment  
System  
Controls

Storage  
Compartment/  
USB Port (behind  
touch screen)♦

Climate  
Controls



Driver's  
Heated/  
Ventilated  
Seat Buttons♦

Electric  
Parking  
Brake  
Switch

Driver Mode  
Control/Traction  
Control-StabiliTrak  
Off Button/  
Lane Keep Assist  
Button♦

Shift  
Lever

Wireless  
Charging  
Pad♦

USB Ports/  
Accessory  
Power Outlet

Passenger's  
Heated/  
Ventilated  
Seat  
Buttons♦



Vehicle Ahead



Pedestrian Ahead



Antilock Brake System



Low Tire Pressure



StabiliTrak Active



Door Ajar



Charging System



Driver Seat Belt  
Reminder



Passenger Seat Belt  
Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

## REMOTE KEYLESS ENTRY TRANSMITTER



### Lock

Press to lock all doors.



### Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.



### Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.



### Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold to activate the alarm.

Press again to cancel the alarm.

**Note:** To change the remote lock, unlock, and remote start settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start*.



### Remote Vehicle Start

Press and release the **Lock** button and then press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press and hold the button until the parking lamps turn off.

### Key Release

In case of loss of vehicle power, press the button on the side of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See *Keys, Doors and Windows* in your Owner's Manual.

## KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of a front door or within 3 feet of the liftgate.

### KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger's door handle to unlock all doors.
- ▶ Press the touchpad on the handle at the bottom of the liftgate to open the liftgate.



### KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

**Note:** To change the lock and unlock settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start*.

See *Keys, Doors and Windows* in your Owner's Manual.

## KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

### STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The button indicator will be green.



**Note:** If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the pocket in the center console storage compartment to enable the engine to start. Replace the transmitter battery as soon as possible.

### STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button.


### ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The button indicator will be amber.

See *Driving and Operating* in your Owner's Manual.

## AUTO ENGINE STOP/START OPERATION

The engine stop/start system automatically stops and restarts the engine to help conserve fuel. The system may turn off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system, climate controls and other accessories will continue to operate. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

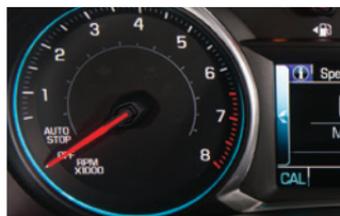

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time has reached the maximum allowed time.

See *Driving and Operating* in your Owner's Manual.

## POWER FRONT SEATS

### SEAT CONTROLS

#### A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

#### B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

#### C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.



### MEMORY SEATS

1. Adjust the seat, power outside mirrors and power steering wheel.

2. Press and release the **SET** button; a beep will sound.

3. Immediately press and hold button 1 or 2 until two beeps sound.

► To save a seat position for more clearance when exiting the vehicle, repeat these steps using the **Exit** button instead of button 1 or 2.



### RECALL MEMORY POSITIONS

► Press and hold button 1, 2, or **Exit** until the saved position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

► To set the recall options, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

*See Seats and Restraints in your Owner's Manual.*

## STEERING WHEEL ADJUSTMENT

► With the vehicle parked, push down the lever or use the power control under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.



*See Instruments and Controls in your Owner's Manual.*

## REAR SEATS

### ENTER OR EXIT THE 3RD-ROW SEATS

1. Remove anything on the 2nd-row seat or the floor in front of or behind the seat.
2. On the passenger-side seat, pull the handle on top of the seatback (bench seat only) or on the side of the seatback (A) and pull the seat forward.
3. After entering/exiting, move the seatback rearward until it locks in place.

**Note:** The 2nd-row passenger-side seat can be moved for 3rd-row entry/exit with a forward facing child seat installed. Remove a rearward facing child seat before moving the 2nd-row seat.



### RECLINE THE 2ND-ROW SEATBACKS

- ▶ While seated, pull the lever on the side of the seat cushion (B) and move the seatback to the desired position.



### SLIDE THE 2ND-ROW SEATS

- ▶ Lift the bar under the seat cushion (C) to slide the seat forward or rearward.

### FOLD THE 2ND-ROW SEATS

1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever on the side of the seat cushion (B) and fold the seatback forward.
3. To raise the seatback, lift it up until it locks in place.

### FOLD THE 3RD-ROW SEATS

1. Adjust the 2nd-row seat to allow the 3rd-row seat to fold fully flat.
2. Remove anything on or under the 3rd-row seat.
3. Use the Remote Keyless Entry transmitter door key in the mini-buckle slot to disconnect the mini-latch of the center seat belt and stow the mini-latch in the headliner.
4. Pull the release strap to release the seatback and fold the seatback forward or press the power seatback switches<sup>†</sup> on the passenger's side of the rear cargo area.

### REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect people or items in the rear seat; instead, under certain conditions, it detects when a rear door has been opened, indicating that there may be something in the rear seat.



<sup>†</sup> Optional equipment

## POWER LIFTGATE◆

### OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the Power Liftgate knob on the driver's door.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the pull handle to close the liftgate.



### PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate pull handle until the turn signals flash and a beep sounds.

### HANDS-FREE OPERATION◆

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The RKE transmitter must be within 3 feet of the liftgate.

### PROJECTED LOGO◆

The vehicle logo is projected on the ground near the rear bumper, indicating the kicking motion location for hands-free operation, when an RKE transmitter is detected within 6 feet of the liftgate or hands-free operation has occurred. The logo is shown for 1 minute, depending on operating conditions.



See Keys, Doors and Windows in your Owner's Manual.

## ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the (P) **Parking Brake** switch on the center console.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

**Note:** The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.

See Driving and Operating in your Owner's Manual.

## DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

### DIC CONTROLS

Use the controls on the right side of the steering wheel to select the Info (includes trip and fuel information), Audio, Phone, Navigation, and Options menus.

- ▶ Press the ◀ or ▶ button to move between the display zones. Press the ◀ button to go back to the previous screen.
- ▶ Press the ▲ or ▼ button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.



### INFO PAGES MENU

1. Use the controls to display the Options menu. Press ✓.
2. Scroll to display Info Pages. Press ▶ to view the items.
3. Select Edit List and press ▲ or ▼ to scroll through the list of items.
4. Press ✓ to select or deselect an item to display in the Info menu.

See Instruments and Controls in your Owner's Manual.

## AUDIO STEERING WHEEL CONTROLS

### Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Voice Pass-Thru (Siri Eyes Free or Voice Command) on a paired, compatible cell phone.

### End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

### + - Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

### ▲▼ Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station button shown

See your Infotainment System Manual.

# INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications:  
Touch a screen  
icon to access an  
application



Home  
page

SEEK  
Previous radio  
station or track

Power/  
Volume

SEEK  
Next radio  
station or  
track

Press to  
answer a call  
or view Phone  
screen  
(7-inch\*  
screen)

Press to  
open storage  
compartment\*  
(8-inch\*  
screen)

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn).

## STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM\*) can be stored in any order.

1. Tune in the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite station.

See your Infotainment System Manual.

## INFOTAINMENT SYSTEM

### NATURAL VOICE RECOGNITION<sup>+</sup>

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech. Examples: “Call Dave” or “Tune to 99.5 FM.” Say “Help” for assistance.

### APPS<sup>+</sup>

In-vehicle apps – connecting to entertainment, weather, travel information, sports, and more – can be downloaded through the Apps icon on the Home page. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle’s 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

### APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device’s factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the icon to have your apps displayed.

### ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device’s factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the icon to have your apps displayed.

### PORTABLE AUDIO DEVICES

An iPod®, iPhone®, MP3 Player, a USB flash drive or a portable USB hard drive can be connected to a USB data port located at the front of the center console or inside the center console storage compartment.

- ▶ To play a device, touch Audio on the infotainment screen; and then touch USB from the Sources list or touch More to view the USB option.

The USB ports on the rear of the center console are for charging only.

*See your Infotainment System Manual.*

## 4G LTE WI-FI HOTSPOT<sup>®</sup>

With the vehicle’s available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

**Note:** For more information on use and system limitations, visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn).

## BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn) for more information.

### PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone." To use the screen buttons, select the Phone icon > Phones > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

### SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, go to Settings > System > Phones and select the Information icon next to the phone name.

*See your Infotainment System Manual.*

## TEEN DRIVER◆

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, the Driver Information Center displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

*See your Infotainment System Manual.*

## UNIVERSAL REMOTE SYSTEM◆

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to [homelink.com](http://homelink.com) for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

*See Instruments and Controls in your Owner's Manual.*

## VEHICLE CUSTOMIZATION

Some vehicle features can be customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press < to exit each menu.

See *Instruments and Controls in your Owner's Manual*.



## WIRELESS CHARGING

The Wireless Charging system for smartphones is located at the front of the center console.

Visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn) to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be on, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the smartphone, face up, on the  on the pad.
4. The  charging symbol will appear on the infotainment screen when charging. If not charging, remove the device for 3 seconds and rotate it 180 degrees.



See *Instruments and Controls in your Owner's Manual*.

## AUTOMATIC TRANSMISSION

Electronic Range Select Mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving on a downhill grade or towing a trailer.

1. Move the shift lever to L (Low).
2. Press the + (plus) or - (minus) button on the shift lever to increase or decrease the gear range available. The current gear will be displayed on the Driver Information Center.



If vehicle speed is too high or too low for the requested gear, the shift will not occur.

See *Driving and Operating in your Owner's Manual*.

## DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

**TRACTION CONTROL AND STABILITRAK®** – The full-time Traction Control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction Control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn Traction Control on or off, press the  **Traction Control/StabiliTrak Off** button on the center console.

**FORWARD COLLISION ALERT†** – The  Vehicle Ahead Indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near. The setting is displayed on the Driver Information Center.

### **FOLLOWING DISTANCE INDICATOR†** –

The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.



**ENHANCED AUTOMATIC EMERGENCY BRAKING†** – In detected potential imminent collision situations with vehicles directly ahead, the system can provide alerts and enhance driver braking or apply the brakes, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ To set Enhanced Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

**FRONT PEDESTRIAN BRAKING†** – During daytime driving, the system can detect pedestrians directly ahead up to a distance of approximately 131 feet and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound. The system may enhance driver braking or automatically brake the vehicle, if you have not already done so.

- ▶ To set the system to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

**LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT†** – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

## DRIVER ASSISTANCE SYSTEMS


**LANE KEEP ASSIST WITH LANE DEPARTURE WARNING** † – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green on the instrument cluster if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber . If active driver steering is not detected, the amber  may flash and 3 beeps may sound on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the  Lane Keep Assist button on the center console.

**REAR VISION CAMERA** – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. Vehicle speed must be below 8 mph.

**HD SURROUND VISION** † – The Surround Vision system displays the area surrounding the vehicle along with front and rear camera views on the infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph.

- ▶ Touch one of the Camera buttons on the bottom of the infotainment screen to change the camera view.
- ▶ Touch the Hitch view button for a view of the hitch area and guidance lines.

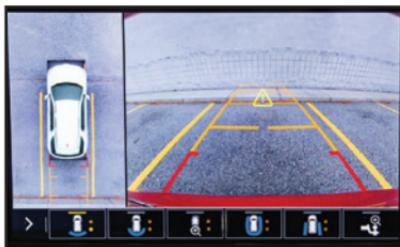

**REAR PARK ASSIST** † – During low-speed parking maneuvers, “distance to closest object” information is provided on the Driver Information Center. When an object is very close, 5 beeps sound.

**REAR CROSS TRAFFIC ALERT** † – When in Reverse, the system warns of cross-traffic approaching in either direction by displaying a red triangle with directional arrow alert on the infotainment screen and sounding beeps from the left or right side of the vehicle.

- ▶ To turn Rear Park Assist and Rear Cross Traffic Alert on or off, go to Settings > Vehicle > Collision/Detection Systems.

*See Driving and Operating in your Owner's Manual.*

### REAR CAMERA MIRROR

The rear camera mirror provides a wider, less obstructed field of view to assist when driving, changing lanes and checking traffic conditions.

- ▶ Pull or push the lever at the bottom of the mirror to turn the video display on or off.
- ▶ To adjust the brightness of the display, press and release the button on the upper back of the mirror without covering the light sensor. There are 5 brightness settings.

*See Keys, Doors and Windows in your Owner's Manual.*

## TRACTION SELECT

The Traction Select system automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions.

- ▶ Rotate the Driver Mode Control knob on the center console to select:

- /1 Tour (front-wheel drive models) or
- /2 Tour (AWD models)
- /4 All-Wheel Drive (AWD models)
- \* Snow (front-wheel drive models)
- Off-Road (AWD models)
- Tow/Haul



The AWD indicator will illuminate when an all-wheel drive mode is selected.

**Note:** The modes displayed vary depending on vehicle equipment.

See *Driving and Operating in your Owner's Manual*.

## CRUISE CONTROL

### SETTING CRUISE CONTROL

1. Press the **On/Off** button. The Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The symbol will illuminate in green.

### ADJUSTING CRUISE CONTROL

#### RES+ Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

#### SET- Set/Coast

When active, press to decrease speed.

#### Cancel

Press the **Cancel** button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

### ADAPTIVE CRUISE CONTROL-ADVANCED+

The system enhances regular Cruise Control to maintain a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the **Following Gap** button to select a gap setting of Far, Medium or Near. This is also the Forward Collision Alert+ setting.
- ▶ Press and hold the **Cancel** button to switch between regular Cruise Control and Adaptive Cruise Control-Advanced.

See *Driving and Operating in your Owner's Manual*.



## EXTERIOR LIGHTING

### EXTERIOR LAMP CONTROLS

 **Off/On**

#### AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps\***

### INTELLIBEAM SYSTEM\*

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ To turn the IntelliBeam system on or off, press the  button on the turn signal lever with the lamp control in the AUTO or  Headlamps position.

**Note:** IntelliBeam activates the high-beam headlamps only when driving over 25 mph. The system is turned off if the fog lamps are turned on.

See Lighting in your Owner's Manual.



## WIPERS AND WASHERS

### WINDSHIELD WIPERS

Raise or lower the wiper lever.

**HI Fast Wipes**

**LO Slow Wipes**

**INT Intermittent Wipes**

Rotate the band up for more frequent wipes or down for less frequent wipes.

**OFF**

**1x Single Wipe**

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.



### REAR WINDOW WIPER

Turn the end of the wiper lever.

**OFF**

**INT Intermittent ON**

 **Rear Washer Fluid**

Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

## AUTOMATIC CLIMATE CONTROLS ♦



### AUTOMATIC OPERATION

- ▶ Press **AUTO**.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning, and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, automatic operation for that function is turned off.

### REAR CLIMATE CONTROLS

The rear climate control settings can be adjusted using the control panel on the rear of the center console or the rear climate display on the infotainment screen.

- ▶ To lock/unlock the rear controls from the front seat, select Rear Control Lockout on the infotainment screen.

*See Climate Controls in your Owner's Manual.*

## AUTO HEATED/VENTILATED SEATS ♦

When the vehicle is on, the auto heated seats and auto heated steering wheel or auto ventilated seats will activate automatically based on the vehicle's interior temperature. Manually turn off the heated or ventilated seats using the seat controls. Manually turn off the heated steering wheel using the steering wheel control.

- ▶ To turn the auto heated seats and auto ventilated seats on or off, go to Settings > Vehicle > Climate and Air Quality > Auto Heated Seats or Auto Cooled Seats.

## SUNROOF/SUNSHADE

- ▶ Press and release the  **SLIDE** switch to express-open the sunroof.
- ▶ Press and release the  **Close** switch to express-close the sunroof.
- ▶ To open the sunshade, press the latch button on the handle while pushing up to unlatch it.
- ▶ To close the sunshade, pull the handle forward until it latches.

See *Keys, Doors and Windows* in your Owner's Manual.

## CARGO STORAGE

### UNDERFLOOR REAR CARGO STORAGE

Lift up the rear cargo floor for additional storage space.

Remove the storage bin to access the spare tire. Refer to your Owner's Manual for instructions.


See *Storage* in your Owner's Manual.



## REFUELING THE VEHICLE

- ▶ To open the fuel door, press and release the center of the rear edge of the door. It will pop out slightly. Pull the door open.
- ▶ The vehicle's capless fuel system does not have a fuel cap. Fully insert the fuel pump nozzle before starting to fill the tank.

**Note:** When using a portable gas can, insert the funnel adapter, stored with the spare tire, into the capless fuel fill.

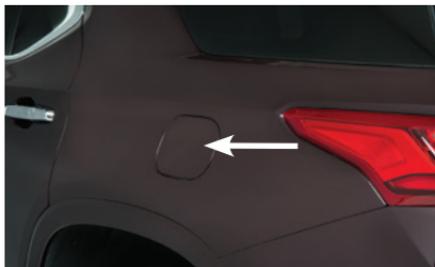

See *Driving and Operating* in your Owner's Manual.

## TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

See *Vehicle Care* in your Owner's Manual.

## ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

### OnStar Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit [onstar.com](http://onstar.com), call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

## MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit [onstar.com](http://onstar.com) for more details. Download the mobile app from your compatible mobile device's app store.

## CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at [my.chevrolet.com](http://my.chevrolet.com).

**We recommend always using ACDelco or genuine GM service parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 General Motors. All rights reserved.



\* 8 4 3 4 2 4 9 5 A \*

GENERAL MOTORS

84342495 A