



GETTING TO KNOW YOUR **2020 ACADIA**

GMC

gmc.com

Review this Quick Reference Guide for an overview of some important features in your GMC Acadia. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.gmc.com/learn.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Memory Seat Buttons ↗
 Electric Parking Brake Switch/Instrument Panel Illumination Control
 Turn Signal Lever/Exterior Lamp Controls/IntelliBeam Button ↗
 Driver Information Center
 Windshield Wipers Lever
 Engine Start-Stop Button



Power Mirror/Window Controls
 Power Liftgate Control ↗
 Cruise Control/Forward Collision Alert ↗/Heated Steering Wheel ↗ Buttons
 Audio Next-Previous Favorite Station Controls (behind steering wheel)
 Steering Wheel Adjustment Lever
 Audio Volume Controls (behind steering wheel)
 Driver Information Center Controls/Voice Recognition Buttons

Symbols



Check Engine



Engine Oil Pressure



Lane Keep Assist



Airbag Readiness



Cruise Control Set



Service Electric Parking Brake



Traction Control/
StabiliTrak Active



Charging System



Security



Seat Belt Reminder



BRAKE Brake System Warning



Electric Parking Brake

Infotainment System
Touch Screen

Infotainment
System Controls

Climate
Controls



Electronic
Precision
Shift
Transmission
Controls

Driver's Heated/
Ventilated Seat
Buttons◆

Driver Mode
Control/Hill
Descent Button◆/
Lane Keep
Assist◆ Button

Passenger's
Heated/Ventilated
Seat Buttons◆

Auto Engine Stop-
Start Disable/
Traction Control-
StabiliTrak/Hazard
Warning Flashers/
Park Assist Buttons

USB Ports/
Accessory
Power Outlet

 IntelliBeam Lighting

 Lights On Reminder

 Antilock Brake System
Warning

 Low Tire Pressure

 Power Steering Warning

 Vehicle Ahead

 StabiliTrak Off

 Passenger Seat Belt
Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your
Owner's Manual.

◆ Optional equipment

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors.



Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn chirps 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start*

Press and release the Lock button and then immediately press and hold the button for at least 4 seconds to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat these steps to run the engine for an additional 15 minutes. A remote start can be extended once.
- Press and hold the button until the parking lamps turn off to cancel a remote start.

Remote Start and Heated/Ventilated Seats*: Select the remote start heated and ventilated seat options in the Vehicle Settings to have the heated or ventilated seats turn on during a remote start. The seat button indicators do not illuminate and the temperature of the unoccupied seat may be reduced during a remote start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the keyless locking and unlocking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

Note: If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the pocket in the center console storage area to enable the engine to start. Replace the transmitter battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof[†] until any door is opened.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer gauge will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current climate control settings require the engine to run.
- The Auto Stop has reached the maximum allowed time.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **(A)** button on the center console when the engine is running to turn off the stop/start system. The button indicator is not illuminated when the system is off.

The system automatically turns on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT TRANSMISSION

The Electronic Precision Shift transmission control switches are located on the front console. The selected gear position illuminates in red on the switch.

Park – Press the **P** button to shift to Park.

Reverse – Pull the **R** switch to shift to Reverse.

Neutral – Press the **N** button to shift to Neutral.

Drive – Pull the **D** switch to shift to Drive.



ELECTRONIC RANGE SELECT MODE

Electronic Range Select Mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving on a downhill grade or towing a trailer.

1. Press the **L (Low)** button.
2. Press the **+** (plus) or **-** (minus) button to increase or decrease the gear range available. The current gear is displayed on the Driver Information Center.

If vehicle speed is too high or low for the requested gear, the shift will not occur.

AUTOMATED CAR WASH MODE

There are different procedures for placing the transmission in Neutral with the engine on or off and if the driver exits the vehicle. Refer to your Owner's Manual for each procedure.

See Driving and Operating in your Owner's Manual.

DRIVER INFORMATION CENTER (DIC)

The DIC displays a variety of vehicle system information and warning messages.

DIC CONTROLS

Use the controls on the right side of the steering wheel to move through the DIC menus.

- ▶ Press the **◀** or **▶** button to move between the display zones. Press the **◀** button to go back to the previous menu.
- ▶ Press the **▲** or **▼** button to scroll through the menus.
- ▶ Press the **✓** button to open a menu, or to select or reset an item.



Uplevel display shown

SELECT INFO PAGES

1. Use the controls to view the Options menu.
2. Scroll to display Info Pages. Press **▶** to view the pages.
3. Scroll through the list of items.
4. Press **✓** to select or deselect an item to display in the Info menu.



HEAD-UP DISPLAY◆*

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation◆ maneuvers, also may be displayed. The HUD controls are located on the left side of the instrument panel.

HUD HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

+ – Brightness

Lift up or press down to brighten or dim the display. Hold down to turn off the display.



See Instruments and Controls in your Owner's Manual.

FRONT SEATS

POWER SEAT ADJUSTMENTS◆

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press the rear control to adjust the amount of lumbar support.



SET MEMORY SEAT POSITIONS◆

With the ignition On or in Accessory mode:

1. Adjust the seat and power outside mirrors to the desired positions.
2. Press and release the SET button on the driver's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound.

- ▶ To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  Exit button instead of button 1 or 2.



RECALL MEMORY SEAT POSITIONS◆

- ▶ Press and hold button 1, 2 or  Exit until the seat and mirrors reach the set position.

The memory/exit positions can be programmed to be recalled automatically.


- ▶ To set the Memory Recall options, go to Settings > Vehicle > Seating Position.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

ENTER OR EXIT THE 3RD-ROW SEATS

1. Remove anything on the 2nd-row seat or the floor in front of or behind the seat.
2. Pull the lever on top of the seatback (A) and pull the seat forward. The driver's side seat will tip and slide forward; the passenger's side seat will tip, pitch and slide forward.
3. After entering/exiting, push or pull the seatback rearward until the seat locks in place.

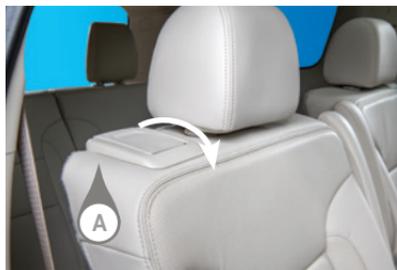

SLIDE THE 2ND-ROW SEAT

- Lift the bar (B) under the seat cushion to slide the seat forward or rearward.


RECLINE THE 2ND-ROW SEAT

- Pull the lever on the side of the seat cushion (C) and move the seatback to the desired position. Release the lever.



FOLD THE 2ND-ROW SEATBACK

1. Press the button on top of the seatback and lower the head restraint.
2. Pull the lever on the side of the seat cushion (C) and fold the seatback forward or, from the cargo area, pull the top lever (driver's side seat) or bottom lever (passenger's side seat) located on the driver's side of the cargo area (D).

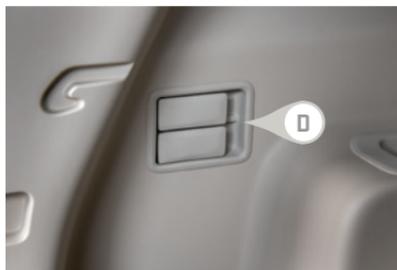

FOLD THE 3RD-ROW SEATBACK

1. Remove anything on the 3rd-row seat or the floor in front of or under the seat.
2. Pull and hold the strap on the seatback and push the seatback forward.
3. To raise the seatback, pull the strap on the seatback or push up the seatback from inside the vehicle until it locks in place.

Note: The 3rd-row seat can be reclined. It does not slide.

REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect people or items in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed during a trip, indicating that there may be something in the rear seat.



See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry transmitter twice.
- ▶ Press the  **Power Liftgate** knob on the driver's door (A).
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the button (C) next to the liftgate latch to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the **Power Liftgate** knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate latch (C) for 3 seconds. The turn signals will flash when the setting is saved.



HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The Remote Keyless Entry transmitter must be within 3 feet of the liftgate. The vehicle logo is projected on the ground near the rear bumper, indicating the kicking motion location. The logo is shown for 1 minute, depending on operating conditions.



See Keys, Doors and Windows in your Owner's Manual.

SUNROOF/SUNSHADE

- ▶ Press and release the  **SLIDE** switch to express-open the sunroof.
- ▶ Press the  **TILT** switch to vent the sunroof.
- ▶ Press and release either  **Close** switch to express-close the sunroof.
- ▶ To open the sunshade, push up on the handle and slide it rearward.
- ▶ To close the sunshade, pull the handle forward until it latches.



See Keys, Doors and Windows in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the (P) Parking Brake switch.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM ♦

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate phone voice recognition (Voice Pass-Thru/Siri® Eyes Free) with a paired, compatible phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.

Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.



See your Infotainment System Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®, and offers hands-free voice control. For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/learn.

PORTABLE AUDIO DEVICES

The front USB ports are for data and charging. Other USB ports are for charging only.

1. Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to a USB port.
2. Touch Audio, and then touch More, if necessary, to select the USB device.

See your Infotainment System Manual.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order.

1. Display the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.

Note: To change the number of favorites displayed, go to Settings > System > Favorites.

SIRIUSXM[®] WITH 360L[♦]

SiriusXM with 360L provides subscribers an enhanced in-vehicle listening experience with unique satellite and streaming channels, on-demand content, personalized recommendations, and an interactive interface. For the full SiriusXM with 360L experience, OnStar Connected Access is required. Learn more about OnStar services at onstar.com.

NATURAL VOICE RECOGNITION[♦]

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.

Examples: "Call Dave" or "Tune 99.5 FM." Say "Help" for assistance.

APPLE CARPLAY[™]

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your phone by plugging the Lightning cable into a USB data port. Use the factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the icon to have your apps displayed.
 - ▶ Press the  **Home** button to exit Apple CarPlay. To return to the last page viewed in Apple CarPlay, press and hold the  **Home** button.
 - ▶ To change the Apple CarPlay settings, go to Settings > Apps > Apple CarPlay.

ANDROID AUTO[™]

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your phone by plugging the phone USB cable into a USB data port. Use the factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the icon to have your apps displayed.
 - ▶ Press the  **Home** button to exit Android Auto. To return to the last page viewed in Android Auto, press and hold the  **Home** button.
 - ▶ To change the Android Auto settings, go to Settings > Apps > Android Auto.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.gmc.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button on the steering wheel; after the beep, say "Pair Phone"; or use the infotainment screen to select the Phone icon > Connect Phones > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, go to Settings > System > Phones and select the  Information icon.

See your Infotainment System Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, select the Wi-Fi Hotspot icon on the Home page or go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.gmc.com/learn.

See your Infotainment System Manual.

VEHICLE CUSTOMIZATION

Some vehicle features can be customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home screen.
2. Select the desired menu tab.
3. Select the desired feature and setting.
4. Press  **BACK** to exit each menu.



See Instruments and Controls in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS



AUTOMATIC OPERATION

► Press AUTO and set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If a function is adjusted manually, automatic operation for that function is canceled.

REAR CLIMATE CONTROLS

The rear climate control settings can be adjusted using the rear climate control buttons on the rear of the center console or the infotainment screen.



LIGHTING

EXTERIOR LAMPS

Rotate the outer band on the turn signal lever to activate the exterior lamps.

 Off/On

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 Parking Lamps

 Headlamps

 Fog Lamps

Rotate the inner band down to turn the fog lamps on or off.



INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ Press the  button on the end of the lever with the lamp control in the AUTO or  Headlamps position to turn the automatic high-beam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph. The system is turned off if the fog lamps are turned on.

See Lighting in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the lever to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

 Washer Fluid

Pull the lever to spray washer fluid on the windshield.



REAR WIPER

Turn the end of the lever to activate the rear wiper.

OFF

INT Intermittent Wipes

ON

 Rear Washer Fluid

Push the lever to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT[◆] – The driver's seat pulses — left side, right side or simultaneously — to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection > Lane Change Alert.

FORWARD COLLISION ALERT[◆] – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  Collision Alert button on the steering wheel to set the alert timing to Far, Medium, or Near.



AUTOMATIC EMERGENCY BRAKING[◆] – In detected potential imminent collision situations with vehicles directly ahead, the system can provide alerts and enhance driver braking or apply the brakes, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ To set the Forward Collision Alert and Automatic Emergency Braking systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection > Forward Collision System.

FRONT PEDESTRIAN BRAKING[◆] – During daytime driving, the system can detect pedestrians directly ahead up to a distance of approximately 131 feet and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may enhance driver braking or automatically brake the vehicle, if you have not already done so.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection > Front Pedestrian Detection.

TRACTION CONTROL AND STABILITRAK SYSTEMS – The traction control system limits wheelspin and the StabiliTrak[®] stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  Traction Control/StabiliTrak Off button on the center console to turn traction control off or on again.

DRIVER ASSISTANCE SYSTEMS

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING ♦ – The system may help you avoid collisions due to unintentional lane departures. The Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber indicator.

If active driver steering is not detected, the amber indicator may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

▶ To turn on or off, press the Lane Keep Assist button on the center console.

FRONT AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

REAR CROSS TRAFFIC ALERT – When the vehicle is in Reverse, the system warns of cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

▶ To turn the Park Assist and Rear Cross Traffic Alert systems on or off, press the Park Assist button on the center console.

REAR VISION CAMERA – When the vehicle is in Reverse below 8 mph, a view of the area behind the vehicle displays on the infotainment screen.

HITCH GUIDANCE

Hitch Guidance displays a center guideline on the Rear Vision Camera display to help align the vehicle's hitch bar with a trailer coupler.

1. Touch the **Camera** button on the infotainment screen.
2. On the Rear Vision Camera display screen, select the trailer guidance line button to view the center guideline.



TRAILER VIEW

▶ To check the trailer when driving above 8 mph, touch the **Camera** button on the infotainment screen. The Rear View Camera displays the rear view of the vehicle. Press X to exit the view. The view is exited automatically after 8 seconds.

SURROUND VISION ♦ – The Surround Vision system displays the area surrounding the vehicle along with front and rear camera views on the infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph.

▶ Touch one of the Camera buttons on the infotainment screen to change the camera view.



See Driving and Operating in your Owner's Manual.

♦ Optional equipment

REAR CAMERA MIRROR◆

The rear camera mirror provides a wider, less obstructed field of view to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt feature.

C. + / - Adjustment

Press and release either button to adjust the selected view.



See Keys, Doors and Windows in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the On/Off button. The Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

SET- Set/Coast

When the system is active, press to decrease speed.

Cancel

Press to cancel the Cruise Control without erasing the set speed from memory. Pressing the brake pedal will also cancel the Cruise Control.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.



ADAPTIVE CRUISE CONTROL-ADVANCED◆

The system maintains the Cruise Control set speed and a following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer.

- ▶ Press the **Following Gap** button to select a following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert◆ setting.
- ▶ Press and hold the **Cancel** button to switch between regular Cruise Control and Adaptive Cruise Control-Advanced.

See Driving and Operating in your Owner's Manual.

TRACTION SELECT

The Traction Select system automatically adjusts various vehicle controls based on driving preferences, weather and road conditions.

- ▶ Rotate the Traction Select knob on the center console to select:
 - /x2 Tour
 - /x4 All-Wheel Drive (AWD models only)
 - 🏞️ Sport
 - ❄️ Snow/Ice (front-wheel drive models only)
 - 🏔️ Off-Road (AWD models only)
 - 🚛 Tow/Haul



The AWD indicator will illuminate when an AWD mode is selected.

If the vehicle is in Tour or AWD mode, it will stay in that mode through future ignition cycles.

See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL◆

Hill Descent Control sets and maintains vehicle speed from 2–14 mph while descending a very steep incline in a forward or reverse gear.

- ▶ Press the  **Hill Descent Control** button on the center console. Vehicle speed must be below 31 mph to turn on the system.
- ▶ Increase or decrease speed by applying the accelerator or brake pedal, or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes on the instrument cluster when the system is actively applying the brakes to maintain vehicle speed.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. GMC's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

Roadside Assistance and OnStar®

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYGMC MOBILE APP

Download the myGMC app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

GMC OWNER CENTER

Get to know your vehicle inside and out with the GMC Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service required) and more. Create an account today at my.gmc.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 General Motors. All rights reserved.



GENERAL MOTORS

84289159 A