



# GETTING TO KNOW YOUR **2021** **ENVISION**



[buick.com](https://www.buick.com)

Review this Quick Reference Guide for an overview of some important features in your Buick Envision. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at [my.buick.com](https://my.buick.com). For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.  
Please read your Owner's Manual for complete instructions.



# INSTRUMENT PANEL

Exterior/Interior Lighting Controls    Cruise Control/Forward Collision Alert/Heated Steering Wheel Buttons    Manual Shift Paddle    Turn Signal Lever/IntelliBeam Control    Driver Information Center    Windshield Wipers Lever    Manual Shift Paddle    Driver Information Center/Voice Recognition Controls



Memory Seat Buttons    Power Mirror/Window Switches    Power Liftgate Control    Audio Favorite Station or Seek Controls (behind steering wheel)    Head-Up Display Controls    Steering Wheel Adjustment Lever (under steering column)    Audio Volume Controls (behind steering wheel)    Engine Start/Stop Button (on instrument panel)

## Symbols

|  |                      |  |                                |  |                     |
|--|----------------------|--|--------------------------------|--|---------------------|
|  | Low Fuel             |  | StabiliTrak Off                |  | Lights On Reminder  |
|  | Traction Control Off |  | Forward Collision Alert        |  | Airbag Readiness    |
|  | BRAKE Brake System   |  | Security                       |  | Engine Oil Pressure |
|  | Cruise Control       |  | PARK Electric Parking Brake    |  | Check Engine        |
|  | StabiliTrak Active   |  | Service Electric Parking Brake |  | Lane Keep Assist    |



- |  |                       |  |                              |
|--|-----------------------|--|------------------------------|
|  | Vehicle Ahead         |  | Charging System              |
|  | Pedestrian Ahead      |  | Driver Seat Belt Reminder    |
|  | Antilock Brake System |  | Passenger Seat Belt Reminder |
|  | Low Tire Pressure     |  |                              |
|  | Door Ajar             |  |                              |

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

**See Introduction in your Owner's Manual.**

## REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



### Lock

Press to lock all doors.



### Unlock

Press to unlock the driver's door. Press again to unlock all doors and liftgate.



### Power Liftgate<sup>◆</sup>

Press twice to open or close the liftgate.  
Press once to stop power liftgate operation.

### Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.  
The horn sounds and lights flash 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

**Note:** To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



### Remote Vehicle Start<sup>◆</sup>

Press twice to start the engine from outside the vehicle. The turn signal lamps will flash. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press the  button twice.

### Key Release

In case of loss of vehicle power, press the button on the back of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

## KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from a pocket or purse. The key fob must be within 3 feet of the liftgate or the door being unlocked.



### Keyless Unlocking

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.

### Keyless Locking

With the ignition off, the key fob out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

**Note:** To change the lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

## KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

### Starting the Engine

- ▶ With the transmission in Park or Neutral, press and hold the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

**Note:** If the key fob battery is weak, place the key fob in the forward cupholder in the center console to enable the engine to start. Replace the key fob battery as soon as possible.



### Stopping the Engine/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

### Accessory Mode

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories. The amber button indicator will illuminate.

See Driving and Operating in your Owner's Manual.

## AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time has reached the maximum allowed time.



### Auto Engine Stop/Start Disable

- ▶ Press the **(A) Auto Stop** button on the center console to turn off the automatic engine stop/start system. The button indicator is illuminated when the system is on. The Auto Engine Stop/Start system turns on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

## ELECTRONIC PRECISION SHIFT

The automatic transmission is electronically controlled using the shift switches on the center console. The selected gear position illuminates in red on the shift switch and is shown on the instrument cluster.

**Park** – Press the P switch to shift to Park.

**Reverse** – Pull the R switch to shift to Reverse.

**Neutral** – Press and hold the N switch until the indicator is red to shift to Neutral.

**Note:** The transmission will not stay in Neutral for an extended period. It will automatically shift into Park.

**Drive** – Pull the D switch to shift to Drive.

**Manual Mode** – With the transmission in Drive, press the M (Manual) switch to shift manually. Pull the left steering wheel paddle to downshift and the right steering wheel paddle to upshift. Pull the D switch to return to Drive.



See Driving and Operating in your Owner's Manual.

## DRIVER MODE SELECTOR

The Driver Mode Selector system can automatically adjust various vehicle control systems based on driving preferences, weather and road conditions.

- Press the **MODE** button on the center console to display the Mode menu on the instrument cluster and activate the next available mode.

### Modes

**Tour** – Use for normal driving.

**Snow/Ice (Front-Wheel-Drive models)** – Use for enhanced acceleration on snowy roads.

**All-Wheel Drive (All-Wheel-Drive models)** – Use for enhanced responsiveness.

**Sport** – Use for enhanced handling and acceleration on dry pavement.

**Off-Road (All-Wheel-Drive models)** – Use for enhanced driving on unpaved roads.



See Driving and Operating in your Owner's Manual.

## ELECTRIC PARKING BRAKE

- To apply the parking brake, pull the (P) **Parking Brake** switch on the center console.
- To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

See Driving and Operating in your Owner's Manual.



## STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.



## POWER FRONT SEATS<sup>◆</sup>

### Power Seat Adjustments

#### A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

#### B. Seatback Recline Adjustment


Move the vertical control to recline or raise the seatback.

#### C. Lumbar Adjustment/Massage<sup>◆</sup>

Turn the feature select knob to view lumbar or massage settings on the infotainment screen. Press the 4-way control to adjust the selected setting.

#### D. Massage Recall

Press the button to turn the massage feature on/off.

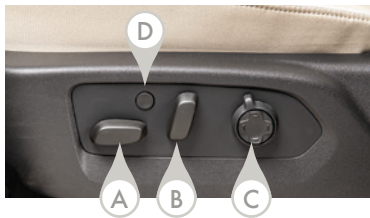

### Set Memory Seat Position

1. Adjust the seat and power outside mirrors.
2. Press the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** or **2** until two beeps sound.

To set a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button instead of button **1** or **2**.

### Recall Memory Seat Position

- ▶ Press and hold button **1**, **2**, or  **Exit** until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned off (for exit recall, the driver's door must be opened).

- ▶ To set the recall options, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.



## FOLDING REAR SEATS

- ▶ Pull the lever on top of the seatback and fold the seatback forward. A red tab near the lever is visible when the seatback is unlatched.
- ▶ To raise each seatback, lift it up until it locks in place.

See Seats and Restraints in your Owner's Manual.



## POWER LIFTGATE<sup>◆</sup>

### Open/Close the Power Liftgate

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the  **Power Liftgate** knob (A) on the driver's door.
- ▶ Press the touchpad above the license plate to open the liftgate.
- ▶ Press the  button (B) on the bottom edge of the liftgate to close the liftgate.



### Programming the Liftgate Height

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button on the bottom edge of the liftgate until the turn signals flash and a beep sounds.



### Hands-Free Operation

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The RKE transmitter must be within 3 feet of the liftgate. The Buick logo is projected on the ground near the rear bumper, indicating the kicking motion location for hands-free operation. The logo is shown for 1 minute, depending on operating conditions.



See Keys, Doors and Windows in your Owner's Manual.



## DRIVER INFORMATION CENTER (DIC)

The DIC on the instrument cluster displays a variety of vehicle messages and information.

### DIC Controls


Use the controls on the right side of the steering wheel to select the Info (includes trip and fuel information), Audio, Navigation, Phone, and Options menus.

- ▶ Press the ◀ or ▶ button to move between the display zones. Press the ◀ button to exit a display menu.
- ▶ Rotate the thumbwheel up or down to scroll through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.



### Select Info Menu Pages

1. At the end of the Info menu, select Edit; or use the controls to open the Options menu, scroll to Info Page Options, and press the thumbwheel to enter the menu.
2. Scroll through the list of items.
3. Press the thumbwheel to select or deselect an item to display in the Info menu.

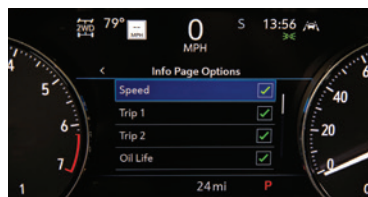

### Engine Air Filter Monitor

- ▶ Select the Air Filter Monitor Life page under the Info menu to view a percentage of the remaining air filter life. Replace the air filter at the scheduled maintenance interval.

See Instruments and Controls in your Owner's Manual.

## HEAD-UP DISPLAY\*

The Head-Up Display (HUD) projects some operating information on the windshield. The HUD controls are located on the left side of the instrument panel.

### HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

### INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

### ☼ Brightness

Lift up to brighten or press down to dim the display. Hold down to turn off the display.



See Instruments and Controls in your Owner's Manual.

## INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag, and swipe, to interact with the system. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or visit [my.buick.com/how-to-support](http://my.buick.com/how-to-support).

### Managing Home Page Icons

1. While in Park, press the  **Home** button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See Infotainment System in your Owner's Manual.

## INFOTAINMENT SYSTEM

### Storing Favorites

Radio stations from all bands (AM, FM or SiriusXM<sup>®</sup>) can be stored in any order. The audio source options are on the left side of the Audio page.

1. Tune in the desired radio station.
2. Select the page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.



### Natural Voice Recognition<sup>+</sup>

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt.
3. After the beep, say what you want it to do using natural speech. Examples: "Call Dave" or "Tune to 99.5 FM." Say "Help" for assistance.

### SiriusXM<sup>®</sup> with 360L<sup>+</sup>

The personalized content of SiriusXM with 360L offers over 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and the Buick Connected Access plan. See [siriusxm.com](http://siriusxm.com) and [onstar.com](http://onstar.com) for details.

### Apple CarPlay<sup>®</sup> and Android Auto<sup>™</sup>

Apple CarPlay or Android Auto capability is available through a compatible smartphone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
  2. There are two ways to set up device projection:
    - **Wireless Connection** - Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
    - **Wired Connection** - Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
  3. Follow the instructions on the infotainment system and the phone.
  4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- ▶ To have Apple CarPlay or Android Auto launch automatically when a paired phone is connected, select Phone icon > Phones >  Information. Turn Apple CarPlay or Android Auto on or off.
  - ▶ To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the **Home** button.

See Infotainment System in your Owner's Manual.

## INFOTAINMENT SYSTEM

### In-Vehicle Apps★

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-In, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to **onstar.com** for data plan information.

### Portable Audio Devices

USB ports (Type A and Type C) for data and charging are located at the front of the center console.

Connect an iPod®, iPhone®, MP3 player, or a USB flash drive to a USB data port.

- ▶ Touch the Audio icon and then touch More, if necessary, to select the USB device. USB ports on the rear of the center console are for charging only★.



See Infotainment System in your Owner's Manual.

## AUDIO STEERING WHEEL CONTROLS

### Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Phone Assistant Voice Recognition (Siri or Google Assistant) on a paired, compatible mobile phone.



### End Call/Mute

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.



### Seek

Rotate the thumbwheel to seek the next radio station or track when viewing the Audio display on the Driver Information Center.

### + - Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

### Next/Previous Favorite Station/Seek (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite station or track, or to seek the next available station or track.

- ▶ To set the next/previous button to select favorites or activate the seek function, go to Audio menu > Favorite Button Setting on the Driver Information Center.

See Infotainment System in your Owner's Manual.

## BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit [my.buick.com/how-to-support](http://my.buick.com/how-to-support) for more information.


### Pair a Phone

1. To use voice recognition, press the **Push to Talk** button; after the prompt, say "Pair phone." To use the infotainment screen, select Phone > Connect Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Depending on the phone, your phone book may be downloaded automatically.

### Secondary Phone

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, go to Phone icon > Phones and select the  Information icon.

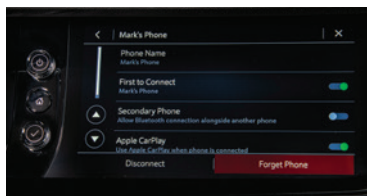

See Infotainment System in your Owner's Manual.

## ONSTAR® 4G LTE WI-FI HOTSPOT

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit [my.buick.com/how-to-support](http://my.buick.com/how-to-support).

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

## WIRELESS PHONE CHARGING◆

The Wireless Phone Charging system is located at the front of the center console. Visit [my.buick.com/how-to-support](http://my.buick.com/how-to-support) to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad. There should not be any objects between the phone and the charging pad.
3. Place the phone, screen up, on the pad.
4. The  charging symbol will appear on the infotainment screen when charging.

See Instruments and Controls in your Owner's Manual.

## VEHICLE CUSTOMIZATION

Many vehicle features, including Remote Vehicle Start, Auto Heated/Ventilated Seats<sup>◆</sup>, Safety Alert Seat, Power Door Locks and others, can be turned on/off and customized using the Settings menus and the touchscreen buttons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press <Back to exit each menu.



See Instruments and Controls in your Owner's Manual.

## LIGHTING

### Exterior Lamp Controls

Rotate the knob to activate the exterior lamps.

Off/On

#### AUTO

Automatically activates the exterior lamps depending on outside lighting conditions

Parking Lamps

Headlamps



### Instrument Panel Lighting

#### Instrument Panel Illumination

Press and release the knob to extend it. Turn the knob to adjust the instrument panel lighting.

### IntelliBeam System

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions to provide enhanced visibility while driving at night. A green indicator displays on the instrument cluster when the system is on; a blue indicator displays when the high-beam headlamps are on.

- ▶ With the lamp control in the AUTO or Headlamps position, press the button on the turn signal lever to turn the IntelliBeam system on or off.




**Note:** IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.



## AUTOMATIC CLIMATE CONTROLS

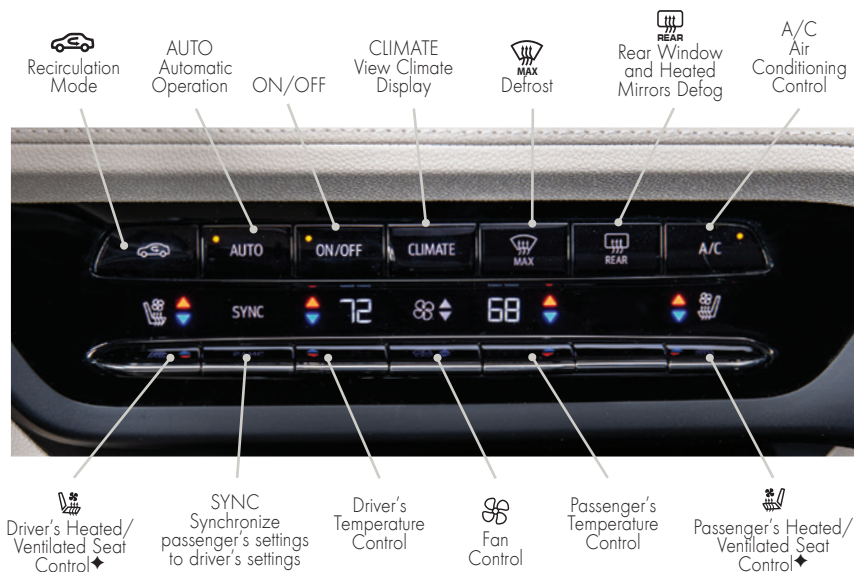

Dual-zone climate controls ♦ shown

### Automatic Operation♦

- Press AUTO and set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator light turns off and automatic operation for that function is disabled.

### In-Vehicle Air Ionizer♦

The Air Ionizer, which removes contaminants such as pollen and dust to help clean the air inside the vehicle, turns on automatically with the climate control system. The Air Ionizer status is shown on the climate control display on the infotainment screen.



- Select the Climate icon on the Home page of the infotainment screen to view the current operation of the Climate Controls.
- To turn the Air Ionizer on or off, go to Settings > Vehicle > Climate and Air Quality > Ionizer.

See Climate Controls in your Owner's Manual.

## WIPERS AND WASHERS

### Windshield Wipers

Raise or lower the wiper lever.

**HI** Fast Wipes

**LO** Slow Wipes

**INT/AUTO** ♦

**Intermittent Wipes/RainSense** ♦

Rotate the band up for more frequent wipes or down for less frequent wipes.

**OFF**

**1x** Single Wipe

 **Washer Fluid**

Pull the lever to wash the windshield.



### Rear Window Wiper

Rotate the end of the wiper lever.

**OFF – INT (Intermittent) – ON**

 **Rear Washer Fluid**

Push the lever to wash the rear window.

See Instruments and Controls in your Owner's Manual.

## CRUISE CONTROL

### Setting Cruise Control

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white.
2. When traveling at the desired speed, press down the switch to the **SET-** position to set the speed.. The  symbol will illuminate in green.

### Adjusting Cruise Control

**RES+ Resume/Accelerate**

Press up to resume a set speed. When active, press up to increase speed.

**SET- Set/Coast**

When active, press down to decrease speed.

 **Cancel**

Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory.

### Adaptive Cruise Control ♦

The system enhances regular Cruise Control to automatically maintain a driver-selected following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a gap setting of Far, Medium, or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  **Cancel** button to switch between  regular Cruise Control and  Adaptive Cruise Control.



See Driving and Operating in your Owner's Manual.

## DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for more important feature limitations and information.

**Safety Alert Seat** – The driver's seat pulses (left, right, or both sides) to alert you of the direction of potential hazards.

- ▶ Audible alerts may be selected instead of seat pulsing alerts. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

**Forward Collision Alert** – The  Vehicle Ahead indicator is green when a vehicle that you're following is detected ahead and is amber when you're following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield or in the HUD♦ and rapid beeps sound or the Safety Alert Seat pulses (if selected).

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. The setting is displayed on the Driver Information Center.

**Automatic Emergency Braking** – In detected, potentially imminent collision situations with vehicles being followed directly ahead, the system can provide alerts and enhance driver braking or automatically apply hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds. The system works at speeds below 50 mph.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

**Front Pedestrian Braking** – During daytime driving, the system can detect pedestrians directly ahead and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield or in the HUD♦ and rapid beeps sound or the Safety Alert Seat pulses (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking. The system works at speeds below 50 mph. Nighttime and low-visibility performance is limited.

- ▶ To set the system to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

**Lane Keep Assist with Lane Departure Warning** – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber . If active driver steering is not detected, the amber  may flash and beeps may sound or the Safety Alert Seat may pulse (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle, the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn on or off, press the  **Lane Keep Assist** button on the center console.



## DRIVER ASSISTANCE SYSTEMS

**Traction Control and StabiliTrak** – The full-time traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn traction control on or off, press the  **Traction Control/StabiliTrak Off** button (A) on the center console.



### Lane Change Alert with Side Blind Zone Alert

– While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaches that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

**Rear Cross Traffic Alert** – When in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and beeps sound or the Safety Alert Seat<sup>♦</sup> pulses (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

**Front<sup>♦</sup> and Rear Park Assist** – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and beeps sound or the Safety Alert Seat<sup>♦</sup> pulses (if selected). When an object is very close, 5 beeps sound or the Safety Alert Seat<sup>♦</sup> pulses (if selected).

- ▶ To turn on or off, press the  **Park Assist** button (B) on the center console.



**HD Rear Vision Camera** – When in Reverse below 8 mph, a view of the area behind the vehicle displays on the infotainment screen.

**HD Surround Vision<sup>♦</sup>** – HD Surround Vision uses multiple cameras to display an overhead image of the area around the vehicle with Rear Vision Camera or other selectable views. It works at low speeds and can help when parking.

- ▶ Touch one of the camera view buttons on the infotainment screen to change the camera view.
- ▶ To turn the guidance lines on or off, touch the Guidance Lines button.



See Driving and Operating in your Owner's Manual.

## DRIVER ASSISTANCE SYSTEMS

**Enhanced Automatic Parking Assist**★ – The system can search for a parallel or perpendicular parking space and then steer and brake the vehicle into that space while shifting gears as needed. It can also help you unpark the vehicle after parallel parking. While using the system, you need to remain in your vehicle and be prepared to override and take control.

- ▶ To activate the system, press the **P**  **Auto Parking Assist** button on the center console. A parking assist display will be shown. Follow all instructions as directed.

See Driving and Operating in your Owner's Manual.

## REAR CAMERA MIRROR★

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

### A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

### B. Selection Control

Press and release the button to select the brightness, zoom, or tilt setting.

### C. Adjustment

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

## UNIVERSAL REMOTE SYSTEM★

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to [homelink.com](http://homelink.com) for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

## TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. With the vehicle on, the horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

See Vehicle Care in your Owner's Manual.

## ROADSIDE ASSISTANCE

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for 5 years/60,000 miles, whichever occurs first, at no expense to you. The Buick Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-start, flat tire and lock-out) or make arrangements to tow your vehicle to the nearest Buick dealer.

### Roadside Assistance and OnStar®

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit [onstar.com](http://onstar.com), call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

## MYBUICK MOBILE APP

Download the myBuick app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit [onstar.com](http://onstar.com) for more details. Download the mobile app from your compatible mobile device's app store.

## BUICK OWNER CENTER

Get to know your vehicle inside and out with the Buick Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at [my.buick.com](http://my.buick.com).

**We recommend always using ACDelco or GM Genuine Parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2020 General Motors. All rights reserved.



GENERAL MOTORS

84299677 A