



Getting to Know Your 2006 Yukon/Yukon Denali

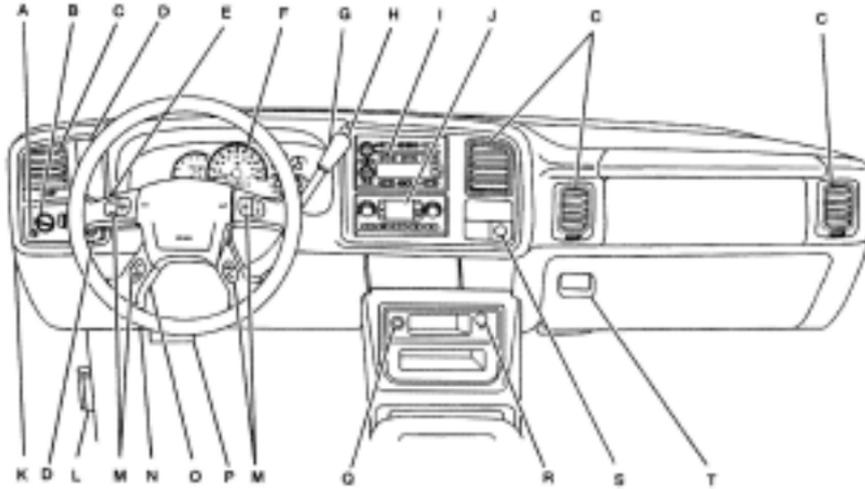


Table of Contents

INSIDE YOUR VEHICLE			
Instrument Panel	2	Steering Wheel Controls (OnStar®/Radio)	10
Instrument Panel Cluster	3	Adjustable Pedals	11
Heated Front Seats	4	Cruise Control	11
Power Lumbar Front Seats	4	OUTSIDE YOUR VEHICLE	
Passenger Automatic Locking Restraint (ALR) ..	4	Power Folding Mirrors	12
Driver and Front Passenger		Automatic Headlamp Controls	12
Safety Belt Reminder	4	Content Theft-Deterrent System	13
Automatic Dimming Rearview Mirror with		Daytime Running Lamps (DRL)	13
OnStar®, Compass and Temperature Display ..	4	Tire Pressure Monitor	13
Automatic Climate Control System	5	PERSONALIZING YOUR VEHICLE	
Manual Climate Control System	6	Memory Positions for Driver's Seat,	
Rear Climate Control System	6	Mirrors and Power Adjustable Pedals	14
Entertainment Systems — Radio/CD	7	Memory Settings for Your Vehicle	14
Touch Screen Navigation Entertainment		Odometer/Trip Settings	15
System	8	Fuel Information	16
Rear Seat Entertainment System	9	VEHICLE SYMBOLS GLOSSARY	17
Universal Home Remote	9	ROADSIDE ASSISTANCE	20
Sunroof	10	MY GMLINK	20

Congratulations on your purchase of a GMC Yukon or Yukon Denali. Please read this information and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

Instrument Panel



A. Dome Lamp Override Button

B. Headlamp Controls

C. Air Outlets

D. Automatic Transfer Case Buttons,
Rear Window Wiper/Washer
Control, and Fog Lamps Button

E. Turn Signal/Multifunction Lever

F. Instrument Panel Cluster

G. Gearshift Lever

H. Tow/Haul Selector Button

I. Audio System

J. Climate Control System

K. Instrument Panel Fuse Block

L. Hood Release.

M. Steering Wheel Control Buttons

N. Center Instrument Panel Fuse
Block

O. Tilt Wheel Lever

P. Parking Brake Release

Q. Cigarette Lighter (if equipped)


R. Accessory Power Outlet

S. StabiliTrak® Disable Button

T. Glove Box

See Section 3 of your Owner Manual.

Instrument Panel Cluster

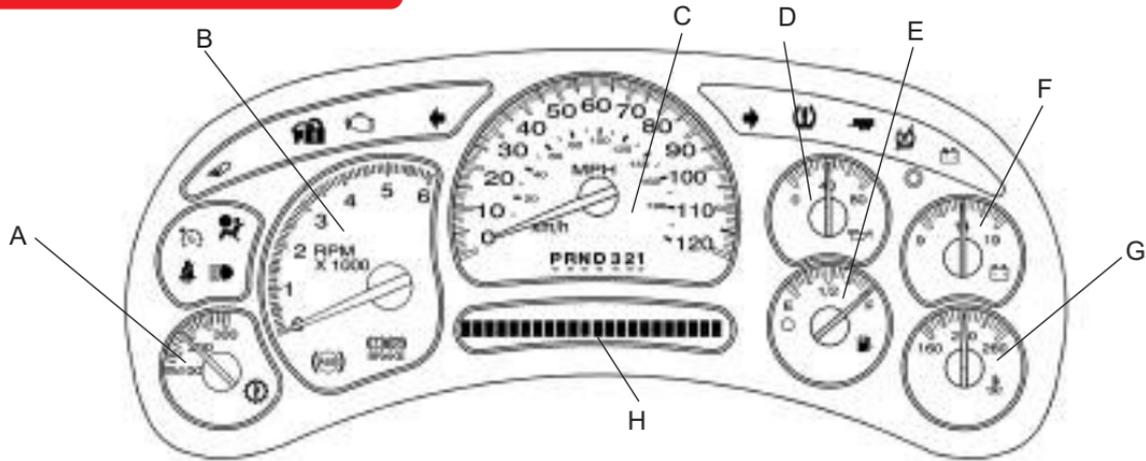

Your vehicle's instrument panel is equipped with this cluster or one very similar to it.


The instrument panel cluster includes these key features:

- A. Transmission Temperature Gauge (if equipped)
- B. Tachometer

- C. Speedometer and Transmission Gear Selector
- D. Oil Pressure Gauge
- E. Fuel Gauge
- F. Voltmeter
- G. Engine Coolant Temperature Gauge
- H. Driver Information Center (DIC) and Odometer

NOTE: See Section 3 of your Owner Manual for more information about what the lights, gauges and indicators on your vehicle's instrument panel tell you about your vehicle's operation.

See Section 3 of your Owner Manual.

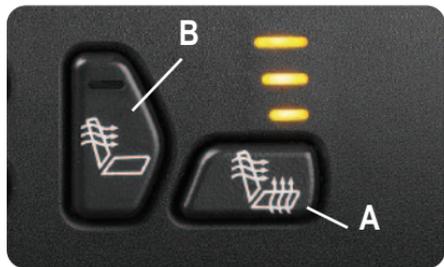Heated Front Seats (if equipped)

This feature allows you to heat the front seatbacks and seat cushions simultaneously or just the seatbacks. The controls are located on the driver and front passenger door panels.

Select a heat setting for both the seatback and seat cushion

- Press and release the horizontal button (“A” above) until the indicator light shows the desired setting.

Select a heat setting for the seatback only

- Press and release the vertical button (“B” above) until the indicator light shows the desired setting.

See *Section 1 of your Owner Manual*.

Power Lumbar Front Seats (if equipped)**Adjust lumbar support**

- Press the front or rear of the control located on the side of the seat cushion near the door. Release at the preferred setting.



See *Section 1 of your Owner Manual*.

Passenger Automatic Locking Restraint (ALR)

The safety belt is designed to lock during an accident, but it will also lock if it is pulled out all the way during initial buckling, and you may be unaware that this has happened. If the safety belt does lock, unbuckle it and allow it to retract fully; then pull it out and rebuckle the belt.

See *Section 1 of your Owner Manual*.

Driver and Front Passenger Safety Belt Reminder (if equipped)

A chime will sound and the safety belt light () will be illuminated and flash for several seconds when the ignition key is turned to Run or Start, or at any time the vehicle is running, and the driver’s safety belt is not buckled.

If your vehicle is equipped with the Passenger Sensing System, the chime will sound and a message will be displayed on the Driver Information Center for several seconds if the passenger’s safety belt is not buckled under the same conditions.

See *Section 3 of your Owner Manual*.

Automatic Dimming Rearview Mirror with OnStar®, Compass and Temperature Display (if equipped)

Controls for the dimming feature, as well as OnStar® (if equipped) and the compass and temperature displays, are located on the bottom of the mirror.

When on, the automatic interior dimming rearview mirror automatically dims to the proper level to minimize glare from lights behind you when it's dark outside.



Turn the self-dimming function on or off

- Press and hold  for approximately eight seconds.

Use the OnStar system

- Press  to connect to an OnStar® Advisor.
- Press  to answer or end a call from the OnStar® Center or Personal Calling.
- Press  in an emergency to connect to an OnStar® Advisor who can contact the nearest emergency services provider.

Turn the outside temperature displays and compass readings on or off

- Press .

Display temperature

- Press  and hold for four seconds (until the display blinks) to toggle between °C and °F. Once the desired °C or °F is displayed, release the button. Wait four seconds and the temperature will be displayed.

See Section 2 of your Owner Manual.

Automatic Climate Control System (if equipped)



Adjust settings for automatic operation

- Push the AUTO button (“A” above) and adjust the temperature knob (“B” above) to the desired temperature.

When automatic operation is active, the system will control the inside temperature, air delivery, air inlet and fan speed.

Set same temperature for driver and front passenger

- Press and hold the AUTO button for four seconds.
- Turn the passenger-side temperature knob to select a different temperature for the passenger.

Select air distribution manually

- Press and release the Mode button (“C” above) until the desired source of air is indicated on the display.

The Mode feature allows you to select air delivery to the floor, the instrument panel outlets, or the windshield outlets.

Manually raise or lower fan speed

- Press the upper or lower portion of the Fan Control button (“D” above).

Additional Climate Control System Functions

: Recirculates interior air while in Vent or Bi-Level position. Use this setting to get maximum cooling from the air conditioning system. To prevent window fogging, Recirculation will not operate in the Defog, Defrost or Floor mode.

: Clears windshield and front side windows of fog/frost.

: Clears rear glass of fog/frost and activates heated outside rearview mirrors (if equipped).

Note: To avoid window fogging on rainy and humid days at temperatures above freezing, run the air conditioner () . Also, it is best to avoid the use of the recirculation mode () except for short times to avoid exterior odors or when maximum air conditioning performance is needed.

See Section 3 of your Owner Manual.

Manual Climate Control System (if equipped)



Adjust settings for operation

- Adjust air delivery location with mode control knob (“A” above).
- Adjust driver/passenger temperatures with levers (“B” above).
- Set fan speed to desired setting (“C” above).

Additional Climate Control System Functions

: Recirculates interior air while in Vent or Bi-Level position. Use this setting to get maximum cooling from the air conditioning system. To prevent window fogging, Recirculation will not operate in the Defog, Defrost or Floor mode.

: Clears windshield and front side windows of fog/frost.

: Clears rear glass of fog/frost and activates heated outside rearview mirrors (if equipped).

: Turns the air conditioning system on and off. The button's LED will illuminate when the air conditioning system is on.

Note: When the climate control system is in the Off position () , outside air will continue to enter the vehicle and will be directed according to the mode position selected. This is normal climate control operation.

See Section 3 of your Owner Manual.

Rear Climate Control System (if equipped)



With this system, the front or rear passengers can control the air temperature, airflow and fan speed for the rear seat passengers.

To operate the rear climate control system from the front seat position, use the driver overhead controls (shown above).

To use the rear seat controls, the front fan control knob must be in the AUX position.

On the rear seat control panel, press the mode button (⚙️) and select AUTO if you want the system to regulate airflow.

See Section 3 of your Owner Manual.

Entertainment Systems — Radio/CD

Set the time on radios *without* a Radio Data System (RDS)

- Press and hold the HR or MIN arrow for two seconds.
- Press the HR (down) arrow until the correct hour appears on the display.
- Press and hold the MIN (up) arrow until the correct minute appears on the display.

Set the time on radios *with* a Radio Data System (RDS)

Your radio may have a button marked “H” or “HR” to represent hours and an “M” or “MIN” to represent minutes.

- Press and hold the hour button until the correct hour appears on the display.
- Press and hold the minute button until the correct minute appears on the display.



Note: The time may be set with the ignition on or off.

Program radio station presets


- Turn the radio on.
- Press BAND to select the band (AM/FM1/FM2/XM1/XM2).
- Use the seek button or tune knob to tune in the desired station.
- Press AUTO EQ or AUTO TONE (as applicable to your radio) to select the equalization that best suits the type of station selected.
- Press and hold one of the six numbered buttons until a beep sounds; release the button.
- Repeat these steps for each station preset, using a different numbered button for each station.

Access one of the two available XM Satellite Radio bands (if equipped)

- Press the BAND button until XM1 or XM2 appears on the display.

Note: Requires subscription to XM Radio.

Six-Disc CD Changer (Denali models only)

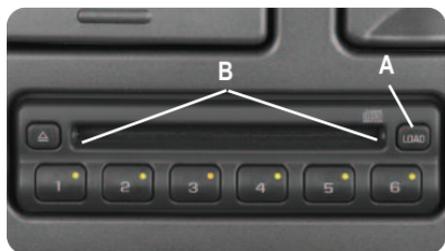

Quick Load

- Press LOAD ("A" above) for approximately three seconds. The lowest available number will flash.
- Wait for amber lights to flash on sides of slot ("B" above) before inserting CD. The next available number will flash and accept another CD until all are occupied.
- To exit Quick Load, press either a number with a CD in it or LOAD.

Quick Unload

- Press EJECT () for approximately three seconds; all CDs will eject from highest number to lowest.

Load 1 CD

- Press LOAD; all available numbers will flash amber.
- Select the number desired.
- Wait for amber lights to flash on sides of slot before inserting CD.
- Insert CD.
- Repeat to load more CDs.

Unload 1 CD

- Press EJECT ().
- Press number for CD desired.

Play a CD

- Option 1: Select the number for the CD desired (wait eight seconds).
- Option 2: Press 5/SIDE button on radio face to scroll through CDs.

Select CD Track

- Option 1: PREV/NEXT on radio.
- Option 2: SEEK arrows on radio.
- Option 3: SEEK arrows on steering wheel.



Note: CDs with any labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at one time, or if scratched or damaged CDs are played, the CD player could be damaged. When using the CD player, use only CDs in good condition without labels; load one CD at a time; and keep the CD player and the loading slot free of foreign materials, liquids and debris.

See **Section 3** of your *Owner Manual*.

Touch Screen Navigation Entertainment System (if equipped)

Your vehicle's Navigation Entertainment System provides you with detailed maps of all major highways and roads throughout the United States. After you enter a destination, the system provides

turn-by-turn instructions for reaching your destination. In addition, the system can help you locate banks, airports, restaurants, post offices, ATMs and more.

See your Owner Manual or Navigation Entertainment System Quick Reference Guide for operating instructions.

See Section 3 of your Owner Manual.

Rear Seat Entertainment System (if equipped)

The DVD Rear Seat Entertainment (RSE) system includes a DVD player and a video display screen (located in the overhead console), two sets of wireless headphones and a remote control.

To play a DVD:

- The ignition must be in the Run or Accessory position, or RAP (Retained Accessory Power, available after the ignition is turned off) must be active.
- Push forward on the release latch to fold down the video screen.
- Insert a DVD into the loading slot; it will automatically start.
- If a DVD is already loaded, press the Play/Pause button.
- Press the CD/AUX button on the radio until RSE appears on the radio display to listen to the DVD through your vehicle speakers.
- When using the wireless headphones, turn the headphones on and adjust the volume using the volume knob.

To stop or eject a DVD:

- To stop playing a DVD, press the Stop button. Press the Play button to resume viewing. If the Stop button is pressed twice, the DVD will resume viewing at the beginning.
- To eject a DVD, press the Eject button on the DVD player.

See Section 3 of your Owner Manual.

Universal Home Remote (if equipped)




Program the Universal Home Remote

1. Determine which of the three channels (buttons) you want to program for functions such as a garage door opener, gate opener or entry door locks.
2. Press and hold the desired remote button through step 3.
3. When the remote light blinks slowly (within 30 seconds), hold your transmitter/opener 1" to 3" from the remote buttons. Then hold your transmitter button on until the remote light flashes rapidly (up to 90 seconds). The process is now complete.

Note: If your transmitter has a "rolling code" feature, this process may not work. Please refer to your Owner Manual.

See Section 2 of your Owner Manual.

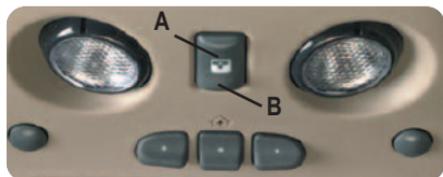Sunroof (if equipped)

The sunroof controls are located in the overhead console.

Open sunroof to fully opened position

- Press the rear portion of the button (“A”).

Close the sunroof

- Hold the front portion of the button (“B”) down until the sunroof motor stops. The sunroof will tilt up slightly to seal. This is normal.

Open sunroof to vent position

- Press and hold the front portion of button (“B”) when the sunroof is closed.

See Section 2 of your Owner Manual.

Steering Wheel Controls (OnStar®/Radio) (if equipped)

(OnStar/Voice Recognition): This button will activate OnStar® for use. If your vehicle is not equipped with the OnStar® system, pressing this button will mute the radio.

Note: For additional OnStar® features information, including Personal Calling and Virtual Advisor, see the OnStar® section of your Owner Manual.

PROG: This button will cycle through the radio presets.

◀SOURCE▶: Selects AM, FM, XM Satellite Radio (if equipped), cassette or CD.

◀SEEK▶: Seeks radio stations.

◀VOL▶: Adjusts radio volume.

See Sections 2 and 3 of your Owner Manual.

Adjustable Pedals (if equipped)

The buttons used to adjust the pedals are located on the driver's side door panel.

- Press the button closest to you to move the pedals closer to your body.
- Press the button farthest from you to move the pedals away from your body.



The vehicle must be in Park (P) for this feature to operate.

See Section 2 of your Owner Manual.

Cruise Control (if equipped)

Cruise control allows you to maintain a constant speed of 25 mph or more without keeping your foot on the accelerator pedal.



Setting Cruise Control:

1. Move the cruise control switch to On (I).
2. Attain the speed you want to cruise at.
3. Press in the Set button (Ⓢ) at the end of the multifunction lever on the left side of the steering column.

4. Take your foot off the accelerator pedal.
5. The cruise symbol on the instrument cluster will illuminate.

There are two ways to increase speed while cruising:

- Use the accelerator pedal to get to a higher speed. Press (Ⓢ) at the end of the multifunction lever to set the cruising speed. Release the accelerator pedal.
- Press the resume/accelerate switch (+) to get to a higher speed, and then release the switch.

To reduce speed while cruising:

- Press and hold (Ⓢ) at the end of the multifunction lever until you reach the desired lower speed, and then release it.

See Section 3 of your Owner Manual.

Power Folding Mirrors (if equipped)

Fold mirrors

- Move the selector switch located above the mirror control (“A” right) to the center position.
- Press the right side of the four-way control pad (“B” above) to fold in the mirrors.
- Press the left side of the four-way control pad to fold out the mirrors.



If the mirrors have been folded manually, they must be moved through the power folding cycle three times to reset them in their tracks.

See Section 2 of your Owner Manual.

Automatic Headlamp Controls

Turn off Daytime Running Lamps (DRL) and automatic headlamps

- Turn the exterior lamps knob (located to the left of the steering wheel) to Off (○) and release.

Note: Your DRLs or automatic headlamps will re-engage at the next key cycle.



Activate the automatic headlamp system

- Turn the exterior lamps knob to AUTO. The automatic headlamp system will turn on the front and rear lamps.

Manually illuminate the parking lamps, side-marker lamps, taillamps, instrument panel/radio lights, license plate lamps and roof marker lamps (if equipped)

- Turn the exterior lamps knob to the parking lamp position (≡▷◁).

Manually activate the headlamps, all exterior tail/side-marker lamps and the instrument panel/radio lights

- Turn the exterior lamps knob to this position (≡▷◁).

Turn the fog lamps (if equipped) on or off

- Press the fog lamp button located on the left side of the instrument panel.



An indicator lamp will illuminate when the fog lamps are on.

See Section 3 of your Owner Manual.

Content Theft-Deterrent System (if equipped)

Arm the system

- Lock the doors using the Remote Keyless Entry transmitter. The alarm is activated when the symbol shown above illuminates in the instrument panel cluster (approximately 30 seconds).



If your vehicle is equipped with a Driver Information Center, you can program the alarm to the following:

- Both Horn/Headlamps
- Horn only
- Lamps only
- Off

Note: Your vehicle's factory default setting is Horn and Lamps. See the Memory Settings for Your Vehicle section of this booklet for more information.

See Section 2 of your Owner Manual.

Daytime Running Lamps (DRL)

Disable the DRL when idling

- Shift the vehicle into Park.

See Section 3 of your Owner Manual.

Tire Pressure Monitor (if equipped)

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the low tire pressure warning light (!) on the instrument panel. The low tire pressure warning light will remain on until you correct the tire pressure.

You may also have a CHECK TIRE PRESSURE message appear on the DIC (if equipped).

Correcting the Tire Pressure

When the low tire pressure warning light illuminates, you must fill the tire to the proper tire inflation pressure. The Tire and Loading Information label shows the correct inflation pressure for the tires when they're cold. "Cold" means your vehicle has been sitting for at least three hours or driven no more than one mile.

You can temporarily remove the DIC message by acknowledging it with your DIC controls. However, at the next vehicle start-up, the DIC message will reappear if the tire pressure has not been corrected.

You may notice during cooler conditions that the low tire pressure warning light will appear when the vehicle is first started and then turn off as you start to drive the vehicle. This could be an early indicator that your tire pressures are getting low and need to be inflated to the proper pressure.

Note: The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance.

See Section 5 of your Owner Manual.

Memory Positions for Driver's Seat, Mirrors and Power Adjustable Pedals (if equipped)

Use the driver's door mounted controls to:



- Adjust driver seat, including lumbar adjustment
- Adjust gas and brake pedals
- Adjust the outside rearview mirrors
- With the vehicle in Park, press and hold Memory 1 or 2 until two chimes sound (about four seconds)

To set up for another driver:

- Repeat the process with the other memory button

See Section 2 of your Owner Manual.

Memory Settings for Your Vehicle (Driver Information Center) (if equipped)

To scroll through the features that can be customized using the Driver Information Center:

1. Press the **i** (Personalization) button located on the steering wheel.
2. Press the **←** (Select) button to choose your desired setting. The first setting is the default setting from the factory.
3. Press **i** to move to the next feature.

Lock Doors

(Automatically locks the doors.)

- Lock Doors: In Gear
- Lock Doors: With Speed

Unlock Doors

(Automatically unlocks the doors.)

- Unlock Doors: In Park
- Unlock Driver: In Park
- Unlock Doors: Key Out
- Unlock Doors: Manually

Door Lock Delay

(Delays locking the doors and tailgate until five seconds after the last door is closed.)

- Door Lock Delay: Off
- Door Lock Delay: On

Lock Feedback

(The feedback received when locking the vehicle with the Remote Keyless Entry transmitter.)

- Lock Feedback: Both
- Lock Feedback: Lamps
- Lock Feedback: Horn
- Lock Feedback: Off

Unlock Feedback

(The feedback received when unlocking the vehicle with the Remote Keyless Entry transmitter.)

- Unlock Feedback: Lamps
- Unlock Feedback: Horn
- Unlock Feedback: Both
- Unlock Feedback: Off

Headlamp Delay

(The amount of time the headlamps will stay on after the vehicle is turned off.)

- Headlamp Delay: 10 Sec
- Headlamp Delay: 20 Sec
- Headlamp Delay: 40 Sec
- Headlamp Delay: 1 Min
- Headlamp Delay: 2 Min

- Headlamp Delay: 3 Min
- Headlamp Delay: Off

Perimeter Lights

(The headlamps and back-up lamps will come on for 40 seconds, if it is dark enough, when unlocking the vehicle with the Remote Keyless Entry transmitter.)

- Perimeter Lights: On
- Perimeter Lights: Off

Easy Exit Seat

(The driver's seat moves to the exit position when the key is removed from the ignition.)

- Easy Exit Seat: Off
- Easy Exit Seat: On

Curb View

(The outside rearview mirror(s) tilt down when the vehicle is shifted into Reverse.)

- Curb View: Off
- Curb View: Passenger
- Curb View: Driver
- Curb View: Both

Alarm Warning

(The feedback received when the alarm is active.)

- Alarm Warning: Both
- Alarm Warning: Off
- Alarm Warning: Horn
- Alarm Warning: Lamps

Language

(The Driver Information Center display language.)

- Language: English
- Language: Français (French)
- Language: Español (Spanish)

Display Units

(The units in which all information will be displayed.)

- Display Units: English
- Display Units: Metric

See Section 3 of your Owner Manual.

Odometer/Trip Settings (if equipped)

Press the trip information button  to scroll through the Odometer, Trip A, Trip B, Tire Pressures, Timer and Engine Hours choices on the Driver Information Center.



Odometer

This mode shows the total distance the vehicle has been driven in either miles or kilometers. Pressing the reset stem located on the instrument cluster with the vehicle off will also display the odometer.

Trip A

This mode shows the current distance traveled since the last reset for TRIP A in either miles or kilometers.

Trip B

This mode shows the current distance traveled since the last reset for TRIP B in either miles or kilometers.

Reset Trip Information

To reset TRIP A or TRIP B information, press and hold the Select button (◀) for one second while in one of the trip modes. This will reset the information for TRIP A or TRIP B. You can also reset TRIP A or TRIP B while they are displayed by pressing the reset stem on the cluster. If you press and hold the reset stem or ◀ for four seconds, the display will show the distance traveled since the last ignition cycle for TRIP A or TRIP B.

Timer

The DIC can be used as a timer. Press ◀ while TIMER is displayed to start the timer. The display will show the amount of time that has passed since the timer was last reset, not including time the ignition is off, up to 99 hours, 59 minutes and 59 seconds (99:59:59).

Engine Hours

This mode shows the total number of hours the engine has run. Pressing and holding the reset stem located on the instrument cluster for about four seconds will also display the engine hours after the odometer is displayed when the vehicle is off.

See *Section 2 of your Owner Manual.*

Fuel Information (if equipped)

Press the fuel information button  to scroll through the Fuel Range, Fuel Used, Average Economy and Engine Oil Life selections on the Driver Information Center.

Fuel Range

This mode shows the range in miles that the vehicle can travel with the current amount of fuel.

Fuel Used

This mode shows the current amount of fuel used in gallons since the last reset for Fuel Used. This mode should be reset after every fuel tank fill-up.

Average Economy

This mode shows the average fuel economy in miles per gallon since the last reset for Average Economy.

Engine Oil Life

This mode shows the percentage of oil life left until it is recommended to change the engine oil. An oil and filter change should be performed within 600 miles of the Change Oil message being displayed.

See *Section 3 of your Owner Manual.*

Vehicle Symbols Glossary

Following are examples of symbols you may find on your vehicle. It is important to become familiar with them, as they alert you to various vehicle operating conditions.

	Adjustable Pedals (if equipped)		Fog Lamps
	Air Bag Readiness and Warning Light		Front and Side Window Defrost
	Air Conditioning (A/C)		Headlamps
	Antilock Brake System Warning Light		Instrument Panel Brightness Control
	Auxiliary Roof-Mounted Lamp Switch (if equipped)		Malfunction Indicator Lamp (Check Engine Light)
	Battery Warning Light		Off (for example, headlamp and climate controls)
	Brake System Warning Light		Off/On (for example, inside rearview mirror)
	Content Theft Deterrent		On (for example, cruise control lever)
	Cruise Control Set		Parking Lamps
	Dome Lamps Override Button		Driver Safety Belt Reminder Light (if equipped)
	Driver Information Center Trip Information Button (on steering wheel)		Rear Door Security Locks
	Driver Information Center Fuel Information Button (on steering wheel)		Rear Window Defogger
	Driver Information Center Personalization/Menu Button (on steering wheel)		StabiliTrak® – Stability Control System (if equipped)
	Driver Information Center Select Button (on steering wheel)		Tire Pressure Monitor Light (if equipped)
			Tow/Haul Mode Light

Roadside Assistance

1-800-GMC-8782

TTY: 1-888-889-2438

As the proud owner of a GMC Yukon or Yukon Denali, you are automatically enrolled in the GMC Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

GMC's Roadside Assistance toll-free number is staffed by a team of technically trained advisors, who are available 24 hours a day, 365 days a year. We take the anxiety out of uncertain situations by providing minor repair information over the phone or making arrangements to tow your vehicle to the nearest GMC dealer.

We will provide the following services for 3 years/36,000 miles (60,000 km), at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealership for warranty service
- Flat tire assistance
- Jump starts

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

GMC reserves the right to limit services or reimbursement to an owner or driver when, in GMC's judgment, the claims become excessive in frequency or type of occurrence.

Roadside Assistance and OnStar

Press the blue OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your condition, contact Roadside Assistance and relay your exact location so you will get the help you need.

My GMLink

The GMC Owner Center at My GMLink is a complimentary service for GMC owners, a one-stop resource to enhance your GMC ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at www.mygmlink.com

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. Copyright 2005 by GM Corp. All rights reserved.



06DENALIGTK A