


2004

DEVILLE

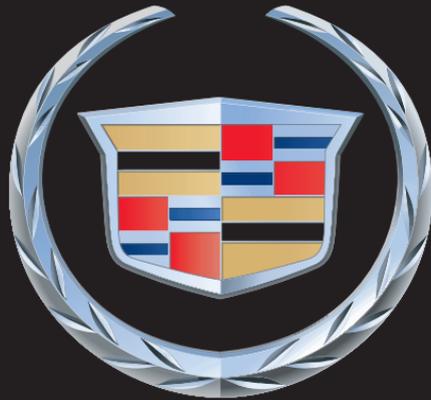

CUSTOMER CONVENIENCE/PERSONALIZATION GUIDE

TABLE OF CONTENTS

DRIVER INFORMATION

- Instrument Panel (DeVille and DHS)
- Instrument Panel (DTS)
- Digital Cluster
- Analog Cluster (DHS/DTS)

AUDIO SYSTEMS

- Audio System Control Designations and Functions
- Preset Stations
- Setting the Time
- Loading CD Changer


PERSONALIZATION GUIDE

MAINTENANCE/OWNER PRIVILEGES

COMFORT/CONVENIENCE

- Tri-zone Climate Control System
- Driver Information Center Controls
- Driver Memory Settings
- Heated Seats, Heated and Cooled Seats
- Ultrasonic Rear Parking Assist (URPA)
- Night Vision

Driver Information

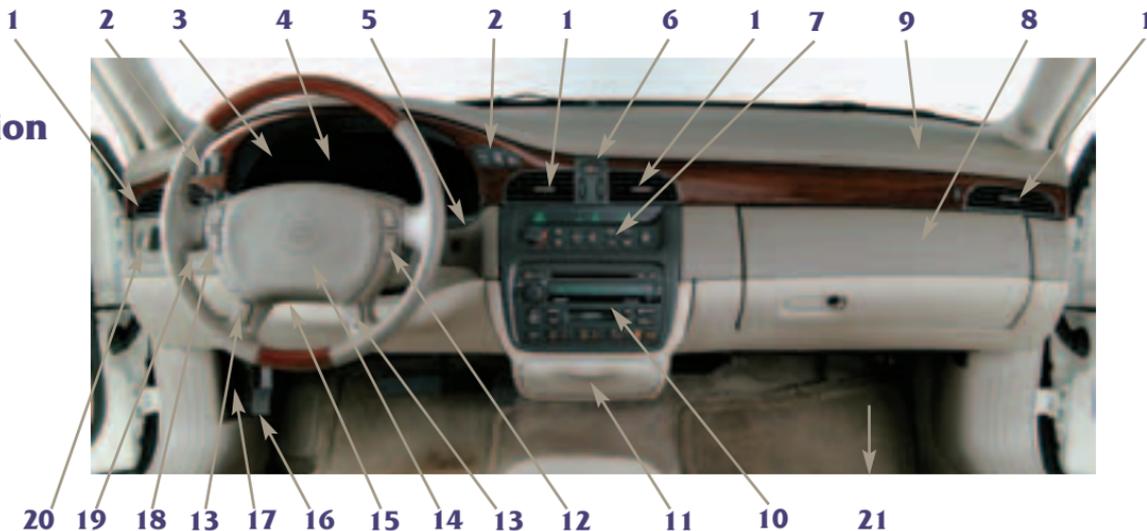

INSTRUMENT PANEL DeVille and DHS

- | | | |
|---|--|--|
| 1. Air Outlets | 9. Passenger-Side Air Bag | 17. Hood Release |
| 2. Driver Information Center Controls | 10. Audio System | 18. Steering Wheel Climate System Controls or optional Phone Controls |
| 3. Digital Instrument Cluster (available on DHS)
Analog Instrument Cluster (DHS) | 11. Ashtray/Lighter | 19. Turn Signal/Multifunction Lever |
| 4. Driver Information Center Display | 12. Steering Wheel Audio System Controls | 20. Lighting Controls |
| 5. Shift Lever | 13. Cruise Control | 21. 12V Power Outlet
(On front of Passenger seat, near umbrella tray) |
| 6. Hazard Warning Flasher | 14. Driver-Side Air Bag/Horn | |
| 7. Electronic Climate Controls | 15. Tilt Wheel Lever (DeVille)
Power Tilt/Telescope Wheel Control (DHS) | |
| 8. Glove Box | 16. Parking Brake Pedal | |


Refer to your Owner Manual for further information.

Driver Information



INSTRUMENT PANEL DTS

- | | | |
|---------------------------------------|---|---|
| 1. Air Outlets | 10. Ashtray/Lighter | 16. Parking Brake Pedal |
| 2. Driver Information Center Controls | 11. Console Shift Lever | 17. Hood Release |
| 3. Digital Instrument Cluster | 12. Steering Wheel Audio System Controls | 18. Steering Wheel Climate System Controls or optional Phone Controls |
| 4. Driver Information Center Display | 13. Driver-Side Air Bag/Horn | 19. Turn Signal/Multifunctional Lever |
| 5. Hazard Warning Flasher | 14. Cruise Control | 20. Lighting Controls |
| 6. Electronic Climate Controls | 15. Tilt Wheel Lever (Power Tilt/Telescope Wheel Control if equipped) | 21. 12V Power Outlet (On front of Passenger seat, near umbrella tray) |
| 7. Audio System | | |
| 8. Glove Box | | |
| 9. Passenger-Side Air Bag | | |

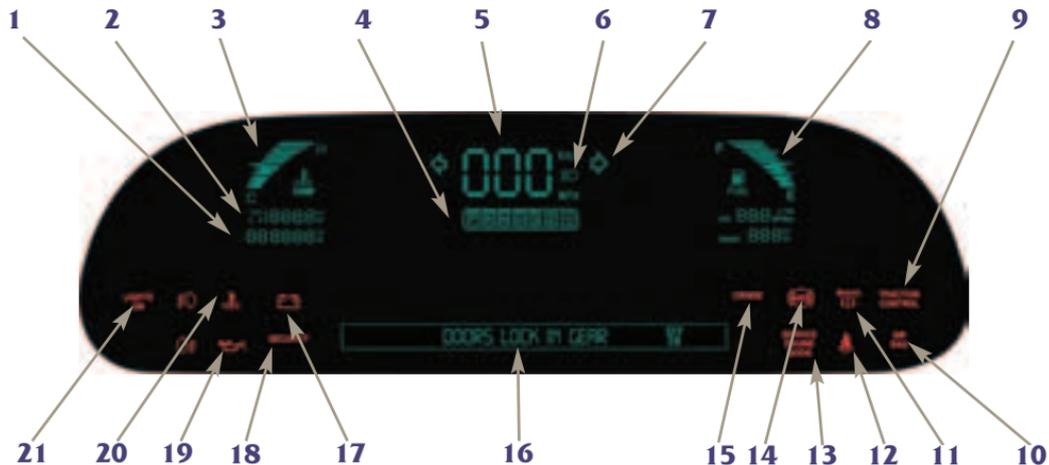

DIGITAL CLUSTER DeVille (available on DHS)

- | | | |
|---|---|---|
| <ul style="list-style-type: none"> 1. Odometer 2. Trip Odometer 3. Engine Coolant Temperature Gauge 4. PRND321 Indicator 5. Speedometer 6. High Beam Indicator Light 7. Turn Signal Indicator 8. Fuel Data Center 9. Traction Control System Warning Light | <ul style="list-style-type: none"> 10. Air Bag Ready Light 11. Brake System Warning Light 12. Seat Belt Reminder Light 13. Service Engine Soon Light 14. Antilock Brake System Warning Light 15. Cruise Control Light 16. The Driver Information Center (DIC) shows the status of many of your vehicle's systems; the DIC also | <ul style="list-style-type: none"> displays driver personalization features and warning/status messages 17. Charging System Light 18. Security Light 19. Oil Pressure Light 20. Engine Coolant Temperature Warning Light 21. Exterior Lamps Indicator Light |
|---|---|---|

Refer to your Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver Information



ANALOG CLUSTER DHS/DTS

- | | | |
|--|---|--|
| 1. Engine Coolant Temperature | 11. Safety Belt Reminder Light | 17. High Beam Indicator Light Location |
| 2. Tachometer | 12. Antilock Brake System Warning Light | 18. Trip Odometer |
| 3. PRND321 Indicator | 13. Service Engine Soon Light | 19. Charging System Light |
| 4. Digital Speed Display | 14. Cruise Control Light | 20. Security Light |
| 5. Turn Signal Indicator | 15. Odometer | 21. Oil Pressure Light |
| 6. Speedometer | 16. The Driver Information Center (DIC) shows the status of many of your vehicle's systems; the DIC also displays driver personalization features and warning/status messages | 22. Engine Coolant Temperature Warning Light |
| 7. Fuel Gauge | | 23. Fog Lamp Indicator Light (if equipped) |
| 8. Traction Control System Warning Light | | 24. Exterior Lamps Indicator Light |
| 9. Air Bag Ready Light | | |
| 10. Parking Brake Indicator Light | | |

Audio Systems

AM/FM Stereo with Compact Disc Player (Base System)



AM/FM Stereo with Cassette and Compact Disc Player/RDS/DSP (DHS & DTS if equipped)



AM/FM Stereo with Cassette and Compact Disc Player



Navigation/Radio System

Note: If your vehicle is equipped with the Radio/Navigation System, please see your NAVIGATION SYSTEM SUPPLEMENT for operating instructions.



Refer to your Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Audio Systems

AUDIO SYSTEM CONTROL DESIGNATIONS AND FUNCTIONS

PWR – Press to turn system ON or OFF.

VOL – Turn to control volume.

RDS – Press to activate an RDS function.

TA – Press to seek traffic announcement.

MSG – Press to see message when MSG is displayed.

TUNE/SEEK – Press up arrow to seek next station, tape selection or disc track. Press down arrow to seek previous station, tape selection or CD track.

SCAN – Press to scan stations, tape selections or CD tracks.

SOURCE – Press to select tape or disc source.

BAND – Press to select AM, FM or XM band.

 – Press to eject tape or disc.

SIDE – Press to play other side of tape.

TONE – Up-level system: Press and release to display BALANCE, FADE, BASS, TREBLE or MIDRANGE.

TONE  – Base system: Press TONE to select BASS, TREBLE, or MIDRANGE.

Press speaker symbol to select BALANCE or FADE.

- LEVEL + – Press to select tone or speaker level.

DSP – Press to turn DSP on and continue to press and release until desired listening experience appears in display. To turn DSP off, press and hold button until DSP OFF is displayed.

1-6 – Base system: Press to select discs loaded in changer.

PTY – Press to select RDS or XM listening category. See Owner Manual for complete instructions.

RDM – Press to listen to CD tracks in random order.

DISC – Press to select next disc if equipped with changer.

RW () () – Press to rewind tape or reverse through track.

FF () () – Press to fast-forward tape or advance through track.

NEXT – Press to select next tape selection or CD track.

PREV – Press to select previous tape selection or CD track.

PRESET STATIONS

- Turn radio on.
- Select band.
- Tune to desired station.
- Press one of six-numbered buttons for two seconds.

SETTING THE TIME

All radios:

- Press and hold HR button until correct hour appears in display.
- Press and hold MN button until correct minute appears in display.
- Display time when ignition is off by pressing either HR or MN button.

RDS radio only: To synchronize time with RDS broadcast information:

- Press and hold HR and MN buttons at same time until TIME UPDATED is displayed. If time is not available from station, NO STATION TIME will be displayed.

LOADING CD CHANGER

- Slide the door of the changer open. The magazine will eject only when the door is completely open.
- Press the EJECT button to remove the magazine. (The EJECT button is on the upper left after the door is opened. In this view, the button is hidden by the closed door.)
- Load the trays into the magazine from the bottom to the top, placing the label side of the CD up.
- To remove a tray, press the button on the back of the magazine.
- Push the magazine into the changer, following the direction of the arrow marked on top of the magazine.



Refer to your Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Comfort/Convenience

Tri-zone Climate Control System



FRONT CLIMATE CONTROL SYSTEM

Your climate control system can operate automatically or manually. In the automatic mode, the system automatically controls the temperature and fan speed.

1. Driver-Side Temperature Knob

Press the knob to turn the system on. Turn the knob to increase or decrease the temperature.

2. Outside Temperature Display

3. Auto

Press the AUTO button to switch from manual to automatic operation.

4. Passenger-Side Temperature

Press the PASS TEMP button to turn the system on. Press the up or down arrow to increase or decrease the temperature.

5. PASS OFF

Press button to deactivate the dual zone system.

6. AC

Press this button to turn the air conditioning on and off.

7. Recirculation

Press this button to limit the amount of outside air entering the vehicle.

8. Fan

During AUTO operation, the fan is automatically

controlled. In the manual mode, to increase or decrease fan speed, press the up or down arrow.

9. Mode

Press the button to deliver air through the floor, middle or windshield outlets. Settings include heater, bi-level, upper and defog.

10. Rear Window Defogger

Press this button to defog the rear window and both outside mirrors.

11. Defrost

Press this button to quickly remove fog or frost from the windshield.

1 Display 2 3

REAR CLIMATE CONTROL

1. Mode

Press this button to enter MANUAL mode, and to adjust airflow direction up or down.

1. To enter AUTO mode, press the button down until the display indicates AUTO.

2. Fan Speeds

Press this button to adjust blower speed.

3. Temperature

Press the TEMP up or down button to adjust the temperature.

DRIVER INFORMATION CENTER CONTROLS

1. ENG/MET

Press this button to display instrument cluster and climate control information in English or Metric.

2. DSPL MODE

Turns digital/analog display feature on or off (analog only). Turns all but speedometer off on digital model.

3. RESET TRIP A/B

There are two trip odometers

Press the A/B portion of the button to select and view the trip odometers.

Press the reset portion of the button to reset the displayed trip odometer.



1

2

3

4. INFO

Press this button up or down to display information such as battery volts, oil life, average miles per gallon, and outside air temperature.

5. INFO RESET

Press this button to reset average fuel economy, fuel used, average speed, timer, oil life left, and transmission fluid life.



4

5

6

TO USE THE TIMER FUNCTIONS:

- Press the INFO button (4) until the timer function is displayed.
- Press the ON/OFF button (6) to begin timing.
- Press button (6) again to stop timing.
- Press INFO/RESET (5) to return to zero.
- Press the INFO button (4) until display is off to exit.

Refer to your Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Comfort/Convenience

DRIVER MEMORY SETTINGS

(if equipped)

Four-Button Memory Systems

Set Seat and Mirror positions, Climate Control and Audio Settings, and (if equipped) Power Tilt/Telescope Steering Wheel


With vehicle in PARK (P), adjust driver's seat (including lumbar support and recliner) outside rearview mirror positions, climate control, audio settings and (if equipped) power tilt/telescope steering wheel position.

Note: Memory 1 or 2 is dependent on the RKE transmitter being used and the key being in the ignition during programming. See the back of your RKE transmitter for the corresponding memory number.



1. Press and hold the SET button until you hear a beep.
2. Press and hold one of the two numbered buttons until you hear a beep.

Unless REMOTE RECALL (see Personalization Guide) has been turned OFF, unlocking with the key fob will recall the settings.

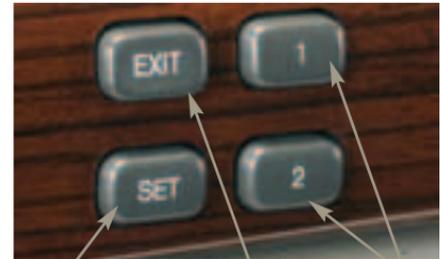

Set EXIT Position

With vehicle in PARK (P), adjust driver seat (including recliner) and the power tilt/telescoping steering wheel (if so equipped) to desired exit position.

1. Press the SET button. Release it when you hear a beep.
3. Press the EXIT button. Release it when you hear a beep.

Three-Button Memory Systems

If your vehicle is equipped with the three button memory system, follow these procedures to set the memory: With the vehicle in Park (P) adjust the driver's seat including lumbar support and recliner, outside rearview mirror positions, climate control and audio settings and (if equipped) power tilt/telescoping steering wheel position.

1. Press and hold Memory button 1 or 2 until two beeps sound. Again look at your RKE transmitter to determine which Memory button you need to set.

Set EXIT Position

1. Recall driver position by briefly pressing the appropriate Memory button or RKE unlock button.
2. Adjust driver seat and power tilt/telescoping steering wheel (if equipped) to the desired exit position.
3. Press and hold the EXIT button until two beeps sound.

These settings can be restored by pressing the Memory 1 or 2 button on the driver's door (shown above), or by using the Remote Keyless Entry (RKE) transmitter. The vehicle memory settings will correspond to the number on the RKE: 1 or 2.

Heated Seats Heated and Cooled Seats (if equipped)

Your vehicle may have heated or heated and cooled seats. The buttons are located on the driver and front passenger door armrests.

The button with the heat lines through just the seatback turns on the heated seatback.

The button with heat lines through both the seatback and seat cushion turns on the heated seatback and seat cushion.

The button with the snow flake above the seat turns on the cooled seatback and seat cushion.

There are three temperature settings for each of the features above.

A light bar on the controls will display which setting the feature is in: high, medium or low. The longest bar shows the high range and the shortest bar shows the low range.

When you press a button, the feature will turn on the highest setting. Each time you press the button, the feature will go down one temperature setting.

To turn the feature off, keep pressing the button until the display lights turn off.

Refer to your Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Comfort/Convenience

ULTRASONIC REAR PARKING ASSIST (URPA) (if equipped)

This feature uses ultrasonic sensors in your bumper to help determine how close an object is to your rear bumper.

Both a variable audible chime and three color coded lights (located inside your vehicle above the rear window) convey your distance to an object.

URPA activates automatically when your vehicle is shifted into Reverse (R) and your vehicle speed is less than 3 mph (5 km/h).



Disable URPA

To disable URPA, press the URPA on/off button located near the climate control system and radio.

NIGHT VISION (if equipped)

This feature helps you see better at night — beyond the headlamps — by sensing heat given off by objects in its field of view.

Warmer objects such as pedestrians, animals and other moving vehicles will appear white. Colder objects, such as the sky, signs and parked vehicles, will appear darker.

The controls are located on the lower-left side of the instrument panel. They can be used to adjust the brightness and location of the image.



2

1

1. Operate Night Vision

Move the dimmer switch up to turn On. Continue upward to increase brightness. Move switch down to decrease brightness.

To turn off image, move dimmer switch to OFF position.

2. Locate Image

Push up on the image switch to raise the image or down to lower the image.

Personalization Guide

You can personalize many of your DeVille's features to your own needs.

DIC = Driver Information Center

RKE = Remote Keyless Entry

With the ignition key **ON** and the vehicle in **PARK (P)**, press the appropriate memory button "1" or "2" on the driver's door panel that corresponds to the number on the back of your RKE. **Note:** Memory 1 or 2 is dependent on the RKE transmitter being used and the key being in the ignition during programming. See the back of your RKE transmitter for the corresponding memory number.


The following features and instructions are for vehicles equipped with either Digital or Analog instrument clusters.

The back-lit buttons, which control the **DIC**, are located immediately to the right of the instrument panel:


- **INFO** button selects the next feature.
- **INFO/RESET** button exits the programming.
- **ON/OFF** turns feature on or off.

To start programming press (▲) on the **INFO** button until **Feature Programming** appears in the **DIC**. Press the **ON/OFF** button to enter feature programming. Press down (▼) on the **INFO** button to scroll through the menu. To exit, press the **INFO RESET** button.

Refer to your Owner Manual for further information.

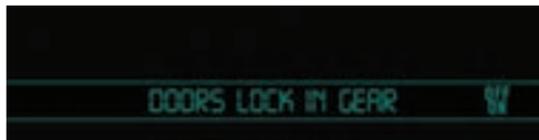

DIC readout on INSTRUMENT CLUSTER with OFF/ON status

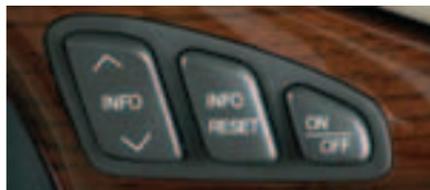

DIC controls located to right of cluster

Reviewed with Customer (Please Check Box)

D E V I L L E

Personalization Guide

Programmable Features

NOTE: Shaded areas are for vehicles equipped with the Memory Package.

DRIVER/RKE 1 DRIVER/RKE 2
ON OFF ON OFF

-

Remote Recall. If you want the seat and mirror settings activated when UNLOCK is pressed on the RKE, press ON when Remote Recall Memory appears in the DIC. To turn feature off, press OFF. If you select ON, the DIC will advance to the Mirror to Curb in Reverse feature.

-

Key in Recall. If you want the seat and mirror settings activated using the ignition key, press ON when Key in Recall Memory appears in the DIC. To turn feature off, press OFF.

-

Auto Exit Seat. If you want the driver's seat to move to the exit position with the ignition key OFF and door open, press INFO until Auto Exit Seat appears in the DIC, then press ON/OFF to select. Press the down arrow on INFO to continue.

-

Auto Exit Steering Wheel. (DHS & DTS only) If you want the steering wheel to move to the exit position when the ignition key is off and the driver's door is opened, press ON when Auto Exit Strg Wheel appears in the DIC. To turn feature off, press OFF.

DRIVER/RKE 1 DRIVER/RKE 2
ON OFF ON OFF

-

Lights Flash at Unlock. If you want the parking lamps to flash twice when UNLOCK is pressed on the RKE, press ON when Lights Flash at Unlock appears in the DIC. To turn feature off, press OFF.

-

Lights Flash at Lock. If you want the parking lamps to flash once when LOCK is pressed on the RKE, press ON when Lights Flash at Lock appears in the DIC. To turn feature off, press OFF.

-

Horn Sounds at Lock. If you want the horn to sound once when LOCK is pressed on the RKE, press ON when Horn Sounds at Lock appears in the DIC. To turn feature off, press OFF.

-

Exterior Lighting. If you want the parking, tail, backup, and high beam lamps illuminated for 20 seconds when UNLOCK is pressed on the RKE (or until the door is opened or the ignition key is turned out of the OFF position), press ON when Ext Lights at Unlock appears in the DIC. To turn feature off, press OFF.

DRIVER/RKE 1 DRIVER/RKE 2
ON OFF ON OFF

- Doors Lock in Gear.** If you want all the doors to lock when the vehicle is shifted out of PARK (P), press ON when Doors Lock in Gear appears in the DIC. To turn feature off, press OFF.
- Driver Unlock in Park.** If you want the driver's door to unlock when the vehicle is shifted into PARK (P), press ON when Driver Unlock in Park appears in the DIC. To turn feature off, press OFF.
- Driver Unlock Key Off.** If you want the driver's door to unlock when the ignition key is turned OFF, press ON when Driver Unlock Key Off appears in the DIC. To turn feature off, press OFF.
- Doors Unlock in Park.** If you want all the doors to unlock when the vehicle is shifted into PARK (P), press ON when Doors Unlock in Park appears in the DIC. To turn feature off, press OFF.
- Doors Unlock Key Off.** If you want the doors to unlock when the ignition key is turned OFF, press ON when Doors Unlock Key Off appears in the DIC. To turn feature off, press OFF.

DRIVER/RKE 1 DRIVER/RKE 2
ON OFF ON OFF

- Mirror to Curb in Reverse.** If you want the passenger's outside mirror to tilt downward when the vehicle is shifted into REVERSE (R), press ON when Mirror to Curb in Rev appears in the DIC. To turn feature off, press OFF.

- Tire Pressure Display (if equipped).** Press down arrow on the INFO button until the TIRE PRESSURE DISPLAY prompt appears. To turn this feature on, press ON/OFF until ON is displayed in the DIC. To turn the feature off, press ON/OFF until OFF is displayed.


CAUTION: Do not attempt programming the vehicle while driving.

Refer to your Owner Manual for further information.

Reviewed with Customer (Please Check Box)

D E V I L L E

Maintenance

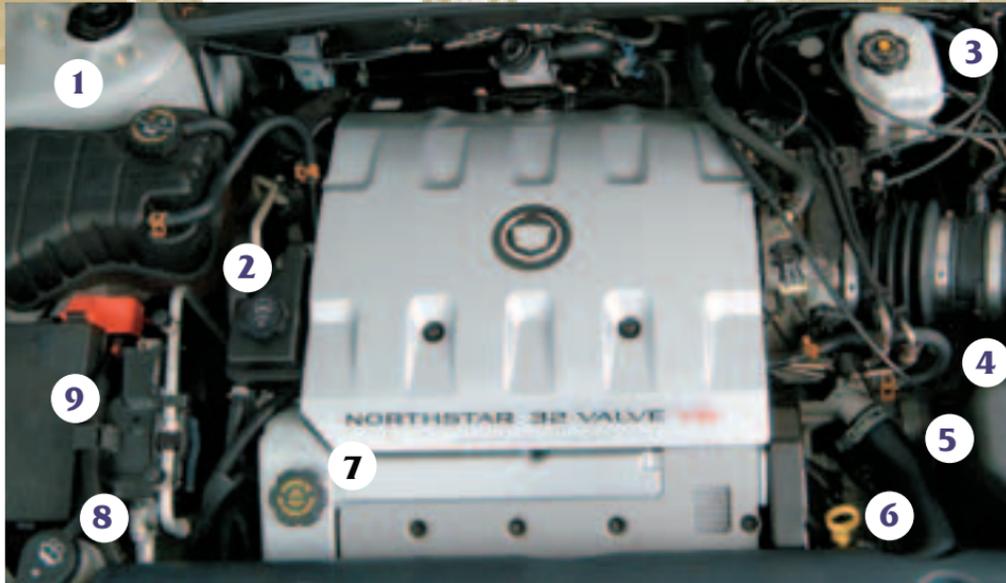

ENGINE COMPARTMENT

- 1. Coolant Fill
- 2. Power Steering Fluid Fill Location
- 3. Brake Master Cylinder
- 4. Air Filter
- 5. Transaxle Fluid Dipstick
- 6. Engine Oil Dipstick
- 7. Oil Fill Location
- 8. Windshield Washer Fluid Fill
- 9. Fuses/Relay Center

Owner Privileges™

To make your ownership experience as satisfying and rewarding as possible, we are proud to provide you with Cadillac's industry-leading Owner Privileges, designed to accommodate you anytime and anywhere.

ROADSIDE SERVICE **1-800-882-1112**

Roadside Service provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services (where available):

- **Towing**
- **Battery Jump-Starting**
- **Lockout Assistance**
- **Fuel Delivery**
- **Flat Tire Change** (covers change only)

TRIP INTERRUPTION – If your trip is interrupted due to a component failure covered under warranty, incidental expenses may be reimbursed including hotel, meals and rental car.

COURTESY TRANSPORTATION may also be provided for warranted repairs including shuttle service for same day repairs and loaner transportation for overnight repair. Roadside Service is also available to Cadillac customers beyond the warranty period for a charge.

CUSTOMER ASSISTANCE – 1-800-458-8006
In Canada, call 1-800-263-3777 (English) or 1-800-263-7854 (French).

Should you need to ask questions, make a comment, or request additional information, the exclusive Cadillac Customer Assistance Center is staffed around the clock with professionals to serve you.

When you call Cadillac Roadside Service or Customer Assistance, if possible, please provide

the phone advisor with:

- Your telephone number
- Your location
- Your Cadillac's location
- A description of the problem
- Vehicle ID number
- Make and year of your Cadillac
- Delivery date
- Current mileage

This book contains the latest information available to Cadillac at the time of this printing. Cadillac reserves the right to make changes in the product after that time without further notice.

DeVille is a registered trademark of Cadillac Motor Car Division and General Motors Corporation.

Copyright 2003,
Cadillac Motor Car Division. All rights reserved.

04DEVILLEGTK

Refer to your Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver
Information

Audio Systems

Comfort/
Convenience

Personalization
Guide

Maintenance/
Owner Privileges

Cadillac

