

**2005**

**STS**



**CUSTOMER CONVENIENCE/PERSONALIZATION GUIDE**

## TABLE OF CONTENTS

### DRIVER INFORMATION

- Instrument Panel
- Instrument Panel Cluster
- Reconfigurable Head-Up Display (HUD)
- Driver Information Center Controls

### ENTERTAINMENT SYSTEMS

- Radio Controls
- Digital Signal Processing (DSP)
- Radio Data System (RDS) Features
- CD Changer Controls
- DVD Changer Controls
- Navigation Radio System

### CONVENIENCE FEATURES


- Keyless Access System
- Starting Your Engine
- Adaptive Remote Start
- Driver Memory Settings
- Voice Recognition
- IntelliBeam
- Adaptive Cruise Control
- Express Windows
- Deck Lid Release

### VEHICLE PERSONALIZATION

#### MAINTENANCE

- Fluids

#### OWNER PRIVILEGES™

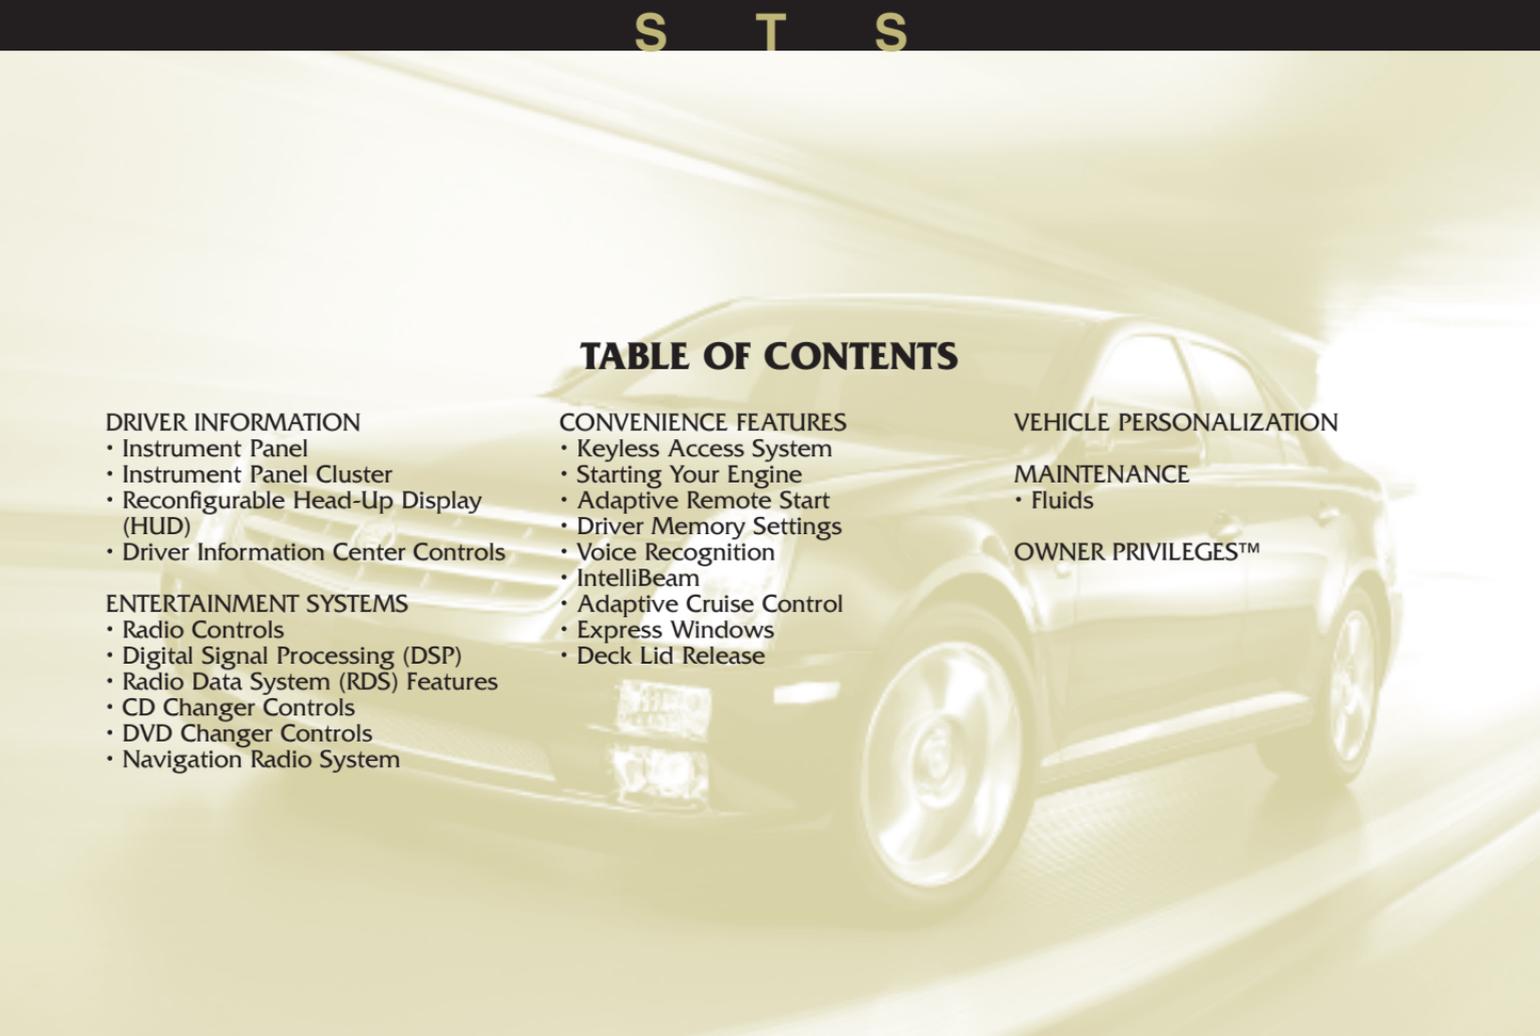

## Driver Information



## INSTRUMENT PANEL

1. HUD/DIC Controls
2. Turn Signal/Multifunction Lever
3. Instrument Panel Cluster
4. Windshield Wiper/Washer Lever

5. Navigation/Radio System (if equipped)
6. Audio System
7. Adaptive Cruise Control, Voice Recognition and Heated Steering Wheel Controls (if equipped)
8. Horn
9. Audio System Controls

10. Start Button
11. Dual Zone Climate Control System
12. Shift Lever
13. Glove Box

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver  
Information

Entertainment  
Systems

Convenience  
Features

Vehicle  
Personalization

Maintenance

Owner  
Privileges

# S T S



## INSTRUMENT PANEL CLUSTER

1. Engine Coolant Temperature Gauge
2. Turn Signal Indicator Lights
3. Tachometer
4. High Beam Indicator Light
5. Speedometer
6. Tire Pressure Light
7. Fuel Gauge
8. Traction Control System Warning Light
9. Antilock Brake System Warning Light
10. Brake System Warning Light
11. Air Bag Readiness Light
12. Cruise Control On Light
13. Driver Information Center Display
14. Charging System Light
15. Oil Pressure Light
16. Malfunction Indicator Lamp (Service Engine Soon Light)
17. Safety Belt Reminder Light
18. Security Light
19. Fog Lamp Light


**Note:** Some of the gauges and indicators may differ from the illustration presented.

**IMPORTANT:** The instrument panel cluster alerts you to many important aspects of your vehicle's operation. The message center can provide critical information to prevent damage to your vehicle. It is important to read your Owner Manual and become familiar with the instrument cluster's lights, gauges and indicators, particularly the message center, as well as what action can be taken to ensure your safety and to prevent damage.

### **RECONFIGURABLE HEAD-UP DISPLAY (HUD) (if equipped)**

Your vehicle's Head-Up Display (HUD) projects some important driver information from the instrument panel cluster on the windshield, reducing the need to look away from the road. The information appears as an image out toward the front of the vehicle.

The HUD displays the speedometer, turn signal indicators, high-beam headlamps indicator symbol, adaptive cruise control features/ indicators, check gauges icon and some radio and navigation features.

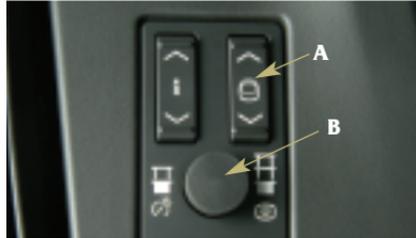

The HUD controls are located on the instrument panel to the left of the steering wheel.

- A** Press this button to change the up-and-down position of the HUD image on the windshield. (It cannot be adjusted side-to-side.) Press the top part of the button to move the HUD image up. Press the bottom part of the button to move the HUD image down.
- B** Use this knob to adjust the brightness of the instrument cluster and interior lighting as well as the HUD image. Press and release the knob so it pops out, and then turn the knob to increase or decrease the brightness of the instrument cluster and interior lighting. Pull out the knob to the second detent in order to increase

or decrease the brightness of the HUD image.

To turn off the HUD image, turn the knob all the way to the left when the knob is pulled out to the second detent.

Adjust your seat to a comfortable driving position before adjusting the HUD image. If you change your seat position, you may have to readjust the HUD image for proper viewing.

If the ignition is on and you cannot see the HUD image, check to see whether:

- Something is covering the HUD unit
- The brightness is adjusted properly
- The HUD image is adjusted to the proper height
- Ambient light in the direction your vehicle is facing is low
- A fuse is blown (see "Fuses and Circuit Breakers")
- You are wearing polarizing sunglasses
- The windshield and HUD lens are clean (do not spray glass cleaner directly on the HUD lens)


Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

## DRIVER INFORMATION CENTER CONTROLS

The Driver Information Center (DIC) provides information on many of your vehicle's systems and, when necessary, displays various warnings and messages. All messages will appear in the DIC display located at the bottom of the instrument panel cluster, below the tachometer and speedometer. The DIC activates automatically when you start your vehicle.

The DIC controls are located on the instrument panel, to the left of the steering column.

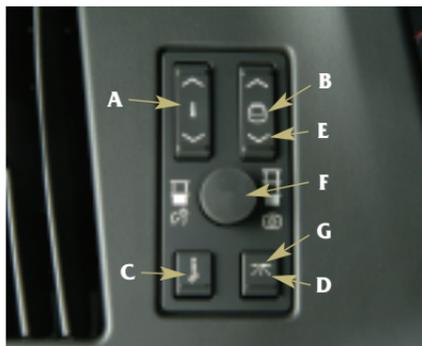

- A** Press this button to scroll through the various information displays, including fuel range, fuel economy, fuel used, average speed, timer, battery voltage, tire pressure (if equipped with tire pressure monitor), engine oil life (if equipped), and digital speed display (if equipped).
- B** Press the top of this button to scroll through the various odometers. Press the bottom of this button to reset each trip odometer back to zero.
- C** Press this button to reset certain DIC features and to acknowledge and clear DIC warning messages from the display.
- D** Press this button to change the display from English to metric.

## Uplevel DIC Systems (only)

Uplevel DIC systems also include a Head-Up Display (HUD) control. (Also see "Reconfigurable Head-Up Display" earlier in this guide.)

- E** Press the top or bottom of this button to direct the HUD image up or down on the windshield.
- F** Use this knob to adjust the brightness of the HUD image. Press the center of this knob until it releases and then pull it out to the second detent; turn it to the right or left to increase or decrease brightness.
- G** Press this button to scroll through the various odometers. Press and hold the button to reset each trip odometer back to zero.

*See Section 3 of your Owner Manual for detailed DIC system information.*

## Entertainment Systems



### RADIO CONTROLS

**PWR** (Power): Press this knob (A) to turn the system on or off.

**VOL** (Volume): Turn this knob (B) to increase or decrease volume.

**AVC** (Automatic Volume Compensation. Requires Bose® Audio System) This feature automatically adjusts audio volume based on ambient noise levels to ensure optimal listening quality. See *Section 3 of your Owner Manual for complete operating instructions.*

**BAND**: Press this button (C) to select FM1, FM2, AM, or XM1 or XM2 (if equipped).

**SOURCE**: Press this button (D) to select the radio or CD.

⏪ ⏩: Press this button (E) to scan to the next station. The station will play for five seconds and then advance to the next station. Press this button again to stop scanning. To scan preset stations, press and hold this button for two seconds until a beep sounds and PSCAN appears on the display. Press the button again to stop scanning the presets.

⏪ | ⏩: Press the right or left single arrow buttons (F) to go to the next or previous station and remain there.

**LOCAL/DISTANT Selection**: This feature allows you to search for local or distant radio stations. See *Section 3 of your Owner Manual for operating instructions.*

### DIGITAL SIGNAL PROCESSING (DSP)

If equipped with the optional Bose® Audio System, the DSP provides a choice of five listening experiences:

**DSP NORMAL**: This setting provides the best overall audio performance for all passengers.

**TALK**: This setting makes the spoken word sound clearer and is recommended when listening to non-musical programs, such as talk shows, news, sports broadcasts and books on tape.

**SPACIOUS**: This setting makes the listening space seem larger.

**REAR SEAT**: This setting provides rear passengers with the best possible sound quality.

**DRIVER SEAT**: This setting gives front passengers the best possible sound quality.

The DSP can be used with the radio or the CD player. To select a DSP option:

- Press the TUNE/SELECT knob; then turn the knob until one of the above five settings appears on the display.
- Press TUNE/SELECT to select a DSP setting.
- Press CLR to exit the display. Continue pressing CLR to return to your original display.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver  
Information

Entertainment  
Systems

Convenience  
Features

Vehicle  
Personalization

Maintenance

Owner  
Privileges

## RADIO DATA SYSTEM (RDS) FEATURES

Your radio's Radio Data System allows you to:

- Seek only stations with your preferred programming type
- Seek stations with traffic announcements
- Receive announcements of local and/or national emergencies
- Receive and display messages from radio stations

RDS features are available on FM stations that broadcast RDS information. When tuned to an RDS station, your radio displays the station name instead of the frequency. Most RDS stations broadcast their station name, time of day and a Program Type (PTY).

To activate program types:

- Press the TUNE/SEL button until PROGRAM TYPE MODE appears on the display.
- Press TUNE/SEL to select on or off. Press CLR to exit the display.

## RDS Messages

**ALERT!:** Warns of local or national emergencies and appears on the display during such an announcement. You will hear the announcement even if the radio volume is low or a CD is playing.

**MSG (Message):** Appears on the display if the current RDS station has a message, such as artist, song title, call-in phone numbers, etc. If equipped with XM Radio, press the MSG button while in XM mode to retrieve various information.\* To display the last message, press TUNE/SEL button; then turn the knob until RECALL RDS MESSAGE appears on the display. Press TUNE/SEL. The message will appear on the display.

**TP (Traffic Program):** TP will appear on the display when the radio detects an RDS station that has traffic announcement capability.

**TA (Traffic Announcement):** If TA appears on the display, the tuned radio station is capable of broadcasting traffic announcements. When a traffic announcement comes on the tuned station, you will hear it,

even if the radio volume is low or a CD is playing.

To turn the TA feature on or off:

- Press the TUNE/SEL button; then turn the knob until TRAFFIC ANNOUNCEMENT appears on the display.
- Press the knob to turn the TA feature on or off. Press the CLR button to exit the display.

**AF (Alternate Frequency):** This feature allows the radio to switch to a station with a stronger signal and of the same PTY. To turn the AF on or off, follow the above procedure. Select ALTERNATE FREQ; then continue with the above steps.

**CD Player Controls:** See Section 3 of your Owner Manual for complete Single-Disc CD Player features and operating instructions.

\*See Section 3 of your Owner Manual for a complete list of possible XM Radio Messages.

## SIX-DISC CD CHANGER CONTROLS (if equipped)

When a CD is inserted into the changer, the CD functions will appear on the display. CDs can be loaded with the vehicle ignition on or off.



To load a single CD:

- Press and release the LOAD button. Please Wait will appear on the display.
- When INSERT appears on the display, place a CD partway into the slot, label side up. The player

will pull the CD in. If the radio is on, the CD will begin to play automatically.

To load multiple CDs:

- Press and hold the LOAD button for two seconds. Please Wait will appear on the display and a beep will sound.
- When INSERT appears on the display, place a CD partway into the slot, label side up. The player will pull the CD in. If the radio is on, the last CD loaded will begin to play automatically.

**F1 CD ↓ (Down):** Press this button to go to the previous CD.

**F2 CD ↑ (Up):** Press this button to go to the next CD.

**F3 CD REV << (Reverse):** Press this button to go to the previous track. Press and hold the button to reverse quickly within a track. Release the button to play the passage.

**F4 CD FWD >> (Forward):** Press this button to go to the next track. Press and hold the button to advance quickly within a track. Release the button to play the passage.

**F5 MODE:** Press this button to select from NORMAL, RT TRK (Repeat Track), RPT CD (Repeat CD), RDM TRK (Random Track), and RDM ALL (Random All CDs). See *Section 3 of your Owner Manual* for descriptions of each mode.

**F6 DISPLAY:** Press this button to display the time of the track. Press the button again to display CD PLAY and press the button once more to clear the display.

⏪ ⏩: Press the right or left arrow button to go to the next or previous track.

⏮ ⏭: Press this button to listen to each track for 10 seconds. Press the button again to stop scanning.

⏏ (Eject): Press this button to eject the CD that is currently playing, or press and hold this button to eject all loaded CDs. This function can be used with the ignition on or off.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

## SIX-DISC CD/DVD CHANGER CONTROLS (if equipped)

With the six-disc CD/DVD changer, you can play up to six audio CDs, MP3s, DTS discs, audio DVDs or video DVDs continuously.

When a disc is inserted into the changer, the changer control functions will appear on the display. Discs can be loaded with the vehicle ignition on or off.

### Navigation Radio System

- A. Display screen
- B. Map DVD eject key
- C. Map DVD loading slot
- D. CD/DVD changer loading key
- E. CD/DVD change eject key
- F. CD/DVD changer loading slot
- G. Power/Volume knob
- H. Navigation screen tilt key
- I. SRCE (Source) key
- J. Audio key
- K. CONFIG (Configuration) key
- L. Navigation voice prompt repeat key
- M. Seek/Scan key
- N. BAND key
- O. AUX (Auxiliary) key

- P. ROUTE key
- Q. Map key
- R. Tuner knob



To load a disc(s):

- Press and release the Load hard key (D).
- Press the number touch screen key of the slot you will be loading the

disc into, starting with 1 and going up to 6, at the bottom of the CD/DVD changer screen.

- Wait to insert the disc until the screen reads Insert Disc; then place the disc partway into the slot, label side up. The player will pull the disc in.

To eject a disc(s):

- Press and release the Eject hard key (E).
- Press the number touch screen key of the slot you wish to eject at the bottom of the CD/DVD changer screen.
- If a selection is not made, the system will eject the disc in the current slot.

Once you access the CD/DVD changer screen, you can select one of the numbered touch screen keys at the bottom of the screen to go from one disc to another.

- Press one of the available touch screen keys, 1 through 6, to begin playing that disc automatically.
- When playing a DVD, press the Display touch screen key to access further DVD options.
- From the Display screen, press the DVD Menu touch screen key to access the video DVD menu.

## Convenience Features



### KEYLESS ACCESS SYSTEM

Your STS includes a Keyless Access System that enables you to lock and unlock the doors, unlock your deck lid, and arm or disarm the theft-

deterrent system from up to 30 feet away.

- A** Press this button to lock the doors. Press and hold this button to express-close all windows when outside the vehicle.
- B** Press this button once to unlock the driver's door. Press it again within 10 seconds to unlock all four doors.
- C** Use this button to remote start your vehicle (see Remote Vehicle Start instructions).
- D** Press this button to open the trunk when the engine is off or when the shift lever is in Park (P).
- E** Press this button to locate your vehicle in a parking lot. The horn will chirp three times and the headlamps and parking lamps will flash three times. To sound the panic alarm, press and hold the button for three seconds. The horn will chirp and the lamps will flash for two minutes. Press the button again to cancel the panic alarm.

### STARTING YOUR ENGINE

Your STS features a Push Button Start System that does not require a traditional key to start the engine.

To start your engine:

- The Keyless Access System transmitter must be in the vehicle. If no transmitter is detected, the Driver Information Center will display NO FOB DETECTED.
- With your foot on the brake pedal, press the top of the START button. When the engine begins cranking, release the button. Do not hold the button for longer than 15 seconds at a time, which may prematurely drain the battery and cause damage to the starter motor.
- If the engine does not start and a Driver Information Center message is not displayed, wait 15 seconds and try again.

**Note:** Your engine will start only if the shift lever is in Park or Neutral.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver  
Information

Entertainment  
Systems

Convenience  
Features

Vehicle  
Personalization

Maintenance

Owner  
Privileges

To stop your engine:

- Move the shift lever to Park.
- Press the bottom of the OFF/ACCESSORY button.

If the shift lever is not in Park, the engine will stop but the vehicle will go into accessory mode and the Driver Information Center will display SHIFT TO PARK. Once the shift lever is moved to Park, the vehicle will turn off.

### REMOTE ADAPTIVE START

This feature allows you to start the engine from outside the vehicle using the Keyless Access System transmitter. (Normal transmitter range is within 196 feet of the vehicle.) Depending on outside conditions, the remote start feature can also start the vehicle's automatic climate control system as well as the heated and vented seats (if equipped). Consult your Owner Manual to set this function.

The engine will run for about 10 minutes before turning itself off, but it can be extended an additional 10 minutes by performing another remote start sequence before the first 10 minutes expires, or after the engine has shut off. No additional remote starts are allowed until the vehicle has been started with the ignition key.

### Remote Starting the Vehicle

1. Aim the key fob transmitter at the vehicle.
2. Press and release  on the transmitter, then immediately press and hold  on the transmitter until the vehicle's parking lamps flash, or hold the button for at least four seconds if the lights are not visible.
3. When the vehicle starts, the parking lamps will illuminate and remain on while the engine is running.
4. Repeat these steps for a 10-minute time extension.

When you enter your STS after a remote start, press the start button to transition to normal vehicle operation.

To manually turn off a remote start, do any of the following:

- Aim the key fob transmitter at the vehicle and press and hold the remote start button until the parking lamps turn off.
- Press the hazard warning flashers button located on the console.
- Press the START/OFF/ACCESSORY button on and then off.

## **DRIVER MEMORY SETTINGS (if equipped)**

This feature allows up to two drivers to program and recall memory settings for the driver's seat settings, exterior mirror positions, tilt and telescopic steering column position, some radio and compact disc settings, and last climate control setting.

With Base radio systems, memory settings are programmed and recalled through the radio. On Navigation radio-equipped vehicles, memory settings are programmed and recalled through the Navigation system display. (See your Navigation System Manual for complete programming instructions.)

To store driver settings on Base radio-equipped vehicles:

- Turn the ignition on.
- Press the CNFG radio button.
- Turn the TUNE/SEL knob and scroll to SETUP.

- Press TUNE/SEL to enter the SETUP menu.
- Turn TUNE/SEL and scroll to DRIVER SELECTION.
- Press TUNE/SEL to enter the DRIVER SELECTION menu.
- Turn the TUNE/SEL knob to the appropriate driver number (according to the number shown on the back of your key fob); then press the TUNE/SEL knob.
- Adjust the driver's seat, outside mirror and steering column to comfortable positions.
- Set the climate control temperature, fan speed and mode settings, radio presets, tone volume, playback mode (AM/FM or CD) and compact disc position.
- Turn the TUNE/SEL knob and scroll to STORE DRIVER SETTINGS; then press the knob. Two beeps will sound and your settings will be saved.

Your memory settings are now programmed. Any changes made to the audio system and climate controls while driving will be automatically stored when the ignition is turned off. If desired, repeat the above procedures for a second driver by programming the other driver number.

Your preferences are recalled by pressing any button on the Keyless Access transmitter or by selecting Driver 1 or Driver 2 on the radio display.

**Note:** See Section 2 of your Owner Manual for complete Memory Settings programming information.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)


**VOICE RECOGNITION (if equipped)**

This feature allows for hands-free operation of your navigation and audio system. It can be used when the ignition is in the ACC or ON position, or when the Retained Accessory Power (RAP) feature is active. (Note: The system is programmed for the English language only.)

To use voice recognition:

- Press your steering wheel's talk symbol button (A) and release it when you hear a beep. Voice recognition is active when the microphone icon is displayed on the navigation screen.
  - Clearly speak one of the available commands listed in your navigation radio supplement.
- The system will then repeat and implement the command.

If the system does not recognize a spoken command, try again. If a spoken command is not available, the system will inform you of its status. For optimum functionality, keep interior noise levels to a minimum; otherwise, the system may not understand the command.

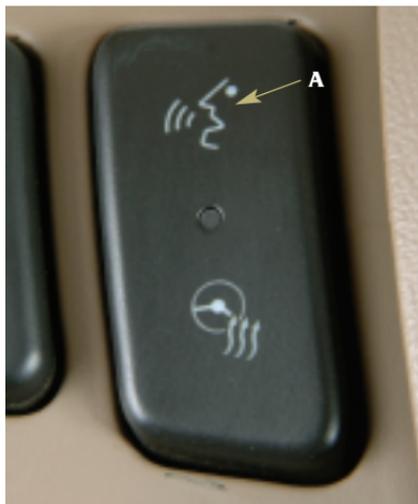

- To end voice recognition, remain silent. After approximately five seconds of silence, the system automatically cancels voice recognition.

**Note:** See your Navigation Radio supplement for complete operating details.

**INTELLIBEAM (if equipped)**

This feature maximizes forward night vision by automatically turning on the vehicle's high-beam headlamps when no other vehicle traffic is present, and it changes the headlamps back to low-beam intensity when the headlamps or taillamps of other vehicles are detected.

The system uses an image sensor integrated into the automatic dimming rearview mirror to monitor surrounding traffic conditions in order to ensure the best use of the high-beam headlamps. The system can detect taillamps up to 500 feet away and headlamps up to 2,000 feet away.



To turn the system on:

- Turn the exterior lamp control on the turn signal/multifunction lever to the AUTO (Automatic) position.

The High-Beam On Light will appear on the instrument panel cluster when the high-beam headlamps are on. SmartBeam will only activate your high-beams when driving over 10 mph.

To turn the system off:

- Turn the exterior lamp control on the turn signal/multifunction lever to any setting other than AUTO.

### **ADAPTIVE CRUISE CONTROL (ACC) (if equipped)**

This feature allows you to keep cruise control engaged during moderate traffic conditions without having to continually adjust the cruise control system.

ACC uses radar to detect a vehicle within 328 feet (100 m) of your direct path. The system operates at speeds above 25 mph (40 km/h). When engaged, ACC automatically applies limited braking or acceleration to maintain a selected follow distance to the vehicle ahead. If there is no vehicle in your path, ACC will respond like traditional cruise control.

The ACC controls are located near the end of the multifunction lever on the left side of the steering column and on the steering wheel.



○ (Off): Move the cruise control switch to this position to turn the system off (or apply your brake to temporarily disengage the system).

| (On): Place the switch in this position to turn the system on.

+ (Resume/Increase): Move the switch to this position to resume a previously set speed or to increase speed when ACC is already active.

⊖ (Set/Decrease): Press this button, located in the tip of the multifunction lever, to set the speed or to decrease speed when ACC is already active.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

### Engaging ACC with the SET Button

The ACC set speed is the speed you will travel if no vehicle is detected in your path.

To set ACC:

1. Ensure that the Head-Up Display (HUD) is on and properly adjusted (see Section 3 of your Owner Manual for details).
2. Move the ACC switch to the on position as described above.
3. Achieve the speed you desire.
4. Press and release the SET button (described above) located in the tip of the multifunction lever.
5. Remove your foot from the accelerator pedal.

### Selecting a Follow Distance (GAP)

Use the GAP button on your steering wheel to adjust the distance between you and the vehicle ahead of you. Press the top of the button to increase distance. Press the bottom of the button to decrease distance. A graphic on the HUD indicates your selected distance.



If driver action is required while using ACC, an alert symbol will flash on the HUD and a warning beep will sound. Driver action is required when: ACC cannot apply sufficient braking because you are approaching a vehicle too rapidly; vehicle speed drops below about 20 mph (32 km/h); a temporary condition prohibits ACC from operating; or a malfunction is detected in the ACC system.

**Caution:** ACC will not apply hard braking or bring the vehicle to a complete stop. In addition, ACC will not respond to stopped vehicles, pedestrians or animals. When approaching a vehicle or object, ACC may not have time to slow your vehicle enough to avoid a collision. Even with ACC, your complete attention is always required and you should be ready to take action and apply the brakes when necessary. See Sections 3 and 4 of your Owner Manual for additional information.

### EXPRESS WINDOWS

Your power window controls are located on the armrest near each window. The controls include an Express-Up and Express-Down feature that allows you to raise or lower the windows at the touch of a button.



To activate Express-Up:

- Lift up briefly on the front of the switch. To stop the Express-Up process, briefly press the switch.

To activate Express-Down:

- Press the front of the power window switch to the second position. To stop the Express-Down process, briefly lift the switch.

### DECK LID RELEASE

There are several ways to release the deck lid. The vehicle must be in Park or Neutral and the valet mode turned off.

- Press the Deck Lid Release button located on the driver's door.
- Press the Deck Lid Release button on the Keyless Access transmitter.

If your vehicle has lost battery power, access the trunk by unlocking and lowering the rear seat pass-through door and pulling the glow-in-the-dark emergency trunk release handle located inside the trunk near the back of the rear seats.

## Vehicle Personalization

Many of your vehicle's features can be programmed to your own operating preferences. The number of programmable features varies depending upon options selected at purchase.

After programming, the features are recalled by pressing any button on your Keyless Access transmitter or by selecting Driver 1 or Driver 2 on the radio display. *(For Navigation Radio-equipped vehicles, see your Navigation Radio supplement.)*

Some of your vehicle's features, such as climate control settings, radio presets, exterior lights and others, have already been programmed for your convenience. These features can be reprogrammed if you desire.

Additional features that can be programmed (if equipped), include: Driver Greeting, Key Fob Reminder, Remote Start, Remote Recall Memory, Auto Exit Seat and more. *(See your Owner Manual for a complete personalization features list as well as detailed programming instructions.)*

To change feature preferences, follow this procedure:

- Press either the CNFG or TUNE/SELECT knob located on the radio to enter the SETUP menu.
- Scroll to the PERSONAL SETTINGS MENU; then press TUNE/SELECT to turn the feature on. A list of personalization features will appear.
- Scroll to the feature you would like to change; then press TUNE/SELECT to turn the feature on or off. If the feature is turned on, a check mark will appear next to it.

Some features have submenus that show additional items that can be turned on or off. After entering a submenu, scroll to the feature you desire to change; then press the TUNE/SEL knob to activate or turn off the feature.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver  
Information

Entertainment  
Systems

Convenience  
Features

Vehicle  
Personalization

Maintenance

Owner  
Privileges

## Maintenance

### FLUIDS

#### Engine Oil

Your vehicle's engine requires a special oil that meets GM Standard GM4718M. Oils meeting this standard may be identified as synthetic. Not all oils, however, will meet this GM standard. Use only oils that are identified as meeting GM Standard GM4718M, and have the starburst symbol  on the front of the oil container.

Your vehicle's engine is filled at the factory with a Mobil 1<sup>®</sup> synthetic oil, which meets all the requirements for your STS. See Section 5 of your Owner Manual for extensive engine oil information.

#### Engine Coolant

Your vehicle's cooling system uses DEX-COOL<sup>®</sup> extended life engine coolant, which is designed to last for 5 years or 150,000 miles (240,000

km), whichever occurs first — if you add only DEX-COOL<sup>®</sup> coolant. See Section 5 of your Owner Manual for additional cooling system information.

#### Resetting the CHANGE OIL NOW Message

The STS is equipped with the GM Oil Life System, which calculates when to change your engine oil based on vehicle use. Whenever your oil is changed, reset the system so it can determine when the next oil change is due.

To reset the system:

- Press the up or down arrow to scroll the DIC to display OIL LIFE.
- Once the ENGINE OIL LIFE figure appears, press and hold the RESET button until it reads 100%.



If the figure does not return to 100% or if the CHANGE OIL NOW message reappears when starting the vehicle, the system has not been reset. Repeat the above procedure.

#### Windshield Washer Fluid

When the windshield washer fluid level is low, a Check Washer Fluid message will appear in the Driver Information Center (DIC). To add washer fluid, open the cap with the washer symbol  and fill the tank until full.

# Owner Privileges™

To make your ownership experience as satisfying and rewarding as possible, we are proud to provide you with Cadillac's exceptional Owner Privileges, designed to accommodate you anytime and anywhere.

## **ROADSIDE SERVICE** **1-800-882-1112**

Roadside Service provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services:

- Towing Service
- Battery Jump-Starting
- Lockout Assistance
- Fuel Delivery
- Flat Tire Change  
(covers change only)

**TRIP INTERRUPTION:** If your trip is interrupted due to a component failure covered under warranty, incidental expenses may be reimbursed, including hotel, meals and rental car.

**COURTESY TRANSPORTATION** may also be provided for warranted repairs, including shuttle service for same-day repairs and loaner transportation for overnight repair. Roadside Service is also available to Cadillac customers beyond the warranty period for a charge.

## **CUSTOMER ASSISTANCE** **1-800-458-8006**

In Canada, call 1-888-446-2000

Should you need to ask a question, make a comment, or request additional information, the Cadillac Customer Assistance Center is staffed around the clock with professionals to serve you.

When you call Cadillac Roadside Service or Customer Assistance, when possible, please provide the phone advisor with:

- Your telephone number
- Your location
- Your Cadillac's location
- A description of the problem
- Vehicle Identification Number

- Year and model of your Cadillac
- Delivery date
- Current mileage

## **CADILLAC ONLINE**

For more information about your Cadillac, including access to the Cadillac Owner Center at My GMLink, visit [www.cadillac.com](http://www.cadillac.com).

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice.

STS is a registered trademark of Cadillac Motor Car Division and General Motors Corporation. Copyright 2004 by Cadillac Motor Car Division. All rights reserved.

Refer to Owner Manual for further information.

05STSGTK A

Reviewed with Customer (Please Check Box)

Driver  
Information

Entertainment  
Systems

Convenience  
Features

Vehicle  
Personalization

Maintenance

Owner  
Privileges

*Cadillac*

