

Getting to Know Your 2006

G6



TABLE OF CONTENTS

REMOTE KEYLESS ENTRY SYSTEM

Remote Keyless Entry (RKE)	2
Remote Vehicle Start System	2
RKE Transmitter Battery Replacement	4

COMFORT FEATURES

Adjusting the Power Seat	4
Adjusting Lumbar Support and Seatback Position	5
Easy Entry Seat	5
Heated Seat Controls	5
Shoulder Belt Height Adjuster	6
Tilt/Telescoping Steering Wheel	6
Adjustable Accelerator and Brake Pedals	6
Power Mirrors	6

AUDIO SYSTEM FEATURES

Audio System	7
Audio Steering Wheel Controls	8
Multiple-Disc CD Player	9
XM Radio	9

INSTRUMENT PANEL FEATURES

Instrument Panel	10
Instrument Panel Cluster	11
Driver Information Center (DIC)	12

CONVENIENCE FEATURES

Automatic Door Locks	14
Automatic Transaxle with Manual Shift Mode	14
Speed-Sensitive Wipers	14
Cruise Control	15
Climate Control Airflow Modes	15
Automatic Climate Control	15
Window Defogging	16
Exterior Lamps	16
60/40 Split Rear Seat	17
Sunroof	17
Panoramic Roof	17
Window Indexing	18
Trunk Floor Cover	18
Removing the Key on Vehicles with a Manual Transaxle	18

MAINTENANCE FEATURES

Resetting the Oil Life System	19
Securing the Fuel Cap	19
Vehicle Symbols Glossary	19

OWNER INFORMATION

Roadside Assistance	20
My GMLink	20

Congratulations on your purchase of a Pontiac G6. Please read this information about your vehicle's features and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Place this booklet in your Owner Manual portfolio for easy reference.

Remote Keyless Entry (RKE)



(Remote Start): If your vehicle has this feature, it can be used to start the engine. (See Remote Vehicle Start System.)

(Lock): Press this button to lock all the doors. The interior lamps will turn off after a short delay once all doors are closed. If enabled through the Driver Information Center (DIC), the parking lamps will flash once and/or the horn will chirp to indicate locking has occurred.

(Unlock): Press this button to unlock the driver's door. If the button is pressed again within five seconds, all remaining doors will unlock. The interior lamps will illuminate and remain on for 10 seconds or until the ignition is turned on. If enabled through the DIC, the parking lamps will flash twice and the horn will chirp twice to indicate unlocking has occurred.

(Trunk Release): The trunk will unlatch when this button on the transmitter is pressed and held for approximately one second. You can open the trunk with the transmitter when the vehicle is stationary.

The trunk may also be opened using the Trunk Release button located on the driver-side door.

(Vehicle Locator/Panic Alarm):

A new Vehicle Locator feature has been added to your car's Remote Keyless Entry.

Press and hold this button for approximately one second to locate your vehicle. The horn will sound three times and the headlamps and parking lamps will flash three times.

To sound the panic alarm, press and hold the button for three seconds. The horn will sound and the headlamps and parking lamps will flash for two minutes. Press the button again to cancel the panic alarm.

See Section 2 of your Owner Manual.

Remote Vehicle Start System (if equipped)

This feature allows you to start the engine from outside the vehicle by using the Remote Keyless Entry transmitter. (Normal transmitter range is within approximately 200 feet of the vehicle.) The remote start capability must be turned on using the Driver Information Center in order for the Remote Vehicle Start System to function. (See Driver Information Center.)

You can also set the vehicle's climate control system to heat or cool the vehicle interior before getting in. The engine will run for about 10 minutes before turning itself off, but can be extended 10 minutes more by performing another remote start sequence at any time.

After two consecutive remote starts, no additional remote starts are allowed until the vehicle has been started with the ignition key.

The remote start system will not operate if the hood is open or if the key is in the ignition.

Turning Off the Engine after a Remote Start

If you wish to turn off the engine instead of driving after a remote start, perform one of the following functions:

- Press and hold the Remote Start button  until the parking lamps turn off.
- Press and release the Hazard Warning Flashers button inside the vehicle. Press the button again to turn off the flashers.
- Turn the key in the ignition switch to the Run (I) position and then off (O).
- The engine will automatically stop when time expires.

Note: Instructions for Remote Start are provided on a tag that can be attached to your vehicle's key chain.

See Section 2 of your Owner Manual.



Starting the Vehicle

1. Aim the transmitter at the vehicle.
2. Press and release the Lock button  on the transmitter.
3. Immediately press and hold the Remote Start button  for about two seconds.
4. When the vehicle starts, the parking lamps will light and stay on while the engine is running.
5. Repeat these steps for a 10-minute time extension.

After a remote start, the key must be inserted in the ignition and turned to the Run (I) position before driving.

Note: If the Check Engine light is illuminated on the instrument panel cluster, the Remote Vehicle Start System cannot be used. See your dealer for the proper repairs.

RKE Transmitter Battery Replacement

Under normal use, the battery in your Remote Keyless Entry transmitter should last about two years. You can tell the battery is weak if the transmitter won't work at the normal range in any location. If you have to get close to your vehicle before the transmitter works, it's probably time to change the battery. Your Driver Information Center will also advise you when the battery is becoming weak.

Replace the Battery

1. Use a flat, thin object to separate the bottom half from the top half of the transmitter.
2. Remove the battery and replace it with a new one. Make sure the positive side of the battery faces up.
3. Put the two halves back together. Make sure they are tightly secured.

Note: When replacing the battery, use one three-volt CR2032 or equivalent battery. Use care not to touch any of the transmitter circuitry. Static from your body transferred to these surfaces may damage the transmitter.

See Section 2 of your Owner Manual.

Adjusting the Power Seat (if equipped)

The power seat can be adjusted up or down using the power height adjuster located on the outboard side of the driver's seat. The seat can be adjusted forward or rearward manually.

Move the Seat Forward or Rearward

- Lift and hold the bar under the front of the seat to manually slide the seat.

Raise or Lower the Entire Seat

- Press and hold the height adjuster control up or down.



Raise or Lower the Front or Rear of the Seat Cushion (if equipped)

The 6-way power seat also features seat cushion adjustment.


- Press and hold the front or rear of the control up or down.



See Section 1 of your Owner Manual.

Adjusting Lumbar Support (if equipped) and Seatback Position

Adjust the lumbar support using the manual lumbar handle (A) located on the outboard side of the driver's seatback. Ratchet the handle down to increase support and up to decrease support. You may need to ratchet the handle several times for the desired amount of support.

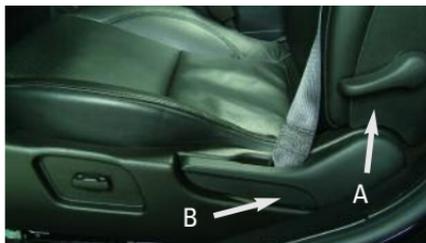


Adjust the seatback position by pulling up the recliner handle (B) and adjusting the seatback forward or rearward. Release the handle to secure the seatback in place.

See Section 1 of your Owner Manual.

Easy Entry Seat (if equipped)

Coupe models feature an easy entry front passenger seat that makes it easier to get in and out of the rear seat.

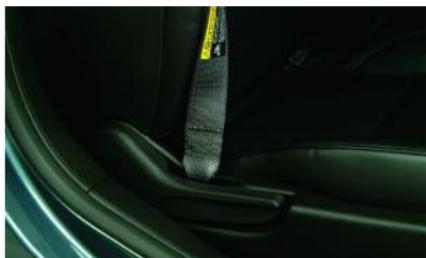

To use the easy entry seat, pull back on the top of the recliner lever and slide the seat forward. After the passenger enters the rear seat area, move the seat rearward until it locks in place and adjust the seat to a comfortable position. Make sure both the seat and seatback are locked.

See Section 1 of your Owner Manual.

Heated Seat Controls (if equipped)

The heated front seat controls are located on the outboard corner of the driver and front passenger seats. The seats feature a high and low heat setting.



High Setting

- Press the top of the switch (|) once to turn on the heated seat. It will heat to the high setting (indicator light number 2).

Low Setting

- Press the top of the switch (|) twice to turn on the seat to the low setting (indicator light number 1).

Off

- Press the bottom of the switch (○) to turn the heated seat off.

See Section 1 of your Owner Manual.

COMFORT FEATURES

Shoulder Belt Height Adjuster (sedan only)

The shoulder belt can be adjusted to the height that is right for you. Push the Release button up or down to move the height adjuster. Once in a comfortable position, try to move the height adjuster to make sure it is locked in place.

See Section 1 of your Owner Manual.

Tilt/Telescoping Steering Wheel



Adjusting the Steering Wheel

1. Push down the lever located on the left side of the steering column.
2. Move the wheel up to a centered position or higher to telescope it in or out.
3. Tilt the wheel up or down to a comfortable position.
4. Pull the lever all the way up to lock the wheel in place.

See Section 3 of your Owner Manual.

Adjustable Accelerator and Brake Pedals (if equipped)



The accelerator and brake pedals can be adjusted to a comfortable and safe operating position using the controls located on the left side of the instrument panel. The vehicle must be in Park in order to adjust the pedals.

Press the left arrow ◀ to move the pedals away from you and the right arrow ▶ to move the pedals toward you.

See Section 2 of your Owner Manual.

Power Mirrors



The power outside rearview mirrors can be adjusted using the controls located on the driver's door.

Use the bottom selector switch to select the driver-side or passenger-side mirror; and then use the control pad to adjust the selected mirror

up, down or side to side. The mirror will move only when the control pad is in the 12, 3, 6 or 9 o'clock position. Move the selector switch to the center position when not adjusting either mirror.

See Section 2 of your Owner Manual.

Audio System



While most of the features on your radio will look familiar, following are some that may be new.

Display

On radios with two-line displays, the top line will be used to show radio frequency or time, and outside temperature. On radios with a single-line display, the Driver Information Center will overwrite the radio information while in use.

Left Controls

Power: Press the center of this knob to turn the power on or off.

Volume: Turn the outside ring of this knob to adjust the volume.

BAND (if equipped): Press this button to switch between FM1, FM2, AM, or XM1 and XM2 (if equipped).

SRCE (Source) (if equipped): Press this button to change to the CD mode or an auxiliary mode (if installed). Press the BAND button to return to the radio mode.

AUTO (Automatic Volume) (if equipped): This feature automatically adjusts audio volume based on vehicle speed to compensate for outside road noise. Press this button to set the volume compensation level at Low, Medium or High.

SEEK (Seek/Scan): Press the up or down arrow to go to the next or previous radio station or, when a CD is playing, to the next or previous track.

To enter the scan mode, press and hold the up or down arrow for two seconds (a beep will sound). Radio stations will be scanned while in the radio mode and CD tracks while in the CD mode. Press and hold the up or down arrow for four seconds to scan radio station presets.

Right Controls

DISP (Display): Press the center of this knob to toggle the radio display between station frequency and time. It will also display song title and artist information, if available in the broadcast.

ADJ (Adjust): Turn the outside ring of this knob to tune radio stations and to adjust selected audio functions.

TONE: Press this button to display the bass, midrange and treble levels. Turn the ADJ knob to adjust each level.

BAL/FADE (Balance/Fade): Press this button to display the balance between the right and left speakers and the fade between the front and rear speakers. Turn the ADJ knob to adjust the sound from the speakers.

AUTO TONE (Automatic Equalization): Press this button to select customized equalization settings.

Setting the Time

To set the clock:

1. Press and hold the Clock button momentarily to enter the Set Clock mode.
2. Use the ADJ knob to select the hour.
3. Press the Clock button.
4. Use the ADJ knob to select the minutes.
5. Press the Clock button again to complete the process.

Setting Preset Stations

Up to 30 preset stations (FM1, FM2, AM, XM1, XM2 [if equipped]) can be programmed on the six numbered pushbuttons. To preset a station:

1. Turn on the radio.
2. Press the BAND button to select FM1, FM2, AM, XM1 or XM2.
3. Tune in the desired station.
4. Press the AUTO TONE button to select the equalization.
5. Press and hold one of the six numbered pushbuttons until you hear a beep. The station is now preset.

See Section 3 of your Owner Manual.

Audio Steering Wheel Controls (if equipped)

A number of audio controls can be adjusted at the steering wheel. They include:

▽SEEK△ (Seek/Scan): Press the up or down arrow to go to the next or previous radio station or, when a CD is playing, to the next or previous track.

Press and hold the up or down arrow for two seconds (a beep will sound) to enter the scan mode. Radio stations will be scanned while in the radio mode and CD tracks while in the CD mode. Press and hold the up or down arrow for four seconds to scan radio station presets.

1-6 (Preset Pushbuttons): Press this button to play stations that are programmed on the radio preset pushbuttons. When a CD is playing in the multiple-disc CD player, press this button to go to the next available CD.

+ - (Volume): Press the plus or minus button to increase or decrease the volume.



See Section 3 of your Owner Manual.

Multiple-Disc CD Player (if equipped)

With the in-dash 6-Disc CD Player, note that you cannot directly load a CD as in single-play systems.



To Load a Single CD:

- Press and release the Load button. Wait for the display prompt to load the CD.

To Load Multiple CDs:

- Press and hold the Load button for two seconds. Follow the display prompts to load each CD.

To Play a Specific CD:

- Press the numbered pushbutton that corresponds to the loaded CD number on the display.

Note: CDs with any labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at one time, or if scratched or damaged CDs are played, the CD player could be damaged. When using the CD player, use only CDs in good condition without labels; load one CD at a time; and keep the CD player and the loading slot free of foreign materials, liquids and debris. MP3-formatted CDs will not play in this CD player.

See Section 3 of your Owner Manual.

XM Radio (if equipped)

On equipped radios, two additional listening bands are available: XM1 and XM2. To access these bands, press the BAND button until XM1 or XM2 appears on the display.


XM Satellite Radio provides more than 120 channels of digital-quality sound that goes wherever you go — coast to coast. Activation fee and service subscription are extra. (Available only in the U.S. 48 contiguous states.)

For more information, contact XM at www.XMradio.com or call 1-800-852-XMXX (9696).

See Section 3 of your Owner Manual.


INSTRUMENT PANEL FEATURES

Instrument Panel

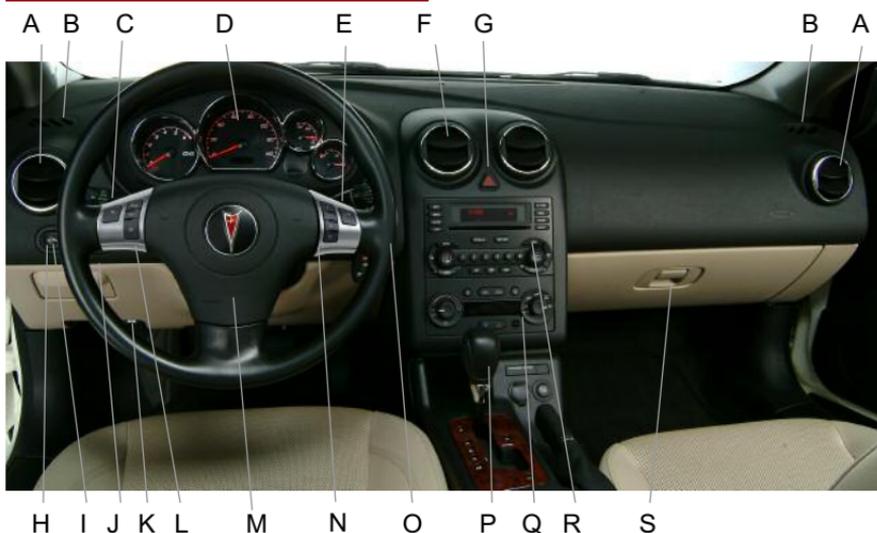

- A. Side Air Outlets
 - B. Side Window Outlets
 - C. Turn Signal/Multifunction Lever
 - D. Instrument Panel Cluster
 - E. Windshield Wiper/Washer Lever
 - F. Center Air Outlets
 - G. Hazard Warning Flashers Button
 - H. Adjustable Pedal Button (if equipped)
 - I. Instrument Panel Brightness Control
 - J. Fog Lamps Switch
 - K. Hood Release
 - L. Cruise Control (if equipped)
 - M. Horn
 - N. Audio Steering Wheel Controls (if equipped)
 - O. Ignition Switch
 - P. Shift Lever
 - Q. Climate Control System
 - R. Audio System
 - S. Glove Box
- See Section 3 of your Owner Manual.**

Instrument Panel Cluster

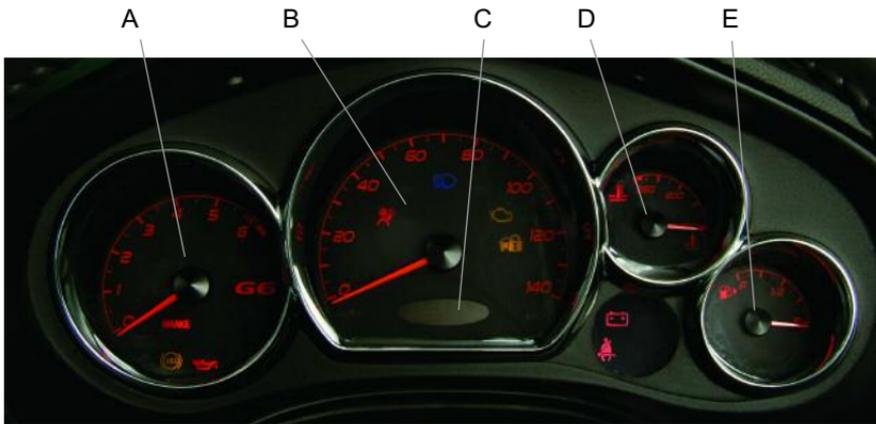

Your vehicle's instrument panel is equipped with this cluster or one very similar to it.

The instrument panel cluster includes these key features:

- A. Tachometer
- B. Speedometer
- C. Odometer
- D. Engine Coolant Temperature Gauge
- E. Fuel Gauge

NOTE: The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

See Section 3 of your Owner Manual.

Remote Keyless
Entry SystemComfort
FeaturesAudio System
FeaturesInstrument
Panel FeaturesConvenience
FeaturesMaintenance
FeaturesOwner
Information

Driver Information Center (DIC)

Your vehicle's audio system not only performs the standard audio functions, but also has an integrated Driver Information Center that provides vehicle information, vehicle feature personalization and vehicle warning messages. To operate the DIC, the ignition switch must be in the Run (I) position.

The DIC is controlled through three buttons located to the left of the audio system. The DIC messages will be shown on your audio system display.



INFO: Use this button to scroll through the vehicle information mode displays.

MENU: Use this button to scroll through the personalization menu mode.

ENTER: Use this button to select a menu option or to acknowledge a warning message.

Vehicle Information

Press the INFO button to scroll through the following vehicle information:

- Trip A
- Trip B
- Fuel Range (until empty)
- Average Fuel Economy
- Average Speed
- Engine Oil Life

Press and hold the ENTER button to reset the information while it is displayed.

Vehicle Feature Personalization

A variety of your vehicle's features can be personalized to your preference. To personalize features:

1. Press MENU to scroll through the available personalization features.
2. Press and hold ENTER for one second to toggle between the available options for each feature.
3. Press MENU to record your selection and move to the next feature.

Personalization features include (the first option listed under each feature is the factory setting):

- Oil Life
- Display Units of DIC, speedometer and odometer
 - English
 - Metric
- Remote Start Capability
 - On
 - Off
- Lock Horn (Horn chirp during RKE locking)
 - On
 - Off
- Unlock Horn (Horn chirp during RKE unlocking after the last door is closed)
 - Off
 - On
- Light Flash (Exterior light flash during RKE locking and unlocking)
 - On
 - Off
- Delay Lock (Delays locking the vehicle for five seconds after the last door is closed)
 - On
 - Off
- Auto Unlock (Automatically unlocks the vehicle doors)
 - All Doors
 - Driver's Door
 - None
- Unlock (Determines when Auto Unlock will occur)
 - Shift to Park (automatic transaxle)
 - Key Off (manual transaxle)

- Exterior Lights (Exterior perimeter lighting during RKE unlock)
 - On
 - Off
- Security (Method used to arm the content theft-deterrent alarm system)
 - RKE arming — arms the system 60 seconds after RKE locking
 - Passive — automatically arms the system after 60 seconds
- Display Language (DIC information can be displayed in several languages)
 - English
 - French
 - Spanish
 - German

Note: Not all of these personalization features may be available on your vehicle.

Warnings and Messages

This function provides a variety of messages (depending on optional equipment), such as door ajar and low fuel.

To acknowledge a message and clear it from the display, press any of the three DIC buttons: INFO, MENU or ENTER. If the condition is still present after the vehicle has been turned off and back on again, the warning message will be displayed once again.

See Section 3 of your Owner Manual.

CONVENIENCE FEATURES

Automatic Door Locks

For your safety, your vehicle is programmed at the factory to lock all doors automatically when all doors are closed, the ignition is on and the shift lever is moved out of Park.

This feature cannot be disabled; you can personalize the unlock features by using the Driver Information Center.

See Section 2 of your Owner Manual.

Automatic Transaxle with Manual Shift Mode (if equipped)

You can enjoy the sporty driving characteristics provided by a manual transaxle with the Manual Shift Mode. This feature allows you to electronically shift gears as you would with a manual transaxle, but without using a clutch.

To enter the Manual Shift Mode, move the gearshift lever to the Manual Shift (M) position.



Upshift

Select the next higher gear while driving by tapping the gearshift lever forward (+). As vehicle speed increases, the transaxle will not automatically upshift. This is required by the driver in the Manual Shift Mode. If the upshift is not commanded by tapping the gear-

shift lever, the system features built-in powertrain protection that will limit engine speed to prevent any damage from over-revving the engine.

Downshift

Select the next lower gear while driving by tapping the gearshift lever rearward (-). If current vehicle speed is too high for the requested lower gear, the downshift will not occur.

The transaxle will automatically shift down into first gear, if the driver does not, when coming to a stop.



While operating in the Manual Shift Mode, the current gear selection is displayed in the instrument panel cluster.

See Section 2 of your Owner Manual.

Speed-Sensitive Wipers



The speed-sensitive wipers feature four settings. The wipers lever is located to the right of the steering column.

 **(Intermittent):** Move the lever up to this position to have the wipers adjust with your vehicle speed. Rotate the speed-sensitive wiper control on the lever to increase or decrease the wiper delay.

 **(Low):** Move the lever up to this position to turn the wipers on Low.

 **(High):** Move the lever up to this position to turn the wipers on High.

 **(Mist):** Move the lever down to this position to turn the wipers on for one wipe.

See Section 3 of your Owner Manual.

Cruise Control (if equipped)

The cruise control buttons are located on the steering wheel.

 **(On/Off):** Press this button to turn the cruise control system on and off.

RES+ (Resume): Press this button to resume a set speed, or to increase the set speed, if the system is engaged.

SET- (Set): Press this button to set a speed, or to decrease the set speed, if the system is engaged. When the cruise control is engaged, the cruise control symbol will illuminate in the instrument cluster.



 **(Cancel):** Press this button to cancel a set speed and disengage the system

See Section 3 of your Owner Manual.

Climate Control Airflow Modes



Turn the right mode knob to change the direction of the airflow inside the vehicle. The knob can be turned to any of the five settings as well as between each setting for a wide range of airflow adjustments.

 **(Vent):** This mode directs air to the instrument panel outlets.

 **(Bi-Level):** This mode directs air to the instrument panel outlets and floor outlets.

 **(Floor):** This mode directs most of the air to the floor outlets and some air to the side window outlets and windshield.

 **(Defog):** This mode directs air to the windshield, side window outlets and floor outlets.

 **(Defrost):** This mode directs most of the air to the windshield and some air to the side window outlets.

See Section 3 of your Owner Manual.

Automatic Climate Control (if equipped)

Turn the left and right knobs to AUTO to automatically control the inside temperature, air delivery mode and fan speed. Use the up and down temperature control buttons to adjust the temperature setting.

See Section 3 of your Owner Manual.

Window Defogging

 **(Defog):** Use this mode to clear the windows of moisture and to warm passengers. This mode splits the air delivery between the windshield and the floor outlets.

 **(Defrost):** Use this mode to remove fog or frost from the windshield more quickly. This mode directs most of the air to the windshield.

When you select the defog or defrost mode, the system automatically turns off recirculation and runs the air-conditioning compressor. The recirculation  mode cannot be selected because outside air is needed to remove interior moisture from the vehicle.

For faster window defogging on very humid, cool days, follow these tips:

1. Turn the climate control mode knob to  (Defrost).
2. Turn the temperature knob all the way into the red (Hot) area.
3. Turn the fan knob to top speed (4).

See Section 3 of your Owner Manual.

Exterior Lamps



Automatic Lamp Control (ALC)

When you start the vehicle at night or in a dark garage, the automatic head-

lamps will come on immediately. After driving into daylight, the system will switch to the DRLs after about a one-minute delay.

Also, when driving into dark tunnels or garages, the system delays turning on the headlamps to avoid unnecessarily switching on and off for a short time.

ALC Light Sensor

The ALC system's light sensor is located on top of the instrument panel. To ensure proper system operation, it is important to avoid placing any objects on or near the sensor or covering up the sensor, such as with an instrument panel cover.

Exterior Lamp Control Switch

The exterior lamp control switch is located on the lever to the left of the steering column. The switch can be rotated to each of the following four positions:

 **(Headlamps):** Turns on the headlamps, parking lamps and taillamps.

 **(Parking Lamps):** Turns on parking lamps and taillamps only.

AUTO: Automatic Lamp Control (ALC): Automatically turns on Daytime Running Lamps (DRLs) in the daytime and headlamps, parking lamps and taillamps at dusk.

 **(Off):** When operating in the Auto position, a momentary turn of the lamp control switch to the Off position will turn off the ALC and all of the exterior lights. The DIC will display an Automatic Lights Off message. To activate ALC, turn the switch again. ALC is always turned on when the vehicle is started.

See Section 3 of your Owner Manual.

60/40 Split Rear Seat

The split folding rear seatback permits loading of longer items from the rear cargo area.

Fold Down the Rear Seatback:

1. Open the trunk and locate the gray handles on the upper side of the trunk opening.
2. Position your hand over the top of one or both of the handles and pull toward you. The left handle opens the larger seatback; the right handle opens the smaller side.
3. Push the seatback open through the trunk or pull it open from inside the vehicle.



Return Seatback to Upright Position:

1. Push the seatback up until you hear a click.
2. Pull on the seatback to make sure it is secure.

See Section 1 of your Owner Manual.

Sunroof (if equipped)

The control switch for the sunroof is located on the headliner between the sun visors. It will operate only while the ignition is on.

Vent Position:

1. Open the sunshade by hand.
2. Press the rear part of the switch and release it.

Fully Open Position:

1. Open the sunshade by hand.
2. Press the rear part of the switch twice and release it. The roof will express-open all the way.


Closed Position:

Press the front part of the switch and hold it until the roof closes.

See Section 2 of your Owner Manual.

Panoramic Roof (if equipped)

The control switch (A) for the panoramic roof is located on the headliner between the sun visors. It will operate only while the ignition is on.

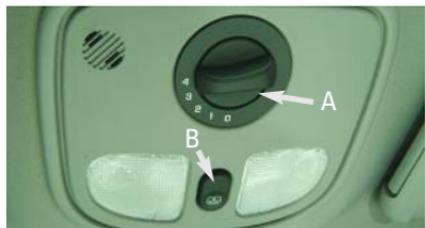

Press and hold the sunshade button (B) to open or close the sunshade.

Vent Position:

- Turn the switch to 1 to vent the first glass panel.

Open Positions:

- Turn the switch to 2 to open the first two glass panels.
- Turn the switch to 3 to open the first three glass panels.

CONVENIENCE FEATURES

- Turn the switch to 4 to fully open all glass panels.

To help reduce wind noise, press the sunshade button once to move the sunshade forward one position.

Closed position:

- Turn the switch to ○ to fully close all glass panels.

When fully open, the sunshade will start to close before the glass panels close.



Note: Care should be taken when using a self-service high-pressure car wash on the panoramic roof to avoid forcing water around the glass panel seals.

See Section 2 of your Owner Manual.

Window Indexing

To provide a tight seal around the doors, the window will automatically lower slightly when the door is opened and then automatically rise fully when the door is closed.

Follow the Owner Manual procedure for initializing the indexing feature if battery power is disconnected.

See Section 2 of your Owner Manual.

Trunk Floor Cover

The trunk cover features a pull handle in the floor that, when pulled up, can hang onto the upper edge of the trunk opening weatherstrip. This holds the trunk cover up to provide easy access to the spare tire.



See Section 2 of your Owner Manual.

Removing the Key on Vehicles with a Manual Transaxle (if equipped)

When parking your vehicle, shift the manual transaxle into Reverse and set the parking brake. **The manual transaxle must be shifted into Reverse in order to remove the key from the ignition switch.** Reverse is the best position for parking a manual transaxle-equipped vehicle.

See Section 2 of your Owner Manual.

Resetting the Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and displays Change Oil Soon in the Driver Information Center (DIC) when it's necessary to change your engine oil and filter. The Oil Life System should be reset to 100% only following an oil change.

To Reset the Oil Life System:

1. Press MENU once. The DIC will display Oil Life Reset.
2. Press and hold ENTER for at least one second.
3. An Acknowledged message will display for three seconds when the system has been reset.

See Section 5 of your Owner Manual.

Securing the Fuel Cap

If the Check Gas Cap message is displayed on the Driver Information Center when the ignition is turned to Run or Start, check that your fuel cap is securely fastened. If the cap is not secure, turn it clockwise until a clicking sound is heard, indicating that it is properly installed.

The Check Gas Cap message will turn off after a few driving trips with the cap properly installed.

See Section 3 of your Owner Manual.

Vehicle Symbols Glossary

Following are examples of symbols you may find on your vehicle. It is important to become familiar with them, as they alert you to various vehicle operating conditions.

-  Air Bag Readiness Light
-  Air Conditioning (A/C)
-  Antilock Brake System Warning Light
- BRAKE** Brake System Warning Light
-  Cruise Control Set
-  Headlamps
-  Instrument Panel Brightness Control
-  Malfunction Indicator Lamp (Check Engine Light)
-  Off
-  Off/On
-  On
-  Parking Lamps
-  Rear Window Defogger
-  Safety Belt Reminder Light
-  Security Light
-  Traction Control Off Light

Roadside Assistance

**1-800-ROADSIDE
(1-800-762-3743)**

TTY Users: 1-888-889-2438

As the proud owner of a new Pontiac vehicle, you are automatically enrolled in the Pontiac Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Pontiac's Roadside Assistance toll-free number is staffed by a team of technically trained advisors, who are available 24 hours a day, 365 days a year. The advisors can provide minor repair information or make arrangements to tow your vehicle to the nearest Pontiac dealer.

We will provide the following services for 3 years/36,000 miles (60,000 km), at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealership for warranty service
- Flat tire assistance
- Jump starts

In many instances, mechanical failures are covered under Pontiac's comprehensive warranty. However, when other services are utilized, our advisors will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Pontiac reserves the right to limit services or reimbursement to an owner or driver when, in Pontiac's judgment, the claims become excessive in frequency or type of occurrence.

Roadside Assistance and OnStar (if equipped)

If your vehicle is OnStar-equipped, press the blue OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

My GMLink

The Pontiac Owner Center at My GMLink, a complimentary service for Pontiac Owners, is a one-stop resource to enhance your Pontiac ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at www.mygmlink.com.

The GM logo consists of the letters "GM" in a white, bold, sans-serif font, centered within a blue square.

15801441

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. Copyright 2005 by GM Corp.