



Getting to Know Your 2009 G6



Table of Contents

REMOTE KEYLESS ENTRY SYSTEM

Remote Keyless Entry	2
Remote Vehicle Start System	2
RKE Transmitter Battery Replacement	4

COMFORT FEATURES

Adjusting the Power Seat	4
Adjusting Lumbar Support and Seatback Position	5
Easy Entry Seat	5
Heated Seat Controls	5
Shoulder Belt Height Adjuster	6
Tilt/Telescoping Steering Wheel	6
Power Mirrors	6

AUDIO SYSTEM FEATURES

Audio System	7
Audio Steering Wheel Controls	8
Multiple-Disc CD Player	9
XM® Radio	9

INSTRUMENT PANEL FEATURES

Instrument Panel	10
Instrument Panel Cluster	11
Driver Information Center	12

CONVENIENCE FEATURES

Automatic Door Locks	14
Automatic Transaxle with Manual Shift Mode	14
Speed-Sensitive Wipers	14
Cruise Control	15

Climate Control Airflow Modes	15
Automatic Climate Control	16
Window Defogging	16
Exterior Lamps	16
Sunroof	17
60/40 Split Rear Seat	18
Retractable Hardtop Convertible	18
Window Indexing	18

MAINTENANCE FEATURES

Securing the Fuel Cap	19
Resetting the Oil Life System	19
Vehicle Symbols Glossary	19

OWNER INFORMATION

Roadside Assistance	20
My GMLink	20

Congratulations on your purchase of a Pontiac G6. Please read this information about your vehicle's features and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

Remote Keyless Entry



The features of the Remote Keyless Entry (RKE) transmitter include:

(Remote Start): If your vehicle has this feature, it can be used to start the engine. (See Remote Vehicle Start System.)

(Lock): Press this button to lock all the doors. The interior lamps will turn off after a short delay once all doors are closed. If enabled through the Driver Information Center (DIC), the parking lamps will flash once and/or the horn will chirp to indicate locking has occurred.

(Unlock): Press this button to unlock the driver's door. If the button is pressed again within five seconds, all remaining doors will unlock. The interior lamps will illuminate and remain on for 10 seconds or until the ignition is turned on. If enabled through the DIC, the parking lamps will flash twice and the horn will chirp twice to indicate unlocking has occurred.

(Trunk Release): The trunk will unlatch when this button on the transmitter is pressed and held for approximately one second. You can open the trunk with the transmitter when the vehicle is stationary.

The trunk may also be opened using the Trunk Release button located on the driver-side door.

(Vehicle Locator/Panic Alarm): Press and hold this button for approximately one second to locate your vehicle. The horn will sound three times and the headlamps and parking lamps will flash three times.

To sound the panic alarm, press and hold the button for three seconds. The horn will sound and the headlamps and parking lamps will flash for two minutes. Press the button again to cancel the panic alarm.

See Section 2 of your Owner Manual.


Remote Vehicle Start System (if equipped)

This feature allows you to start the engine from outside the vehicle by using the Remote Keyless Entry transmitter. (Normal transmitter range is within approximately 200 feet of the vehicle.) The remote start capability must be turned on using the Driver Information Center in order for the Remote Vehicle Start System to function. (See Driver Information Center.)

You can also set the vehicle's climate control system to heat or cool the vehicle interior before getting in.

During a remote start, the engine will run for about 10 minutes before turning itself off, but can be extended 10 minutes by performing another remote start sequence at any time. After two consecutive remote starts, no additional remote starts are allowed until the vehicle has been started with the ignition key.

The remote start system will not operate if the hood is open or if the key is in the ignition.

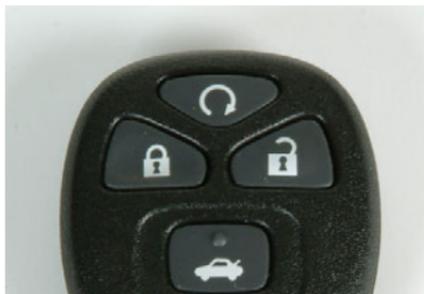

Starting the Vehicle

To remote-start the vehicle:

1. Aim the transmitter at the vehicle.
2. Press and release the  (Lock) button on the transmitter.
3. Immediately press and hold the  (Remote Start) button for about two seconds. When the vehicle starts, the parking lamps will light and stay on while the engine is running.
4. Repeat these steps for a 10-minute time extension.

After a remote start, the key must be inserted in the ignition and turned to the Run (I) position before driving.

Note: If the Check Engine light is illuminated on the instrument panel cluster, the Remote Vehicle Start System cannot be used. See your dealer for the proper repairs.

Turning Off the Engine after a Remote Start

If you wish to turn off the engine instead of driving after a remote start, perform one of the following functions:

- Press and hold the  (Remote Start) button until the parking lamps turn off.
- Press and release the Hazard Warning Flashers button inside the vehicle. Press the button again to turn off the flashers.
- Turn the key in the ignition switch to the Run (I) position and then to the Off (O) position.
- The engine will automatically stop when time expires.

Note: Instructions for Remote Start are provided on a tag that can be attached to your vehicle's key chain.

See Section 2 of your Owner Manual.

RKE Transmitter Battery Replacement

Under normal use, the battery in your Remote Keyless Entry (RKE) transmitter should last about two years. You can tell the battery is weak if the transmitter won't work at the normal range in any location. If you have to get close to your vehicle before the transmitter works, it's probably time to change the battery. Your Driver Information Center will also advise you when the battery is becoming weak.

Replace the Battery

To replace the RKE battery:

1. Use a flat, thin object to separate the bottom half from the top half of the transmitter.
2. Remove the battery and replace it with a new one. Make sure the positive side of the battery faces up.
3. Put the two halves back together. Make sure they are tightly secured.

Note: When replacing the battery, use one 3-volt CR2032 or equivalent battery. Use care not to touch any of the transmitter circuitry. Static from your body transferred to these surfaces may damage the transmitter.

See Section 2 of your Owner Manual.

Adjusting the Power Seat

The power seat can be adjusted up or down using the power height adjuster located on the outboard side of the driver's seat. The seat can be manually adjusted forward or rearward.

Move the Seat Forward or Rearward

- Lift and hold the bar under the front of the seat to manually slide the seat.

Raise or Lower the Entire Seat

- Press and hold the height adjuster control up or down.



Raise or Lower the Front or Rear of the Seat Cushion (if equipped)

The 6-way power seat also features seat cushion adjustment.

- Press and hold the front or rear of the control up or down.



See Section 1 of your Owner Manual.

Adjusting Lumbar Support and Seatback Position

Adjust the lumbar support using the manual lumbar handle (A) located on the outboard side of the driver's seatback. Ratchet the handle down to increase support and up to decrease support. You may need to ratchet the handle several times for the desired amount of support.



Adjust the seatback position by pulling up the recliner handle (B) and adjusting the seatback forward or rearward. Release the handle to secure the seatback in place.

See Section 1 of your Owner Manual.

Easy Entry Seat (if equipped)

Coupe and convertible models feature an easy entry front passenger seat that makes it easier to get in and out of the rear seat.



To use the easy entry seat, pull back on the top of the recliner lever and slide the seat forward. After the passenger enters the rear seat area, move the seat rearward until it locks in place and adjust the seat to a comfortable position. Make sure both the seat and seatback are locked.

See Section 1 of your Owner Manual.

Heated Seat Controls (if equipped)

The heated front seat controls are located on the outboard corner of the driver and front passenger seats. The seats have a high and low heat setting.



High Setting

- Press the top of the switch (|) once to turn on the heated seat. It will heat to the high setting (indicator light number 2).

Low Setting

- Press the top of the switch (|) twice to turn on the seat to the low setting (indicator light number 1).

Off

- Press the bottom of the switch (○) to turn the heated seat off.

See Section 1 of your Owner Manual.

Shoulder Belt Height Adjuster (sedan only)

The shoulder belt can be adjusted to the height that is right for you. Push the Release button up or down to move the height adjuster. Once in a comfortable position, try to move the height adjuster to make sure it is locked in place.

See Section 1 of your Owner Manual.

Tilt/Telescoping Steering Wheel



Adjusting the Steering Wheel

To adjust the position of the steering wheel:

1. Push down the lever located on the left side of the steering column.
2. Move the wheel up to a centered position or higher to telescope it in or out.
3. Tilt the wheel up or down to a comfortable position.
4. Pull the lever all the way up to lock the wheel in place.

See Section 3 of your Owner Manual.

Power Mirrors



The power outside rearview mirrors can be adjusted using the controls located on the driver's door.

Use the bottom switch to select the driver-side or passenger-side mirror; and then use the control pad to adjust the selected mirror up, down or side to side. The mirror will move only when the control pad is in the 12, 3, 6 or 9 o'clock position. Move the selector switch to the center position when not adjusting either mirror.

See Section 2 of your Owner Manual.

Audio System



While most of the features on your radio will look familiar, following are some that may be new:

Display

The radio display will show the time and the radio frequency or outside temperature. The Driver Information Center messages also will be displayed while in use.

Left Controls

(Power): Press the center of this knob to turn the power on or off.

(Volume): Turn the outside ring of this knob to adjust the volume.

BAND: Press this button to switch to FM1, FM2, AM, or XM1 and XM2 (if equipped).

SRCE (Source): Press this button to change to the CD mode. Press again and the system will automatically search for a portable audio player connected to the auxiliary input jack. Press the BAND button to return to the radio mode.

(Automatic Volume): This feature automatically adjusts audio volume based on vehicle speed to compensate for outside road noise. Press this button to set the volume compensation level at Low, Medium or High.

SEEK/SCAN (Seek/Scan): Press the up or down arrow to go to the next or previous radio station or, when a CD is playing, to the next or previous track.

To enter the scan mode, press and hold the up or down arrow for two seconds (a beep will sound). Radio stations will be scanned while in the radio mode and CD tracks while in the CD mode. Press and hold the up or down arrow for four seconds to scan radio station presets.

Right Controls

DISP (Display): Press the center of this knob to toggle the radio display between station frequency and outside temperature. It will also display song title and artist information, if available in the broadcast.

ADJ (Adjust): Turn the outside ring of this knob to tune radio stations and to adjust selected audio functions.

TONE: Press this button to display the bass, midrange and treble levels. Turn the ADJ knob to adjust each level.

BAL/FADE (Balance/Fade): Press this button to display the balance between the right and left speakers and the fade between the front and rear speakers. Turn the ADJ knob to adjust the sound from the speakers.

AUTO TONE (Automatic Equalization): Press this button to select customized equalization settings.

Portable Audio Player

A portable audio player (such as an iPod® or MP3 player) can be connected to the auxiliary input jack located on the radio. Press the SRCE button to begin playing audio from the portable player over the vehicle speakers. To optimize speaker volume, fully increase the volume level of the portable player.

Setting the Time

To set the clock:

1. Press and hold the Clock button momentarily to enter the Set Clock mode.
2. Use the ADJ knob to select the hour.
3. Press the Clock button.
4. Use the ADJ knob to select the minutes.
5. Press the Clock button again to complete the process.

Setting Preset Stations

Up to 30 preset stations (FM1, FM2, AM, or XM1 and XM2 [if equipped]) can be programmed on the six numbered pushbuttons. To preset a station:

1. Turn on the radio.
2. Press the BAND button to select FM1, FM2, AM, or XM1 and XM2.
3. Tune in the desired station.
4. Press the AUTO TONE button to select the equalization.
5. Press and hold one of the six numbered pushbuttons until you hear a beep. The station is now preset.

See Section 3 of your Owner Manual.

Audio Steering Wheel Controls (if equipped)

A number of audio controls can be adjusted at the steering wheel. They include:

▽ △ (**Seek/Scan**): Press the up or down arrow to go to the next or previous radio station or, when a CD is playing, to the next or previous track.

Press and hold the up or down arrow for two seconds (a beep will sound) to enter the scan mode. Radio stations will be scanned while in the radio mode and CD tracks while in the CD mode. Press and hold the up or down arrow for four seconds to scan radio station presets.

1-6 (Preset Pushbuttons): Press this button to play stations that are programmed on the radio preset pushbuttons. When a CD is playing in the multiple-disc CD player, press this button to go to the next available CD.



+ - (Volume): Press the plus or minus button to increase or decrease the volume.

See Section 3 of your Owner Manual.

Multiple-Disc CD Player (if equipped)

With the in-dash 6-Disc CD Player, note that you cannot directly load a CD as in single-play systems.

Load a single CD

- Press and release the LOAD button. Wait for the display prompt to load the CD.

Load multiple CDs

- Press and hold the LOAD button for two seconds. Follow the display prompts to load each CD.

Play a specific CD

- Press the numbered pushbutton that corresponds to the loaded CD number on the display.

Eject a single CD

- Press and release the EJECT button.

Eject multiple CDs

- Press and hold the EJECT button until a beep sounds.

If a CD is not removed, it will be pulled back into the player automatically.

Note: CDs with any affixed labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at a time, or if scratched or damaged CDs are played, the CD player could be damaged. When using the CD player, use only CDs in good condition without labels; load one CD at a time; and keep the CD player and the loading slot free of foreign materials, liquids or debris. MP3-formatted CDs will not play in this CD player.

See Section 3 of your Owner Manual.

XM® Radio (if equipped)

XM Radio offers more than 170 channels of digital-quality sound that goes wherever you go — coast to coast. After a free three-month trial period, activation and service subscription fees apply. Service is based in the continental U.S. and Canada. For more information, visit XM online at www.XMradio.com or call 1-800-929-2100.

See Section 3 of your Owner Manual.

INSTRUMENT PANEL FEATURES

Instrument Panel




The main features of the instrument panel include:

- A. Side Air Outlets
- B. Side Window Outlets
- C. Turn Signal/Multifunction Lever
- D. Instrument Panel Cluster
- E. Windshield Wiper/Washer Lever
- F. Center Air Outlets
- G. Hazard Warning Flashers Button
- H. Adjustable Pedals Button (if equipped)
- I. Instrument Panel Brightness Control

- J. Fog Lamps Switch
- K. Hood Release
- L. Cruise Control (if equipped)
- M. Horn
- N. Audio Steering Wheel Controls (if equipped)
- O. Ignition Switch
- P. Shift Lever
- Q. Climate Control System
- R. Audio System
- S. Glove Box

See Section 3 of your Owner Manual.

Instrument Panel Cluster

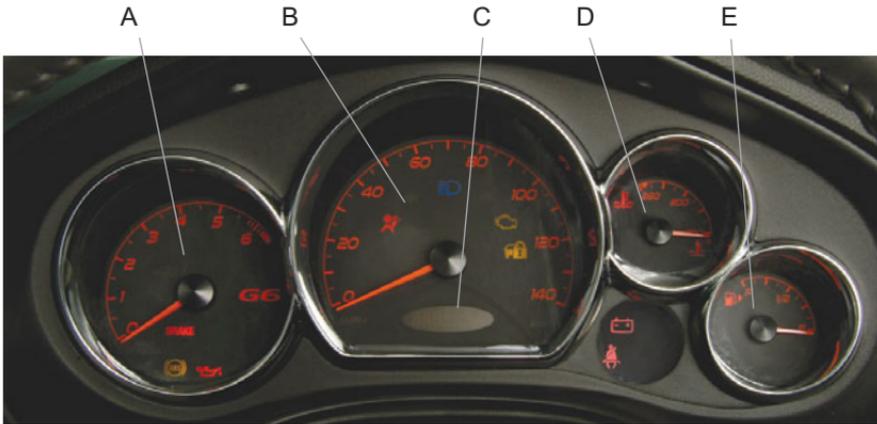

Your vehicle's instrument panel is equipped with this cluster or one very similar to it. The instrument panel cluster includes these key features:

- A. Tachometer
- B. Speedometer
- C. Odometer
- D. Engine Coolant Temperature Gauge
- E. Fuel Gauge

Note: The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

See Section 3 of your Owner Manual.

Driver Information Center

Your vehicle's audio system not only performs the standard audio functions but also has an integrated Driver Information Center (DIC) that provides vehicle information, vehicle feature personalization and vehicle warning messages. To operate the DIC, the ignition switch must be in the Run (I) position.



The DIC messages will be shown on your audio system display. The DIC is controlled through the following three buttons located to the left of the audio system:

INFO: Use this button to scroll through the vehicle information mode displays.

MENU: Use this button to scroll through the personalization menu mode.

ENTER: Use this button to select a menu option or to acknowledge a warning message.

Vehicle Information

Press the INFO button to scroll through the following vehicle information:

- Trip A
- Trip B
- Fuel Range (until empty)
- Average Fuel Economy
- Average Speed
- Engine Oil Life

Press and hold the ENTER button to reset the information while it is displayed.

Vehicle Feature Personalization

A variety of your vehicle's features can be personalized to your preference. To personalize features other than Display Units, the vehicle must be at a complete stop:

1. Press MENU to scroll through the available personalization features.
2. Press and hold ENTER for one second to toggle between the available options for each feature.
3. Press MENU to record your selection and move to the next feature.

Personalization features include the following (note that the first option listed under each feature is the factory setting):

- Oil Life Reset
- Display Units of DIC, speedometer and odometer
 - English
 - Metric
- Remote Start Capability
 - On
 - Off
- Lock Horn (Horn chirp during RKE locking)
 - On
 - Off
- Unlock Horn (Horn chirp during RKE unlocking after the last door is closed)
 - Off
 - On
- Light Flash (Exterior light flash during RKE locking and unlocking)
 - On
 - Off
- Delay Lock (Delays locking the vehicle for five seconds after the last door is closed)
 - On
 - Off
- Auto Unlock (Automatically unlocks the vehicle doors)
 - All Doors
 - Driver's Door
 - None

- Unlock (Determines when Auto Unlock will occur)
 - Shift to Park (automatic transaxle)
 - Key Off (manual transaxle)
- Exterior Lights (Exterior perimeter lighting during RKE unlock)
 - On
 - Off
- Display Language (DIC information can be displayed in several languages)
 - English
 - French
 - Spanish
 - German

Note: Not all of these personalization features may be available on your vehicle.

Warnings and Messages

This function provides a variety of messages (depending on optional equipment), such as door ajar and low fuel.

To acknowledge a message and clear it from the display, press any of the three DIC buttons: INFO, MENU or ENTER. If the condition is still present after the vehicle has been turned off and back on, the warning message will be displayed once again.

See Section 3 of your Owner Manual.

CONVENIENCE FEATURES

Automatic Door Locks

For your safety, your vehicle is programmed at the factory to lock all doors automatically when all doors are closed, the ignition is on and the shift lever is moved out of Park (automatic transaxle) or above a set speed (manual transaxle).

This feature cannot be disabled; you can personalize the unlock features by using the Driver Information Center.

See Section 2 of your Owner Manual.

Automatic Transaxle with Manual Shift Mode (if equipped)

You can enjoy the sporty driving characteristics provided by a manual transaxle with the Manual Shift Mode. This feature allows you to electronically shift gears as you would with a manual transaxle, but without using a clutch.

To enter the Manual Shift Mode, move the gearshift lever to the Manual Shift (M) position.



Upshift

Select the next higher gear while driving by tapping the gearshift lever forward (+). As vehicle speed increases, the transaxle will not automatically upshift. The system features built-in

powertrain protection that will limit engine speed to prevent any damage from over-revving the engine.

Downshift

Select the next lower gear while driving by tapping the gearshift lever rearward (-). If current vehicle speed is too high for the requested lower gear, the downshift will not occur.

The transaxle will automatically shift down into first gear, if the driver does not, when coming to a stop.



While operating in the Manual Shift Mode, the current gear selection is displayed in the instrument panel cluster.

See Section 2 of your Owner Manual.

Speed-Sensitive Wipers



The speed-sensitive wipers lever is located to the right of the steering column. The wipers include the following settings:

 **(Intermittent):** Move the lever up to this position to have the wipers adjust with your vehicle speed. Rotate the speed-sensitive wiper control on the lever to increase or decrease the wiper delay.

 **(Low):** Move the lever up to this position to turn the wipers on Low.

 **(High):** Move the lever up to this position to turn the wipers on High.

 **(Mist):** Move the lever down to this position to turn the wipers on for one wipe.

See Section 3 of your Owner Manual.

Cruise Control (if equipped)

The following cruise control buttons are located on the steering wheel:

 **(On/Off):** Press this button to turn the cruise control system on or off.

SET- (Set): Press this button to set a speed, or to decrease the set speed, if the system is engaged. When the cruise control is engaged, the cruise control symbol will illuminate in the instrument cluster.



RES+ (Resume): Press this button to resume a set speed, or to increase the set speed, if the system is engaged.

 **(Cancel):** Press this button to cancel a set speed and disengage the system.

See Section 3 of your Owner Manual.

Climate Control Airflow Modes



Turn the right mode knob to change the direction of the airflow inside the vehicle. The knob can be turned to any of the following five settings as well as between settings for a wide range of airflow adjustments:

 **(Vent):** This mode directs air to the instrument panel outlets.

 **(Bi-Level):** This mode directs air to the instrument panel outlets and floor outlets.

 **(Floor):** This mode directs most of the air to the floor outlets and some air to the side window outlets and windshield.

 **(Defog):** This mode directs air to the windshield, side window outlets and floor outlets.

 **(Defrost):** This mode directs most of the air to the windshield and some air to the side window outlets.

See Section 3 of your Owner Manual.

Automatic Climate Control (if equipped)

Turn the left and right knobs to AUTO to automatically control the inside temperature, air delivery mode and fan speed. Use the up and down temperature control buttons to adjust the temperature setting.

See Section 3 of your Owner Manual.

Window Defogging

 **(Defog):** Use this mode to clear the windows of moisture and to warm passengers. This mode splits the air delivery between the windshield and the floor outlets.

 **(Defrost):** Use this mode to remove fog or frost from the windshield more quickly. This mode directs most of the air to the windshield.

When you select the defog or defrost mode, the system automatically turns off recirculation and runs the air conditioning compressor. The  (Recirculation) mode cannot be selected because outside air is needed to remove interior moisture from the vehicle.

For faster window defogging on very humid, cool days, follow these tips:

1. Turn the climate control mode knob to  (Defrost).
2. Turn the temperature knob all the way into the red (Hot) area.
3. Turn the fan knob to top speed (4).

See Section 3 of your Owner Manual.

Exterior Lamps



Automatic Lamp Control (ALC)

When you start the vehicle at night or in a dark garage, the automatic headlamps will come on immediately. After driving into daylight, the system will switch to the DRLs after about a one-minute delay.

Also, when driving into dark tunnels or garages, the system delays turning on the headlamps to avoid unnecessarily switching on and off for a short time.

ALC Light Sensor

The ALC system's light sensor is located on top of the instrument panel. To ensure proper system operation, it is important to avoid placing any objects on or near the sensor or covering up the sensor, such as with an instrument panel cover.

Exterior Lamp Control Switch

The exterior lamp control switch is located on the lever to the left of the steering column. The switch can be rotated to each of the following four positions:

 **(Headlamps):** Turns on the headlamps, parking lamps and taillamps.

 **(Parking Lamps):** Turns on parking lamps and taillamps only.

AUTO: Automatic Lamp Control (ALC):

Automatically turns on Daytime Running Lamps (DRLs) in the daytime, and headlamps, parking lamps and taillamps at dusk or when necessary.

 **(Off):** When operating in the *AUTO* position, a momentary turn of the lamp control switch to the Off position will turn off the ALC and all of the exterior lights. The DIC will display an Automatic Lights Off message. To activate ALC, turn the switch again. ALC is always turned on when the vehicle is started.

See Section 3 of your Owner Manual.

Sunroof (if equipped)

The control switch for the sunroof is located on the headliner between the sun visors. It will operate only while the ignition is on.

Vent Position

- Open the sunshade by hand.
- Press the rear part of the switch and release it.

Fully Open Position

- Open the sunshade by hand.
- Press the rear part of the switch twice and release it. The roof will express-open all the way.

Closed Position

- Press the front part of the switch and hold it until the roof closes.
- Close the sunshade by hand.

See Section 2 of your Owner Manual.

60/40 Split Rear Seat

The split-folding rear seatback permits loading of longer items from the trunk.

Folding the Seatback

To fold down the rear seatback:

1. Open the trunk and locate the gray handles on the upper side of the trunk opening.
2. Position your hand over the top of one or both of the handles and pull toward you. The left handle opens the larger seatback; the right handle opens the smaller side.



3. Push the seatback open through the trunk or pull it open from inside the vehicle.

To return the seatback to an upright position, push it up until you hear a click and then pull on the seatback to make sure it is secure.

See Section 1 of your Owner Manual.

Retractable Hardtop Convertible (if equipped)

Before operating the hardtop:

- Make sure nothing is on top or in front of the cargo cover in the trunk.
- Make sure any item stowed in the trunk fits beneath the cargo cover.

If an item cannot be stowed without contacting the cargo cover, do not operate the retractable hardtop.

- The trunk cargo cover must be fully closed, and the trunk must be closed.
- The vehicle must be in Park, and the engine must be running or the ignition must be turned on.

Note: To help avoid damage to the retractable hardtop, always verify that no objects are in the storage area or on top of the cargo cover before operating the hardtop.

Lower or Raise the Hardtop

The switch to operate the retractable hardtop is located on the headliner between the front reading lamps.

- Press and hold the switch rearward to lower the hardtop and forward to raise the hardtop.

Always fully open or close the hardtop by holding the switch until the cycle is complete and a chime sounds. To automatically close the windows, continue to hold the switch for two seconds after the cycle is complete.

See Section 2 of your Owner Manual.

Window Indexing (Coupe/Convertible only)

To provide a tight seal around the doors, the window will automatically lower slightly when the door is opened and then automatically rise fully when the door is closed.

Follow the Owner Manual procedure for initializing the indexing feature if battery power is disconnected.

See Section 2 of your Owner Manual.

Securing the Fuel Cap

If the Check Gas Cap message is displayed on the Driver Information Center when the ignition is turned to Run or Start, check that your fuel cap is securely fastened. If the cap is not secure, turn it clockwise until a clicking sound is heard, indicating that it is properly installed.

The Check Gas Cap message will turn off after a few driving trips with the cap properly installed.

See Section 3 of your Owner Manual.

Resetting the Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and displays Change Oil Soon in the Driver Information Center (DIC) when it's necessary to change your engine oil and filter. The Oil Life System should be reset to 100% only following an oil change.

Resetting the Oil Life System

To reset the Oil Life System:

1. Press MENU once. The DIC will display Oil Life Reset.
2. Press and hold ENTER for at least one second.
3. An acknowledged message will display for three seconds when the system has been reset.

See Section 5 of your Owner Manual.

Vehicle Symbols Glossary

Following are examples of symbols you may find on your vehicle. It is important to become familiar with them, as they alert you to various vehicle operating conditions.

-  Airbag Readiness Light
-  Air Conditioning (A/C)
-  Antilock Brake System Warning Light
-  BRAKE Brake System Warning Light
-  Cruise Control Set
-  Headlamps
-  Instrument Panel Brightness Control
-  Malfunction Indicator Lamp (Check Engine Light)
-  Off
-  On/Off
-  On
-  Parking Lamps
-  Rear Window Defogger
-  Safety Belt Reminder Light
-  Security Light
-  Traction Control Off Light

Roadside Assistance

**1-800-ROADSIDE
(1-800-762-3743)**

TTY Users: 1-888-889-2438

As the proud owner of a new Pontiac vehicle, you are automatically enrolled in the Pontiac Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Pontiac's Roadside Assistance toll-free number is staffed by a team of technically trained advisors, who are available 24 hours a day, 365 days a year. The advisors can provide minor repair information or make arrangements to tow your vehicle to the nearest Pontiac dealer.

Pontiac will provide the following services for 5 years/100,000 miles at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealership for warranty service
- Flat tire assistance
- Jump starts

In many instances, mechanical failures are covered under Pontiac's comprehensive warranty. However, when other services are utilized, our advisors will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Pontiac reserves the right to limit services or reimbursement to an owner or driver when, in Pontiac's judgment, the claims become excessive in frequency or type of occurrence.

Roadside Assistance and OnStar (if equipped)

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

My GMLink

The Pontiac Owner Center at My GMLink, a complimentary service for Pontiac owners, is a one-stop resource to enhance your Pontiac ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at www.mygmlink.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. Copyright 2008 by GM Corp. All rights reserved.



* 1 5 8 9 8 4 7 5 A *



15898475 A