



Getting to Know Your 2005 Tahoe/Suburban



Table of Contents

INSIDE YOUR VEHICLE

Instrument Panel	2
Instrument Panel Cluster	3
Heated Front Seats	4
Power Lumbar Front Seats	4
Passenger Automatic Locking Restraint (ALR) ..	4
Driver and Front Passenger	
Safety Belt Reminder	4
Automatic Dimming Rearview Mirror with	
OnStar [®] , Compass and Temperature Display ..	5
Automatic Climate Control System	5
Manual Climate Control System	6
Rear Climate Control System	6
Entertainment Systems — Radio/CD	7
Touch Screen Navigation Entertainment	
System	8
Rear Seat Entertainment System	9
HomeLink [®] Transmitter	9
Sunroof	10

Steering Wheel Controls (OnStar [®] /Radio)	10
Adjustable Pedals	11
Cruise Control	11

OUTSIDE YOUR VEHICLE

Power Folding Mirrors	12
Power Camper-Type Mirrors	12
Automatic Headlamp Controls	12
Content Theft-Deterrent System	13
Daytime Running Lamps (DRL)	13
Tire Pressure Monitor	13

PERSONALIZING YOUR VEHICLE


Memory Positions for Driver's Seat,	
Mirrors and Power Adjustable Pedals	14
Memory Settings for Your Vehicle	15
Odometer/Trip Settings	16
Fuel Information	17

VEHICLE SYMBOLS GLOSSARY

ROADSIDE ASSISTANCE, My GMLink	20
--------------------------------------	----

Congratulations on your purchase of a Chevrolet Tahoe or Suburban. Please read this information and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Place this booklet in your Owner Manual portfolio for easy reference.

Instrument Panel

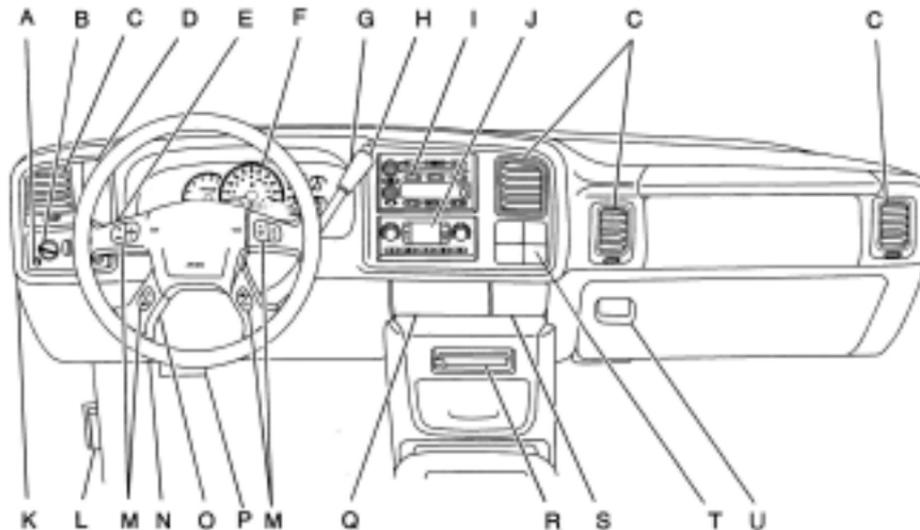


- A. Dome Lamp Override Button
- B. Lamp Controls
- C. Air Outlets
- D. Automatic Transfer Case/
StabiliTrak® Mode Button (AWD
Vehicles)/Traction Assist System
(TAS)
- E. Turn Signal/Multifunction Lever
- F. Instrument Panel Cluster

- G. Shift Lever
- H. Tow/Haul Selector Button
- I. Audio System
- J. Comfort Control System
- K. Instrument Panel Fuse Block
- L. Hood Release
- M. Steering Wheel Control Buttons
(if equipped)

- N. Center Instrument Panel Utility Block
- O. Tilt Wheel Lever
- P. Parking Brake Release
- Q. Lighter and Accessory Power Outlet
- R. Storage Area (if equipped)
- S. Ashtray
- T. Traction Control Switch (if equipped)
- U. Glove Box

See Section 3 of your Owner Manual.

Instrument Panel Cluster

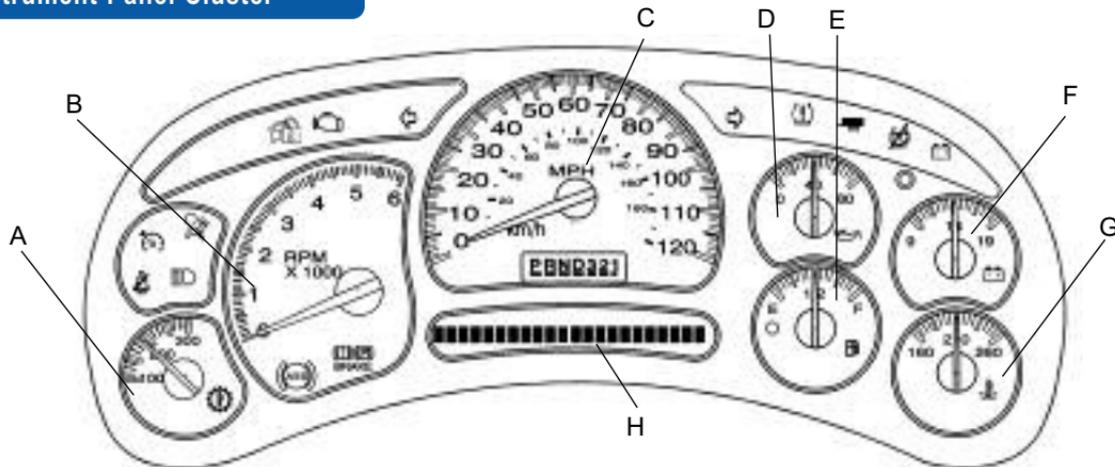

Your vehicle's instrument panel is equipped with this cluster or one very similar to it. (The U.S. Heavy-Duty Transmission version is shown here.)

The instrument panel cluster includes these key features:


- A. Transmission Temperature Gauge (if equipped)
- B. Tachometer

- C. Speedometer and Transmission Gear Selector
- D. Oil Pressure Gauge
- E. Fuel Gauge
- F. Voltmeter
- G. Engine Coolant Temperature Gauge
- H. Driver Information Center (DIC) and Odometer

IMPORTANT: See Section 3 of your Owner Manual for more information about what the lights, gauges and indicators on your vehicle's instrument panel tell you about your vehicle's operation.

See Section 3 of your Owner Manual.

Heated Front Seats (if equipped)

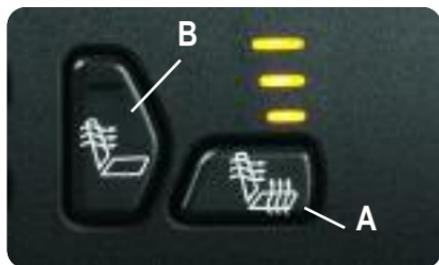

This feature allows you to heat the front seatbacks and seat cushions simultaneously or just the seatbacks. The controls are located on the driver and front passenger door panels.

Select a heat setting for both the seatback and seat cushion

- Press and release the horizontal button (“A” above) until the indicator light shows the desired setting.

Select a heat setting for the seatback only

- Press and release the vertical button (“B” above) until the indicator light shows the desired setting.

See Section 1 of your Owner Manual.

Power Lumbar Front Seats (if equipped)

Adjust lumbar support

- Press the front or rear of the control located on the side of the seat cushion near the door. Release at the preferred setting.



Adjust outer portion of lumbar seat-back area

- Press the top or bottom of the lumbar control. Release at the preferred setting.

See Section 1 of your Owner Manual.

Passenger Automatic Locking Restraint (ALR)

The safety belt is designed to lock during an accident, but it will also lock if it is pulled out all the way during initial buckling, and you may be unaware that this has happened. If the safety belt does lock, unbuckle it and allow it to retract fully, then pull it out and re-buckle the belt.

See Section 1 of your Owner Manual.

Driver and Front Passenger Safety Belt Reminder (if equipped)

A chime will sound and the safety belt light () will be illuminated and flash for several seconds when the ignition key is turned to Run or Start, or at any time the vehicle is running, and the driver's safety belt is not buckled.

If your vehicle is equipped with the passenger sensing system, the chime will sound and a message will be displayed on the Driver Information Center for several seconds if the passenger's safety belt is not buckled under the same conditions.

See Section 3 of your Owner Manual.

Automatic Dimming Rearview Mirror with OnStar®, Compass and Temperature Display (if equipped)

Controls for the dimming feature, as well as OnStar® (if equipped) and the compass and temperature displays, are located on the bottom of the mirror.

When on, the automatic interior dimming rearview mirror automatically dims to the proper level to minimize glare from lights behind you when it's dark outside.



Turn the self-dimming function on or off

- Press and hold  for approximately eight seconds.

Use the OnStar system

- Press  to connect to an OnStar® Advisor.
- Press  or  (depending on vehicle equipment) to answer or end a call from the OnStar® Center or Personal Calling.
- Press  in an emergency to connect to an OnStar® Advisor who can contact the nearest emergency services provider.

Turn the outside temperature displays and compass readings on or off

- Press .

Display temperature

- Press  and hold for four seconds (until the display blinks) to toggle between °C and °F. Once the desired °C or °F is displayed, release the button. Wait four seconds and the temperature will be displayed.

See *Section 2 of your Owner Manual.*

Automatic Climate Control System (if equipped)



Adjust settings for automatic operation

- Push the AUTO button (“A” above) and adjust the temperature knob (“B” above) to the desired temperature.

When automatic operation is active, the system will control the inside temperature, air delivery, air inlet and fan speed.

Set same temperature for driver and front passenger

- Press and hold the AUTO button for four seconds.
- Turn the passenger-side temperature knob to select a different temperature for the passenger.

Select air distribution manually

- Press and release the MODE button ("C" previous page) until the desired source of air is indicated on the display.

The MODE feature allows you to select air delivery to the floor, the instrument panel outlets, or the windshield outlets.

Manually raise or lower fan speed

- Press the upper or lower portion of the FAN control button ("D" previous page).

Additional Climate Control System Functions

: Recirculates interior air while in Vent, Bi-Level positions. Use this setting to get maximum cooling from the air conditioning system. To prevent window fogging, Recirculation will not operate in the Defog, Defrost or Floor mode.

: Clears windshield and front side windows of fog/frost.

: Clears rear glass of fog/frost and activates heated outside rearview mirrors (if equipped).

See Section 3 of your Owner Manual.

- Adjust driver/passenger temperatures with levers ("B" left).
- Set fan speed to desired setting ("C" left).

Additional Climate Control System Functions

: Recirculates interior air while in Vent, Bi-Level positions. Use this setting to get maximum cooling from the air conditioning system. To prevent window fogging, Recirculation will not operate in the Defog, Defrost or Floor mode.

: Clears windshield and front side windows of fog/frost.


: Clears rear glass of fog/frost and activates heated outside rearview mirrors (if equipped).

: Turns the air conditioning system on and off. The button's LED will illuminate when the air conditioning system is on.

Note: When the climate control system is in the OFF position (○), outside air will continue to enter the vehicle and will be directed according to the mode position selected. This is normal climate control operation.

See Section 3 of your Owner Manual.

Manual Climate Control System (if equipped)

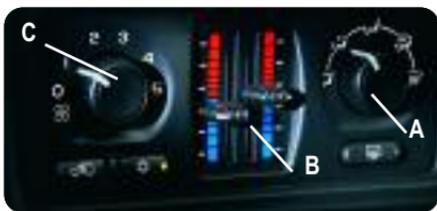

Adjust settings for operation

- Adjust air delivery location with mode control knob ("A" above).

Rear Climate Control System (if equipped)



With this system, the front or rear passengers can control the air tempera-

ture, airflow and fan speed for the rear seat passengers.

To operate the rear climate control system from the front seat position, use the driver overhead controls (shown above).

To use the rear seat controls, the front fan control knob must be in the AUX position.

On the rear seat control panel, press the mode button (🌀) and select AUTO if you want the system to regulate airflow.

Rear Air Conditioning *Only* Systems

Rear air conditioning only systems have two fan speed selectors: one in the overhead console and the other in the second row seat headliner. To use the rear seat controls, the front control must be in the AUX position.

See Section 3 of your Owner Manual.

Entertainment Systems — Radio/CD

Set the time on radios *without* a Radio Data System (RDS)

- Press and hold the HR or MIN arrow for two seconds.
- Press the HR (down) arrow until the correct hour appears on the display.
- Press and hold the MIN (up) arrow until the correct minute appears on the display.

Set the time on radios *with* a Radio Data System (RDS)

Your radio may have a button marked “H” or “HR” to represent hours and an “M” or “MIN” to represent minutes.



- Press and hold the hour button until the correct hour appears on the display.
- Press and hold the minute button until the correct minute appears on the display.

Note: The time may be set with the ignition on or off.



Program radio station presets

- Turn the radio on.
- Press BAND to select the band (AM, FM1/FM2/XM1/XM2).
- Use the seek button or tune knob to tune in the desired station.
- Press AUTO EQ or AUTO TONE (as applicable to your radio) to select the equalization that best suits the type of station selected.
- Press and hold one of the six numbered buttons until a beep sounds; release the button.
- Repeat these steps for each station preset, using a different numbered button for each station.

Access one of the two available XM Satellite Radio bands (if equipped)

- Press the BAND button until XM1 or XM2 appears on the display. (Note: Requires subscription to XM Radio.)



Six-Disc CD Changer (if equipped) Load 1 CD

- Turn the ignition on; then press and release the LOAD side of the LOAD CD button.
- Wait for the green indicator light at the right side of the slot to turn green.
- Insert the disc partway into the slot, label side up; the player will pull the disc in.

Load multiple CDs

- Turn the ignition on; then press and hold the LOAD button for two seconds. The unit beeps and the light to the right of the slot begins to flash.
- When the light stops flashing and turns green, insert a disc partway, label side up.
- The indicator light will begin blinking and then turn green. Load another disc at this time.
- When more than one disc is loaded, a number for each disc is displayed.
- To load more than one but fewer than six discs, press the LOAD button again after loading the final CD.
- For every CD loaded, a number appears on the radio display.
- To play a specific CD, press the CD AUX button and then the number of the CD you want to hear.

- A small bar appears under the CD number that is playing, and the track number appears.

Access Program Type Selections for Six-Disc CD Changer

- To turn Program Type on, press the TYPE button once.
- Turn the TYPE turn knob or press the TYPE button to select the Program Type you want.
- Press the SEEK or TYPE arrows and the radio seeks to the first available RDS broadcast of the selected Program Type.
- To turn Program Type off (while seeking), press the SEEK or TYPE arrows, or wait for the seek to complete. All stations will now be available when you press the SEEK button.

See *Section 3 of your Owner Manual.*

Touch Screen Navigation Entertainment System (if equipped)

Your vehicle's Navigation Entertainment System provides you with detailed maps of all major highways and roads throughout the United States. After you enter a destination, the system provides turn-by-turn instructions for reaching your destination. In addition, the system can help you locate banks, airports, restaurants, post offices, ATMs and more.

See your Owner Manual or Navigation Entertainment System Quick Reference Guide for operating instructions.

See *Section 3 of your Owner Manual.*

Rear Seat Entertainment System (if equipped)

The DVD Rear Seat Entertainment (RSE) system includes a DVD player and a video display screen, located in the overhead console, two sets of wireless headphones and a remote control.

To play a DVD:

- The ignition must be in the Run or Accessory position, or RAP (Retained Accessory Power, available after the ignition is turned off) must be active.
- Push forward on the release latch to fold down the video screen.
- Insert a DVD into the loading slot; it will automatically start.
- If a DVD is already loaded, press the Play/Pause button.
- Press the CD/AUX button on the radio until RSE appears on the radio display to listen to the DVD through your vehicle speakers.
- When using the wireless headphones, turn the headphones on and adjust the volume using the volume knob.

To stop or eject a DVD:

- To stop playing a DVD, press the Stop button. Press the Play button to resume viewing. If the Stop button is pressed twice, the DVD will resume viewing at the beginning.
- To eject a DVD, press the Eject button on the DVD player.

See **Section 3** of your *Owner Manual*.

HomeLink® Transmitter (if equipped)




Program HomeLink

1. Determine which of the three channels (buttons) you want to program: garage door opener, gate opener, entry door locks or other.
2. Press and hold the desired HomeLink button through step 3.
3. When the HomeLink light blinks slowly (within 30 seconds), hold your transmitter/opener 1" to 3" away from the HomeLink buttons. Then hold your transmitter button on until the HomeLink light flashes rapidly (up to 90 seconds). The process is now complete.

Note: If your transmitter has a "rolling code" feature, the above process may not work. Please refer to your Owner Manual or contact HomeLink at 1-800-355-3515 (www.homelink.com).

See **Section 2** of your *Owner Manual*.

Sunroof (if equipped)

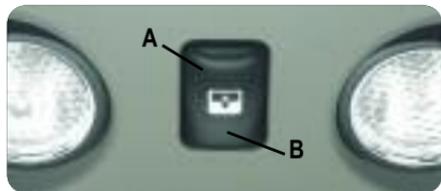

The sunroof controls are located in the overhead console.

Open sunroof to fully opened position

- Press the rear portion of the button ("A").

Close the sunroof

- Hold the front portion of the button ("B") down until the sunroof motor stops. The sunroof will tilt up slightly to seal. This is normal.

Open sunroof to vent position

- Press and hold the front portion of the button ("B") when the sunroof is closed.

See Section 2 of your Owner Manual.

Steering Wheel Controls (OnStar®/Radio) (if equipped)



(OnStar/Voice Recognition)

(if equipped): This button will activate OnStar® for use. (Note: If your vehicle is not equipped with the OnStar® system, pressing this button will mute the radio. For additional OnStar® features information, including Personal Calling and Virtual Advisor, see the OnStar® section of your Owner Manual.)

PROG: This button will cycle through the radio presets.

◀SOURCE▶: Selects AM, FM, XM Satellite Radio (if equipped), cassette or CD

◀SEEK▶: Seeks radio stations

◀VOL▶: Adjusts radio volume

See Sections 2 and 3 of your Owner Manual.

Adjustable Pedals (if equipped)

The buttons used to adjust the pedals are located on the driver's side door panel.



- Press the button closest to you to move the pedals closer to your body.
- Press the button farthest from you to move the pedals away from your body.

The vehicle must be in Park (P) for this feature to operate.

See *Section 2 of your Owner Manual*.

Cruise Control (if equipped)

Cruise control allows you to maintain a constant speed of 25 mph or more without keeping your foot on the accelerator pedal.



Setting Cruise Control:

1. Move the cruise control switch to on (I).
2. Attain the speed you want to cruise at.
3. Press in the Set button (+) at the end of the multifunction lever on the left side of the steering column.

4. Take your foot off the accelerator pedal.
5. The cruise symbol on the instrument cluster will illuminate.

There are two ways to increase speed while cruising:

- Use the accelerator pedal to get to a higher speed. Press (+) at the end of the multifunction lever to set the cruising speed. Release the accelerator pedal.
- Press the resume/accelerate switch (+) to get to a higher speed, and then release the switch.

To reduce speed while cruising:


- Press and hold (-) at the end of the multifunction lever until you reach the desired lower speed, and then release it.

See *Section 3 of your Owner Manual*.

Power Folding Mirrors (if equipped)

Fold mirrors

- Move the selector switch located above the mirror control (“A” right) to the center position.
- Press the right side of the four-way control pad (“B” above) to fold the mirrors in.
- Press the left side of the four-way control pad to fold the mirrors out.

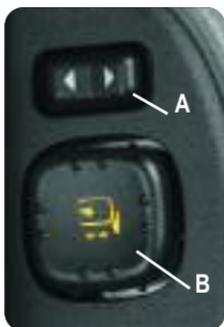

If the mirrors have been folded manually, they must be moved through the power folding cycle three times to reset them in their tracks.

See Section 2 of your Owner Manual.

Power Camper-Type Mirrors (if equipped)

Extend or retract mirrors

- Move the selector switch located above the mirror control to the center position (as shown under Power Folding Mirrors above).
- Press the left side of the four-way control pad to extend mirrors.
- Press the right side of the four-way control pad to retract mirrors.

See Section 2 of your Owner Manual.

Automatic Headlamp Controls

Turn off Daytime Running Lamps (DRL) and automatic headlamps

- Turn the exterior lamps knob (located to the left of the steering wheel) to OFF (○) and release.

Note: Your DRLs or automatic headlamps will re-engage at the next key cycle.



Activate the automatic headlamp system

- Turn the exterior lamps knob to AUTO. The automatic headlamp system will turn on the front and rear lamps.

Illuminate the parking lamps, side-marker lamps, taillamps, instrument panel/radio lights, license plate lamps and roof marker lamps (if equipped)

- Turn the exterior lamps knob to the parking lamp position (⊖ ⊕).

Manually activate the headlamps, all exterior tail/side-marker lamps and the instrument panel/radio lights

- Turn the exterior lamps knob to this position (☞☞).

Turn the fog lamps (if equipped) on or off

- Press the fog lamp button located on the left side of the instrument panel. An indicator lamp will illuminate when the fog lamps are on.




See Section 3 of your Owner Manual.

Content Theft-Deterrent System (if equipped)

Arm the system

- Lock the doors using the power door lock switch or the Keyless Entry System transmitter. The alarm is activated when the symbol shown above illuminates in the instrument panel cluster (approximately 30 seconds).

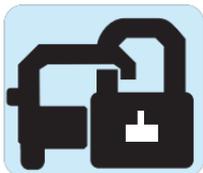

If your vehicle is equipped with a Driver Information Center, you can program the alarm to the following:

- Both Horn/Headlamps
- Horn only
- Lamps only
- Off

Note: Your vehicle's factory default setting is Horn and Lamps. See the Memory Settings for Your Vehicle section of this booklet for more information.

See Section 2 of your Owner Manual.

Daytime Running Lamps (DRL)

Disable the DRL when idling

- Shift the vehicle into Park.

See Section 3 of your Owner Manual.

Tire Pressure Monitor (if equipped)

This feature alerts you when a substantial reduction in pressure occurs in one of your vehicle's tires. If this occurs, a CHECK TIRE PRESSURE message will appear in the instrument panel cluster. This message will remain on until you reset the system.

You may notice during cooler conditions the Tire Pressure Monitor light () on the instrument cluster and message will appear when the vehicle is first started and then turns off as you start to drive the vehicle. This could be an early indicator that your tire pressures are getting low and need to be inflated to the proper pressure.

Reset the tire pressure monitor

- To reset the tire pressure message, you must fill the tires with the correct amount of air. The best time to check your tire pressure is when the tires are cold.

Note: The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal tire maintenance.

- Pressing the cluster stem on your instrument panel cluster or the Select/Reset button () on your steering wheel (if equipped) will temporarily eliminate the message.

However, at the next vehicle start-up, the message will reappear. The tire pressure must be corrected to permanently eliminate the message.

See *Section 5 of your Owner Manual.*

Memory Positions for Driver's Seat, Mirrors and Power Adjustable Pedals (if equipped)

Use the driver's door mounted controls to:

- Adjust driver seat, including lumbar adjustment
- Adjust gas and brake pedals
- Adjust the outside rearview mirrors
- With the vehicle in Park, press and hold Memory 1 or 2 until two chimes sound (about four seconds)



To set up for another driver:

- Repeat the process with the other memory button

See *Section 2 of your Owner Manual.*

Memory Settings for Your Vehicle (Driver Information Center) (if equipped)

To scroll through the features that can be customized using the Driver Information Center:

1. Press the Personalization button  located on the steering wheel.
2. Press the Select button  to choose your desired setting. The first setting is the default setting from the factory.
3. Press  to move to the next feature.

Lock Doors

(Automatically locks the doors.)

- Lock Doors: In Gear
- Lock Doors: With Speed

Unlock Doors

(Automatically unlocks the doors.)

- Unlock Doors: In Park
- Unlock Driver: In Park
- Unlock Doors: Key Out
- Unlock Doors: Manually

Door Lock Delay

(Delays locking the doors and tailgate until five seconds after the last door is closed.)

- Door Lock Delay: Off
- Door Lock Delay: On

Lock Feedback

(The feedback received when locking the vehicle with the Remote Keyless Entry transmitter.)

- Lock Feedback: Both
- Lock Feedback: Lamps

- Lock Feedback: Horn
- Lock Feedback: Off

Unlock Feedback

(The feedback received when unlocking the vehicle with the Remote Keyless Entry transmitter.)

- Unlock Feedback: Lamps
- Unlock Feedback: Horn
- Unlock Feedback: Both
- Unlock Feedback: Off

Headlamp Delay

(The amount of time the headlamps will stay on after the vehicle is turned off.)

- Headlamp Delay: 10 Sec
- Headlamp Delay: 20 Sec
- Headlamp Delay: 40 Sec
- Headlamp Delay: 1 Min
- Headlamp Delay: 2 Min
- Headlamp Delay: 3 Min
- Headlamp Delay: Off

Perimeter Lights

(The headlamps and back-up lamps will come on for 40 seconds, if it is dark enough, when unlocking the vehicle with the Remote Keyless Entry transmitter.)

- Perimeter Lights: On
- Perimeter Lights: Off

Easy Exit Seat

(The driver's seat moves to the exit position when the key is removed from the ignition.)

- Easy Exit Seat: Off
- Easy Exit Seat: On

Curb View

(The outside rearview mirror(s) tilt down when the vehicle is shifted into Reverse.)

- Curb View: Off
- Curb View: Passenger
- Curb View: Driver
- Curb View: Both

Alarm Warning

(The feedback received when the alarm is active.)

- Alarm Warning: Both
- Alarm Warning: Off
- Alarm Warning: Horn
- Alarm Warning: Lamps

Elevated Idle

(On diesel engines only. Activates the idle/exhaust restrictor feature.)

- Elevated Idle: Off
- Elevated Idle: On

Language

(The Driver Information Center display language.)

- Language: English
- Language: Francais (French)
- Language: Espanol (Spanish)

Display Units

(The units in which all information will be displayed.)

- Display Units: English
- Display Units: Metric

See Section 3 of your Owner Manual.

Odometer/Trip Settings (if equipped)

Press the trip information button  to scroll through the Odometer, Trip A, Trip B, Tire Pressures, Timer and Engine Hours choices on the Driver Information Center.



Odometer

This mode shows the total distance the vehicle has been driven in either miles or kilometers. Pressing the reset stem located on the instrument cluster with the vehicle off will also display the odometer.

Trip A

This mode shows the current distance traveled since the last reset for TRIP A in either miles or kilometers.

Trip B

This mode shows the current distance traveled since the last reset for TRIP B in either miles or kilometers.

Reset Trip Information

To reset TRIP A or TRIP B information, press and hold the Select button () for one second while in one of the trip modes. This will reset the information for TRIP A or TRIP B. You can also reset TRIP A or TRIP B while they are displayed by pressing the reset stem on

the cluster. If you press and hold the reset stem or  for four seconds, the display will show the distance traveled since the last ignition cycle for TRIP A or TRIP B.

Timer

The DIC can be used as a timer. Press  while TIMER is displayed to start the timer. The display will show the amount of time that has passed since the timer was last reset, not including time the ignition is off, up to 99 hours, 59 minutes and 59 seconds (99:59:59).

Engine Hours

This mode shows the total number of hours the engine has run. Pressing and holding the reset stem located on the instrument cluster for about four seconds will also display the engine hours after the odometer is displayed when the vehicle is off.

See Section 2 of your Owner Manual.

Fuel Information (if equipped)

Press the fuel information button  to scroll through the Fuel Range, Fuel Used, Average Economy and Engine Oil Life selections on the Driver Information Center.

Fuel Range

This mode shows the range in miles that the vehicle can travel with the current amount of fuel.

Fuel Used

This mode shows the current amount of fuel used in gallons since the last reset for Fuel Used. This mode should be reset after every fuel tank fill-up.

Average Economy

This mode shows the average fuel economy in miles per gallon since the last reset for Average Economy.

Engine Oil Life

This mode shows the percentage of oil life left until it is recommended to change the engine oil. An oil and filter change should be performed within 600 miles of the Change Oil message being displayed.

See Section 3 of your Owner Manual.

Vehicle Symbols Glossary

Following are examples of symbols you may find on your vehicle. It is important to become familiar with them, as they alert you to various vehicle operating conditions.

	Adjustable Pedals (if equipped)		Front and Side Window Defrost
	Air Bag Readiness and Warning Light		Four-Wheel Steer (if equipped)
	Air Conditioning (A/C)		Headlamps
	Antilock Brake System Warning Light		Instrument Panel Brightness Control
	Auxiliary Roof-Mounted Lamp Switch (if equipped)		Malfunction Indicator Lamp (Check Engine Light)
	Battery Warning Light		Off (for example, headlamp and climate controls)
	Brake System Warning Light		Off/On (for example, inside rearview mirror)
	Content Theft Deterrent		On (for example, cruise control lever)
	Cruise Control Set		Parking Lamps
	Dome Lamps Override Button		Driver Safety Belt Reminder Light (if equipped)
	Driver Information Center Trip Information Button (on steering wheel)		Rear Door Security Locks
	Driver Information Center Fuel Information Button (on steering wheel)		Rear Window Defogger
	Driver Information Center Personalization/Menu Button (on steering wheel)		StabiliTrak [®] System (if equipped)
	Driver Information Center Select Button (on steering wheel)		Tire Pressure Monitor Light (if equipped)
	Fog Lamps		Tow/Haul Mode Light
			Traction Off Light (if equipped)

Roadside Assistance

1-800-CHEV-USA

(1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, membership in the Roadside Assistance program is free.

Roadside Assistance is available 24 hours a day, 365 days a year by calling one of the above numbers. An advisor will provide you with over-the-phone roadside assistance with minor mechanical problems. If the problem can't be resolved over the phone, our advisors have access to a nationwide network of dealer-recommended service providers. Roadside membership is free; however, some services may incur costs.

Roadside offers two levels of service: Basic Care and Courtesy Care.

Roadside *Basic Care* provides:

- Toll-free number (shown above)
- Free towing for warranty repairs
- Basic over-the-phone technical advice
- Available dealer services at reasonable costs (i.e., wrecker services, locksmith/key service, glass repair)

Roadside *Courtesy Care* provides:

- Roadside Basic Care services (as outlined previously)

Plus:

- FREE Non-Warranty Towing (to the closest dealer from a legal roadway)

- FREE Locksmith/Key Service (when keys are lost on the road or locked inside)
- FREE Flat Tire Service (spare installed on the road)
- FREE Jump Start (at home or on the road)
- FREE Fuel Delivery (\$5 worth of fuel delivered on the road)

Courtesy Care is available to retail and retail lease customers operating 2004 and newer Chevrolet vehicles for a period of 3 years/36,000 miles (60,000 km), whichever occurs first.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Vehicle Identification Number (VIN)
- Vehicle license plate number
- Vehicle color and mileage
- Location of the vehicle
- Telephone number where you can be reached
- Description of problem

My GMLink

The Chevrolet Owner Center at My GMLink is a complimentary service for Chevrolet Owners, a one-stop resource to enhance your Chevrolet ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at www.mygmlink.com

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. Copyright 2004 by GM Corp. All rights reserved.



05TAHOEGTK B