

Getting to Know Your 2006

Malibu



TABLE OF CONTENTS

REMOTE KEYLESS ENTRY SYSTEM	
Remote Keyless Entry (RKE)	2
Remote Vehicle Start System	3
DRIVER PERSONAL FIT FEATURES	
Driver Seat Controls	4
Lumbar and Seatback Position Adjustment ..	4
Shoulder Belt Height Adjuster	4
Adjustable Throttle and Brake Pedals	5
Tilt/Telescope Steering Wheel	5
Outside Power Mirrors	5
Heated Seat Controls	5
AUDIO SYSTEM FEATURES	
Radio and CD Player Controls	6
Audio Steering Wheel Controls	7
Multiple-Disc CD Player	8
XM® Satellite Radio	8
Rear Seat Audio/Entertainment System	9
INSTRUMENT PANEL FEATURES	
Instrument Panel	10
Instrument Panel Cluster	11
Driver Information Center (DIC)	12
CONVENIENCE FEATURES	
Cruise Control	13
Climate Control Airflow Modes	13
Automatic Climate Control	14
Climate Control and Remote Vehicle Start ..	14
Exterior Lamps	15
Speed-Sensitive Wipers	15
Electronic Range Select Mode/	
Driver Shift Control	16
Sunroof	16
Windshield Pillar Convenience Clip	16
SEATING AND CARGO VERSATILITY	
Fold-Flat Front Passenger Seat	17
60/40 Split Folding Rear Seat	17
Cleaning the Interior Upholstery	17
MAXX FEATURES	
Unlatching the Liftgate	18
Multi-Flex Rear Seat	18
Rear SkyLight Sunshade	18
Rear Wiper	19
Rear Compartment Storage Panel	19
OWNER INFORMATION	
Roadside Assistance	20
My GMLink	20

Congratulations on your purchase of a Chevrolet Malibu. Please read this information about your vehicle's features and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

Remote Keyless Entry (RKE)



(Remote Vehicle Start) (if equipped): If your vehicle has this feature, it can be used to start the engine. (See Remote Vehicle Start System.)

(Lock): Press this button to lock all the doors. The interior lamps will turn off after a short delay once all doors are closed. If enabled through the Driver Information Center (DIC), the parking lamps will flash once and/or the horn will chirp to indicate locking has occurred.

(Unlock): Press this button to unlock the driver's door. If the button is pressed again within five seconds, all remaining doors will unlock. The interior lamps will illuminate and remain on for 10 seconds or until the ignition is turned on. If enabled through the DIC, the parking lamps will flash twice and the horn will chirp twice to indicate unlocking has occurred.

(Trunk/Liftgate Release): The trunk or liftgate will unlatch when this button is pressed and held for approximately one second. You can open the trunk with the transmitter when the vehicle is stationary. The liftgate on the Maxx can be opened only when the vehicle is in Park.

The trunk or liftgate may also be opened using the Trunk/Liftgate Release button located on the driver's door.

(Vehicle Locator/Panic Alarm): A new Vehicle Locator feature has been added to your car's Remote Keyless Entry.

Press and hold this button for approximately one second to locate your vehicle. The horn will sound three times and the headlamps and parking lamps will flash three times.

To sound the panic alarm, press and hold the button for three seconds. The horn will sound and the headlamps and parking lamps will flash for two minutes. Press the button again to cancel the panic alarm.

See Section 2 of your Owner Manual.

Remote Vehicle Start System (if equipped)

This feature allows you to start the engine from outside the vehicle by using the Remote Keyless Entry transmitter. (Normal transmitter range is within about 200 feet of the vehicle.) The remote start capability must be turned on using the Driver Information Center in order for the Remote Vehicle Start System to function. (See Driver Information Center.)

You can also set the vehicle's climate control system to heat or cool the vehicle interior. (See Climate Control and Remote Vehicle Start or see Section 3 of your Owner Manual.)

The engine will run for about 10 minutes before turning itself off, but can be reset for 10 minutes more by performing another remote start sequence at any time. After two consecutive remote starts, no additional remote starts are allowed until the vehicle has been started with the ignition key.

Note: The Remote Vehicle Start System will not operate if the hood is open or if the key is in the ignition.

Starting the Vehicle

1. Aim the transmitter at the vehicle.
2. Press and release the  (Lock) button on the transmitter.
3. Immediately press and hold the  (Remote Vehicle Start) button for about two seconds. When the vehicle starts, the parking lamps will illuminate and stay on while the engine is running.
4. Repeat these steps for a 10-minute time extension.
5. After a remote start, the key must be inserted in the ignition and turned to the Run position before driving.

Note: If the Service Engine Soon light is illuminated on the instrument panel cluster, the Remote Vehicle Start System cannot be used. See your dealer for the proper repairs.

Canceling a Remote Vehicle Start

If you wish to turn off the engine instead of driving after a remote start, perform one of the following functions:

- Press and hold the  (Remote Vehicle Start) button until the parking lamps turn off.
- Press and release the Hazard Warning Flashers button inside the vehicle. Press the button again to turn off the flashers.
- Turn the key in the ignition switch to the Run position and then off.
- The engine will automatically stop when time expires.

See Section 2 of your Owner Manual.



Driver Seat Controls

The driver's seat can be adjusted fore/aft and up/down as well as reclined. The front and rear tilt of the seat cushion also can be adjusted, if equipped.



Manual Fore/Aft Seat Adjustment Lever



Two-Way Power Seat Height Control



Six-Way Power Seat Control (if equipped)

See Section 1 of your Owner Manual.

Lumbar and Seatback Position Adjustment (if equipped)

Adjust the lumbar support using the lumbar lever (A) located on the outboard side of the driver's seatback. Ratchet the lever down to increase support and up to decrease support. You may need to ratchet the lever several times for the desired amount of support.

Adjust the seatback position by pulling up the recliner lever (B) and adjusting the seatback forward or rearward. Release the lever to secure the seatback in place.



See Section 1 of your Owner Manual.

Shoulder Belt Height Adjuster

The front seat shoulder belts can be adjusted to the height that is right for each occupant. Push the Release button up or down to move the height adjuster. Once in a comfortable position, try to move the height adjuster to make sure it is locked in place.

See Section 1 of your Owner Manual.

Adjustable Throttle and Brake Pedals (if equipped)



The throttle and brake pedals can be adjusted to a comfortable and safe operating position using the button located on the left side of the instrument panel. The vehicle must be in Park to adjust the pedals.

Press the left ◀ side of the button to move the pedals away from you and the right ▶ side of the button to move the pedals toward you.

See Section 2 of your Owner Manual.

Tilt/Telescope Steering Wheel

To adjust the tilt/telescope steering wheel:

1. Pull down the lever located on the left side of the steering column to unlock the wheel.
2. Move the wheel up to a centered position or higher to telescope it in or out to a comfortable position.
3. Tilt the wheel up or down to a comfortable position.
4. Push up the lever all the way to lock the wheel in place.




See Section 3 of your Owner Manual.

Outside Power Mirrors

The outside power rearview mirrors may be adjusted using the controls located on the driver's door.

Use the selector switch (A) to select the driver-side mirror or passenger-side mirror; and then use the control pad (B) to adjust the selected mirror up, down or side-to-side. The mirror will move only when the control pad is in the 12, 3, 6 or 9 o'clock position. Move the selector switch to the center position when not adjusting either mirror.

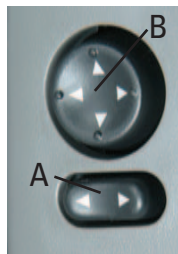

See Section 2 of your Owner Manual.

Heated Seat Controls (if equipped)

The heated front seat controls are located on the outboard corner of the driver's and front passenger's seats.

High: Press the top of the switch (I) once to turn on the heated seat to the high setting (indicator light number 2).

Low: Press the top of the switch (I) twice to turn on the heated seat to the low setting (indicator light number 1).

Off: Press the bottom of the switch (O) to turn off the heated seat.

See Section 1 of your Owner Manual.



Radio and CD Player Controls



While most of the radio and CD player controls and features on your audio system will look familiar, following are some that may be new.

Display

On radios with a single-line display, the DIC overwrites the radio information while in use. On radios with two-line displays, the top line shows radio frequency or time and outside temperature; the second line shows DIC information.

Left Controls

⏻ (Power): Press the center of this knob to turn the power on or off.

🔊 (Volume): Turn the outside ring of this knob to adjust the volume.

BAND (if equipped): Press this button to switch to FM1, FM2, AM, or XM1 and XM2 (if equipped).

SRCE (Source) (if equipped): Press this button to change to the CD mode or an auxiliary mode (rear audio). Press the BAND button to return to the radio mode.

AUTO **◀ (Automatic Volume)** (if equipped): This feature automatically adjusts audio volume based on vehicle speed to compensate for outside road

noise. Press this button to set the volume compensation level at Low, Medium or High.

▼ SEEK ▲ (Seek/Scan): Press the up or down arrow to go to the next or previous radio station or, when a CD is playing, to the next or previous track.

To enter the scan mode, press and hold the up or down arrow for two seconds (a beep will sound). Radio stations will be scanned while in the radio mode and CD tracks while in the CD mode. Press and hold the up or down arrow for four seconds to scan radio station presets.

Right Controls

DISP (Display): Press the center of this knob to toggle the radio display between station frequency and time. It will also display song title and artist information, if available in the broadcast.

ADJ (Adjust): Turn the outside ring of this knob to tune radio stations and to adjust selected audio functions.

TONE: Press this button to display the bass, midrange and treble levels. Turn the **(DISP ADJ)** knob to adjust each level.

BAL/FADE (Balance/Fade): Press this button to display the balance between the right and left speakers and the fade between the front and rear speakers. Turn the **(DISP ADJ)** knob to adjust sound from the speakers.

AUTO TONE (Automatic Equalization): Press this button to select customized equalization settings for a radio station or CD.

Setting the Clock

To set the clock:

1. Press and hold the Clock button for two seconds to enter the Set Clock mode.

2. Use the ADJ knob to select the hour.
3. Press the Clock button.
4. Use the ADJ knob to select the minutes.
5. Press the Clock button again to complete the process.

Setting Preset Stations

Up to 30 preset stations (FM1, FM2, AM, XM1 and XM2 [if equipped]) can be programmed on the six numbered pushbuttons. To preset a station:

1. Turn on the radio.
2. Press the BAND button to select FM1, FM2, AM, XM1 or XM2.
3. Tune in the desired station.
4. Press the AUTO TONE button to select the equalization.
5. Press and hold one of the six numbered pushbuttons until you hear a beep. The station is now preset.

See Section 3 of your Owner Manual.

Audio Steering Wheel Controls (if equipped)



A number of audio controls can be adjusted at the steering wheel. They include:

+ - (Volume): Press the plus or minus button to increase or decrease the volume.

△▽ (Seek): Press the up or down arrow to go to the next or previous radio station or, when a CD is playing, to the next or previous track. Press and hold either arrow to scan radio stations.

BAND: Press this button to switch to AM, FM or XM (if equipped).

1-6: Press this button to go to the next preset radio station.

⏏ (Mute): Press this button to silence the system. Press the button again to turn the sound on.



SS models only

See Section 3 of your Owner Manual.

Multiple-Disc CD Player (if equipped)

With the in-dash 6-Disc CD player, note that you cannot directly load a CD as in single-play systems.



Loading a Single CD:

- Press and release the LOAD button. Wait for the display prompt to load the CD.

Loading Multiple CDs:

- Press and hold the LOAD button for two seconds. Follow the display prompts to load each CD.

Playing a Specific CD:

- Press the numbered pushbutton that corresponds to the loaded CD number on the display.

See Section 3 of your Owner Manual.

Note: CDs with any affixed labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at one time, or if scratched or damaged CDs are played, the CD player could be damaged. When using the CD player, use only CDs in good condition without labels; load one CD at a time; and keep the CD player and the loading slot free of foreign materials, liquids and debris. MP3-formatted CDs will not play in this CD player.

XM® Satellite Radio (if equipped)



On equipped radios, two additional listening bands are available: XM1 and XM2. To access these bands, press the BAND button until XM1 or XM2 appears on the display.

XM Satellite Radio provides more than 150 channels of digital-quality sound that goes wherever you go — coast to coast. XM Satellite Radio service is based in the 48 contiguous United States and in Canada (if available). An activation fee and service subscription are required. For more information, contact XM online at www.XMradio.com or call 1-800-852-XM (9696).

See Section 3 of your Owner Manual.

Rear Seat Audio/Entertainment System (if equipped)

This feature allows front seat and rear seat passengers to listen to different audio sources at the same time using the Rear Seat Audio (RSA) controls and the wireless headphones. The vehicle's rear speakers will be muted when the RSA system is turned on.



Rear Seat Audio

To operate the RSA system:

- Select AM, FM or XM (if equipped) by pressing the BAND button or select an audio source by pressing the SRC (Source) button.
- Use the SEEK buttons or the 1–6 (preset) button to change radio stations, tracks or CDs.
- Adjust the volume on the wireless headphones by turning the dial on the headphones, or on plug-in headphones by using the left and right volume control knobs.

Rear Seat Entertainment – DVD

The Rear Seat Entertainment (RSE) system has all of the functions of the RSA system, with the added features of a DVD player, flip-up video screen, remote control and auxiliary input jacks.

A quick reference card included with the headphone package provides basic operating instructions for the system, as well as instructions for stowing the wireless headphones and remote control.


To operate the RSE system:

- All DVDs and CDs will begin playing automatically. When playing a DVD, you may be required to press the Play button on the RSE system or the remote control to start playing the movie if the DVD stops at a menu screen.
- To switch between the DVD player and an auxiliary source, press the AUX button on the remote control.
- To disable the RSE system from the driver's seat, press the radio power button twice. To resume use of the RSE system, press the RSE power button.

Note: Front-seat passengers have control over an audio source if the rear-seat passengers are listening to the same source through the RSA/RSE system.

See Section 3 of your Owner Manual.


Instrument Panel

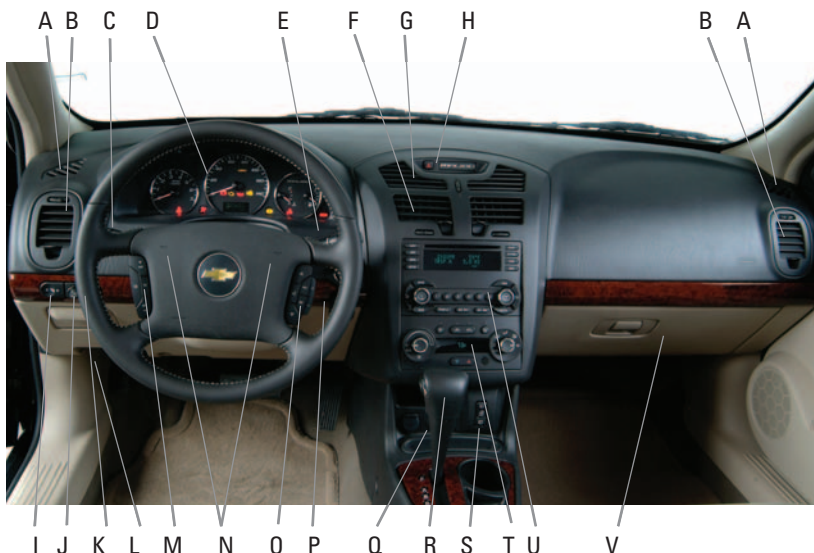

- | | |
|---|---|
| A. Side Window Outlets | M. Cruise Control |
| B. Side Air Outlets | N. Horn |
| C. Turn Signal/Light Control Lever | O. Audio Steering Wheel Controls (if equipped) |
| D. Instrument Panel Cluster | P. Ignition Switch |
| E. Windshield Wiper/Washer Lever | Q. Traction Control Button (if equipped) |
| F. Center Air Outlets | R. Shift Lever with Electronic Range Selection Button |
| G. Rear Seat Air Outlets | S. Rear Wiper Switch |
| H. Hazard Warning Flashers Button | T. Climate Control System |
| I. Adjustable Pedal Buttons (if equipped) | U. Audio System |
| J. Instrument Panel Brightness Control | V. Glove Box |
| K. Fog Lamps (if equipped) | |
| L. Hood Release | |

See Section 3 of your Owner Manual.

Instrument Panel Cluster

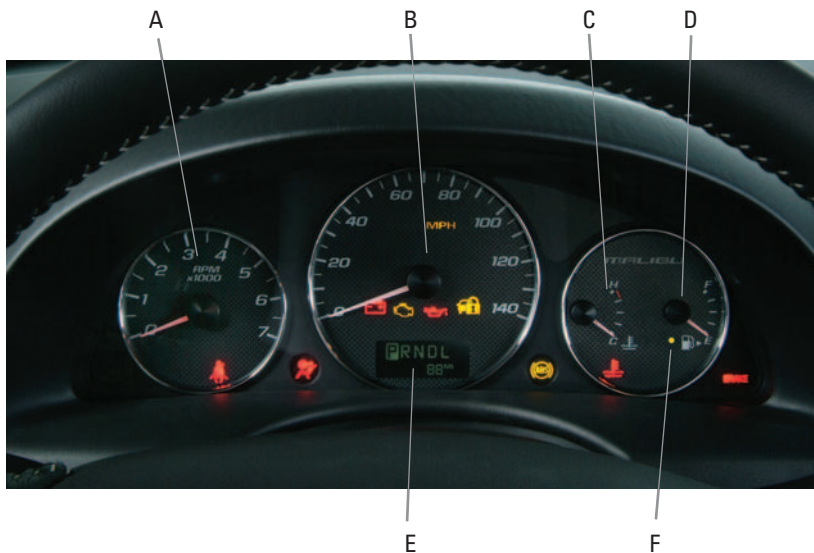

Your vehicle's instrument panel is equipped with this cluster or one very similar to it.

The instrument panel cluster includes these key features:

- A. Tachometer
- B. Speedometer
- C. Engine Coolant Temperature Gauge
- D. Fuel Gauge
- E. Odometer and Shift Indicator Display
- F. Low Fuel Indicator

Note: The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

See Section 3 of your Owner Manual.

Remote Keyless
Entry System

Driver Personal
Fit Features

Audio System
Features

Instrument
Panel Features

Convenience
Features

Seating and
Cargo Availability

Maxx
Features

Owner
Information

Driver Information Center (DIC)

Your vehicle's audio system also has an integrated Driver Information Center (DIC) that provides vehicle information and enables vehicle feature personalization. To operate the DIC, the ignition switch must be in the Run position.

The DIC is controlled through three buttons located on the left side of the audio system. The DIC messages will be shown on your audio system display.



INFO: Use this button to scroll through the vehicle information mode displays.

MENU: Use this button to scroll through the personalization menu mode.

ENTER: Use this button to select a menu option or to acknowledge a warning message.

Vehicle Information

Press the INFO button to scroll through the following vehicle information:

- Trip A
- Trip B
- Fuel Range (until low fuel)
- Average Fuel Economy
- Average Speed
- Engine Oil Life

Press and hold the ENTER button to reset the information while it is displayed.

Vehicle Feature Personalization

A variety of your vehicle's features can be personalized to your preference. Some personalization menu features are not available if vehicle speed is above 2 mph. To personalize features:

1. Press MENU to scroll through the available personalization feature.
2. Press ENTER to toggle between the available options for each feature.
3. Press MENU to record your selection and move to the next feature.

Personalization features may include:

- Units Selection (English/Metric)
- Oil Life Reset
- Remote Start Capability (if equipped)
- Horn Chirp (during RKE locking)
- Horn Chirp (during RKE unlocking)
- Exterior Light Flash (during RKE locking or unlocking)
- Delayed Locking
- Automatic Vehicle Unlocking (specific doors)
- Automatic Vehicle Unlocking (when key is off or shifted into Park)
- Exterior Perimeter Lighting (during RKE unlocking)
- Select Language (English, French, Spanish or German)

Note: Depending on equipment, not all personalization features may be available on your vehicle.

Warnings and Messages

The DIC provides a variety of messages (depending on optional equipment),

such as door ajar or low fuel, as well as warnings if a problem is sensed in a vehicle system.

To acknowledge a message and clear it from the display, press any of the DIC buttons. Some urgent messages cannot be cleared from the DIC display.

If your vehicle is equipped with OnStar and a warning message appears, you can press the blue OnStar button and speak to an OnStar Advisor. In many vehicles, OnStar Advisors can access certain diagnostic information and can tell you how serious the condition is and what you should do about it.

Note: Your vehicle's warnings and messages provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information displayed and the action required.

See Section 3 of your Owner Manual.

Cruise Control

The cruise control buttons are located on the steering wheel.

(On/Off): Press this button to turn the cruise control system on or off. This does not set the speed.

SET – (Set): Press this button to set the speed, or to decrease the speed if the system is set. When the cruise control speed is set, the cruise light will illuminate in the instrument cluster.



RES + (Resume): Press this button to resume a set speed, or to increase the speed if the system is set.

(Cancel): Press this button to cancel the cruise control set speed.

See Section 3 of your Owner Manual.



SS models only

Climate Control Airflow Modes



Automatic climate control shown

Turn the right control knob to change the direction of the airflow. The knob can be positioned between two modes for a wide range of airflow adjustments.

(Vent): This mode directs air to the instrument panel outlets.

(Bi-Level): This mode directs air to the instrument panel and floor outlets.

(Floor): This mode directs most of the air to the floor outlets and some air to the side window outlets.

Preventing Window Fogging

 **(Defog):** Use this mode to clear the windows of moisture and to warm passengers. This mode splits the air delivery between the windshield and the floor outlets.

 **(Defrost):** Use this mode to remove fog or frost from the windshield more quickly. This mode directs most of the air to the windshield.

When you select the defog or defrost mode, the system automatically turns off recirculation and runs the air-conditioning compressor. The recirculation  mode cannot be selected because **outside** air is needed to remove interior moisture from the vehicle, even on rainy days.

For faster window defogging on very humid, cool days, follow these tips:

1. Turn the climate control mode knob to  (Defrost).
2. Turn the temperature knob all the way into the red (Hot) area.
3. Turn the fan knob to top speed (4).

Note: Once the windows have cleared, changing the controls to a recirculation mode setting is not recommended because this will stop the outside airflow that is needed to maintain clear windows.

 **(Rear Defog):** Press this button to activate the rear window defogger. The defogger will turn off automatically after a set period of time, except at speeds above 50 mph, during which the rear window defogger will remain on to clear the window.

The heated side mirrors (if equipped) also are activated with the rear window defogger.

Maximum Air Conditioning

To cool the vehicle quickly on hot days, open the windows just long enough to let the hot inside air escape; then, for maximum cooling:

1. Select the  (Vent) mode.
2. Select the highest fan speed.
3. Select  (Air Conditioning).
4. Select  (Recirculation).
5. Select the coolest temperature.

See Section 3 of your Owner Manual.

Automatic Climate Control (if equipped)

Turn the left and right knobs to AUTO to automatically control the inside temperature, air delivery mode and fan speed. Use the up and down temperature control buttons to adjust the temperature setting.

See Section 3 of your Owner Manual.

Climate Control and Remote Vehicle Start (if equipped)

During a remote vehicle start, the manual climate control system will operate at its last setting before the vehicle was turned off.

With automatic climate control (if equipped), the system will sense your vehicle's interior temperature and operate as necessary to warm or cool the vehicle to a preset interior temperature. It will also activate the rear defogger if needed, based on outside temperature.

See Sections 1 and 3 of your Owner Manual.

Exterior Lamps



exterior lights. The DIC will display an Automatic Lights Off message. To activate ALC, turn the switch again. ALC is always turned on when the vehicle is started.

See Section 3 of your Owner Manual.

Speed-Sensitive Wipers



The speed-sensitive wipers lever is located to the right of the steering column.

(Intermittent): Move the lever up to this position to have the wipers adjust with your vehicle speed, increasing as you drive faster and decreasing when you slow down. Rotate the speed-sensitive wiper band on the lever down for a longer wiper delay, and rotate it up for a shorter delay.

(Low): Move the lever up to this position to turn the wipers on Low.

(High): Move the lever up to this position to turn the wipers on High.

(Mist): Move the lever down to this position to turn the wipers on for one wipe.

See Section 3 of your Owner Manual.

Automatic Lamp Control

Your vehicle is equipped with an Automatic Lamp Control (ALC) system, which automatically turns on the headlamps and other exterior lamps at night or when necessary. The exterior lamps also can be operated manually.

The Automatic Lamp Control system's light sensor is located on top of the instrument panel. To ensure proper system operation, it's important to avoid placing any objects on or near the sensor.

Exterior Lamp Control Switch

The exterior lamp control switch is located on the lever to the left of the steering column. The switch can be rotated to each of the following four positions.

(Headlamps): Turns on the headlamps, parking lamps and taillamps.

(Parking Lamps): Turns on parking lamps and taillamps only.

AUTO: Automatic Lamp Control

(ALC): Automatically turns on Daytime Running Lamps (DRLs) in the daytime and headlamps, parking lamps and taillamps at dusk.

(Off/On): When operating in the AUTO position, a momentary turn of the lamp control switch to the Off/On position will turn off the ALC and all of the

Electronic Range Select Mode/ Driver Shift Control



Electronic Range Select Mode

This feature allows you to limit higher gears by selecting a maximum gear range when the shift lever is in Low (L). Selecting L3 (third gear), for example, prevents fourth gear operation. Limiting gear ranges can be helpful when driving over steep hills or in deep snow or mud.

Use the +/– button on the shift lever to select a gear. The display on the instrument panel cluster will show the current gear selection.

Driver Shift Control (SS models only)

While using the Driver Shift Control, the vehicle will have firmer shifting for increased performance. To use this feature, move the shift lever to the Manual (M) mode and select a lower or higher driving gear using the button on the shift lever. The display on the instrument panel cluster will show the current gear selection.

Press the – (minus) side of the button to downshift. When slowing to a stop, the vehicle will automatically downshift.

Press the + (plus) side of the button to upshift. As vehicle speed increases, you will need to manually upshift.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur.

See Section 2 of your Owner Manual.

Sunroof (if equipped)

The control switch for the sunroof is located on the headliner between the sun visors. It will operate only while the ignition is on.

Vent Position:

1. Open the sunshade by hand.
2. Press and release the rear part of the switch.

Fully Open Position:

1. Open the sunshade by hand.
2. Press and release the rear part of the switch twice. The roof will fully express-open.

Closed Position:

Press and hold the front part of the switch until the roof closes.

See Section 2 of your Owner Manual.

Windshield Pillar Convenience Clip



A clip is located on the driver's side of the windshield. It can hold small items such as parking passes and toll tickets.

Fold-Flat Front Passenger Seat (if equipped)

The front passenger seat can be folded down for additional cargo room.

Fold Down the Seatback

1. Make sure the seatback is at the most upright position.
2. Push in the release button located on the side of the seatback and fold it down.



2. Position your hand over the top of one or both of the handles and pull toward you. The left handle opens the larger seatback; the right handle opens the smaller side.
3. Push the seatback open through the trunk or pull it open from inside the vehicle.



Raise the Rear Seatback:

1. Push the seatback up until you hear a click.
2. Pull on the seatback to make sure it is secure.

See Section 1 of your Owner Manual.

Raise the Seatback

1. Push in the release button located on the side of the seatback and pull it up.
2. Pull the seatback to make sure it is locked into position.
3. Use the recliner lever to adjust the seatback to a comfortable position.

See Section 1 of your Owner Manual.

60/40 Split Folding Rear Seat

The split folding rear seatback permits loading of longer items from the rear cargo area.

Fold Down the Rear Seatback

1. Open the trunk and locate the gray handles on the upper side of the trunk opening.

Cleaning the Interior Upholstery

In general, cleaning the entire seat panel is recommended, starting from the seams and moving into the stain to avoid a ring effect after drying.

For the cloth fabric seat, in most instances, soda water and a clean white cloth will remove spots and spills.

For the Ultra Lux™ fabric seat, in most instances, mild soapy water and a clean white cloth will remove spills and spots. For oil and grease spots, sprinkle baking soda on the spot and brush or wipe with a clean white cloth.

See Section 5 of your Owner Manual.


Unlatching the Liftgate



If the liftgate is unlocked, you can open it manually by pushing the touch pad switch located on the underside of the liftgate trim panel.

See Section 2 of your Owner Manual.

Multi-Flex Rear Seat

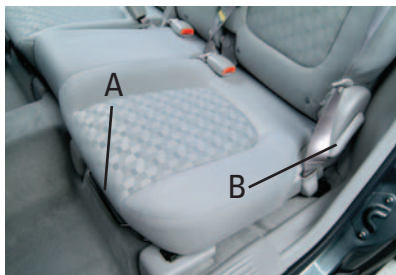

Adjusting the Multi-Flex Rear Sliding Seat

On Malibu Maxx models, the rear seat can slide forward to allow for more rear cargo space, or slide rearward or recline.

Slide the Seat

1. Lift the bar (A) under the front of the seat to unlock it and slide the seat to the desired position.
2. Release the bar.

Note: For vehicles equipped with the rear seat DVD system, locate the molded-in rib located on the plastic carpet retainer at the bottom of the left rear door opening. Keeping the seat rearward of this rib will ensure that the DVD screen can be fully opened without interfering with the seat.

Recline the Seat

1. Pull up and hold the recliner lever (B) located on the side of the seat.
2. Adjust to the desired position, and release the lever.

See Section 1 of your Owner Manual.

Rear SkyLight Sunshade



Your vehicle's rear skylight permits added light into the rear seating area. To reduce the amount of bright sunlight entering the rear seating area, close the retractable sunshade by pulling out the shade and hooking the tab into the notch in the skylight trim.

Rear Wiper



The rear wiper control switch is located on the instrument panel center stack.

- Press the top of the switch for continuous wiper operation.
- Press the bottom of the switch for a delay between wipes.
- Press the center of the switch to wash and wipe the rear window.

See Section 3 of your Owner Manual.

Rear Compartment Storage Panel



The shelf/cargo cover permits two-tiered cargo loading for maximum space utility. The shelf is faced with a carpeted surface on one side and a durable plastic surface on the other side for carrying dirty or wet cargo. To position the shelf at one of three levels:

1. Insert the front corners into the selected shelf guides and slide the shelf forward.
2. Press down on the back of the shelf to lock it down.

For added convenience, four grocery bag hooks are included on the rear edge of the shelf.

Utility Table



To set up the shelf as a utility table:

1. Place the shelf in the upper (Level 1) position, carpet or plastic side up, and extend the shelf out. The shelf extends only in the upper position.
2. Unsnap the leg from the plastic side of the table and turn the leg outward.
3. Set the leg securely into the groove on the plastic trim of the lower cargo opening.

See Section 2 of your Owner Manual.

Roadside Assistance

**1-800-CHEV-USA
(1-800-243-8872)**

TTY Users: 1-888-889-2438

As the proud owner of a new Chevrolet vehicle, you are automatically enrolled in the Chevrolet Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of technically trained advisors, who are available 24 hours a day, 365 days a year. The advisors can provide minor repair information or make arrangements to tow your vehicle to the nearest Chevrolet dealer.

Chevrolet will provide the following services for 3 years/36,000 miles (60,000 km), at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealership for warranty service
- Flat tire assistance
- Jump starts

In many instances, mechanical failures are covered under Chevrolet's comprehensive warranty. However, when other services are utilized, our advisors will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Chevrolet reserves the right to limit services or reimbursement to an owner or driver when, in Chevrolet's judgment, the claims become excessive in frequency or type of occurrence.

Roadside Assistance and OnStar (if equipped)

If your vehicle is OnStar-equipped, press the blue OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your condition, contact Roadside Assistance and relay your exact location so you will get the help you need.

My GMLink

The Chevrolet Owner Center at My GMLink is a complimentary service for Chevrolet owners, a one-stop resource to enhance your Chevrolet ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at www.mygmlink.com.

The GM logo consists of the letters "GM" in a white, bold, sans-serif font, centered within a blue square.

06MALIBUGTK B

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. Copyright 2005 by GM Corp.



★ 0 6 M A L I B U G T K B ★