

2007

CTS



CUSTOMER CONVENIENCE/PERSONALIZATION GUIDE

TABLE OF CONTENTS

DRIVER INFORMATION

Instrument Panel	1
Instrument Panel Cluster	2
Driver Information Center	3
DVD Navigation System Controls	4

COMFORT/CONVENIENCE

Daytime Running Lamps	5
Wipers/Washers	5
Power Window Controls	6
Universal Home Remote	6
Sunroof	6
Dual Climate Control System	7

SEATS & MIRRORS

Passenger Air Bag Status Indicator	8
Power Seat Adjustment	8
Heated Front Seats	9
Electrochromic Day/Night Rearview Mirror with Optional Compass	9
Power Outside Rearview Mirrors	9
Curb View Assist Mirror	10
Memory Seat and Mirrors	10

AUDIO/PERSONALIZATION/ COMMUNICATION

Audio Systems	11
Programming and Personalization	11
XM Satellite Radio	12
Six-Disc CD Changer Controls	12
OnStar®	13


POWERTRAIN & MAINTENANCE

Engine	14
Transmission	14
Traction & Stability	15

OWNER PRIVILEGES™

Roadside Service	16
Customer Assistance	16
Cadillac Online	16

Driver Information

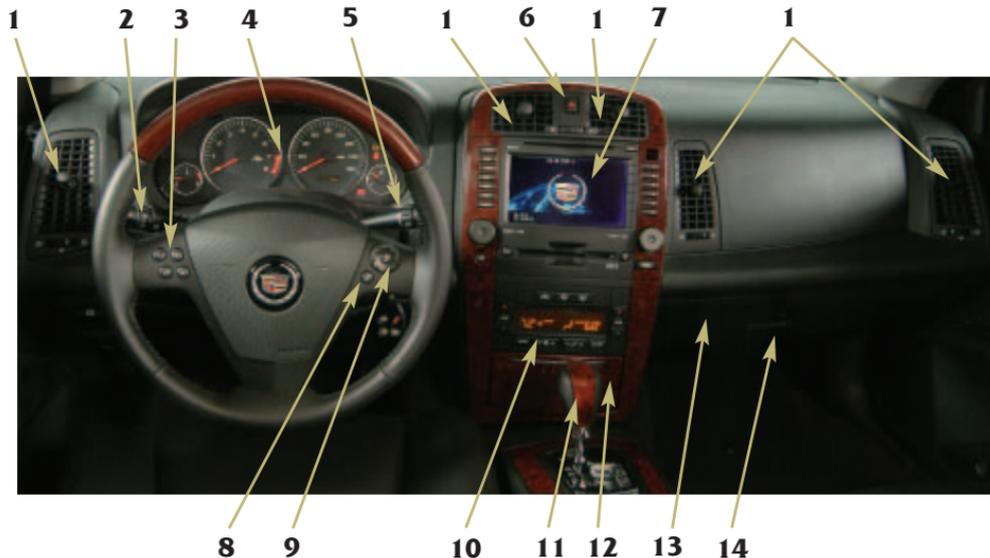


INSTRUMENT PANEL

- | | | |
|--|---|---|
| 1. Air Outlets | 7. Audio System or Navigation/Audio System (if equipped) | 10. Climate Controls |
| 2. Turn Signal/Multifunction Lever and Cruise Control Switch | 8. Audio Mute Button (Base Radio) or Voice Recognition Button (Navigation System) | 11. Transmission Shift Lever |
| 3. Configurable Steering Wheel Controls | 9. Audio Volume Knob and Source Button | 12. Lighter (if equipped) or Accessory Power Outlet |
| 4. Instrument Panel Cluster | | 13. Traction Control Button (inside Glove Box) |
| 5. Windshield Wiper Lever | | 14. Glove Box |
| 6. Hazard Warning Flasher Button | | |

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

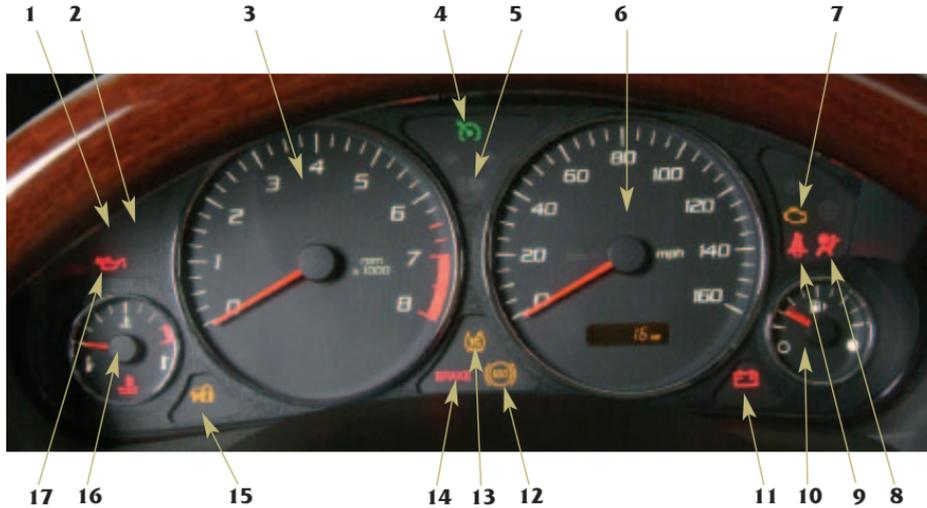

INSTRUMENT PANEL CLUSTER

- | | | |
|-------------------------|--|------------------------------------|
| 1. Lamps On Reminder | 7. Malfunction Indicator (Check Engine) Lamp | 12. ABS System Warning Light |
| 2. Fog Lamp Light | 8. Air Bag Readiness Light | 13. Traction Control Warning Light |
| 3. Tachometer | 9. Safety Belt Reminder Light | 14. Brake System Warning Light |
| 4. Cruise Control Light | 10. Fuel Gauge | 15. Security Light |
| 5. High Beam On Light | 11. Charging System Light | 16. Temperature Gauge |
| 6. Speedometer/Odometer | | 17. Oil Pressure Light |

Note: The instrument cluster is designed to let you know about many important aspects of your vehicle's operation. Some of the gauges and indicators may differ from the illustration presented.

The message center can provide critical information to prevent damage to your vehicle. It is important for you to read your Owner Manual and become familiar with the information that is being relayed to you by the lights, gauges and indicators, particularly the message center, as well as what action can be taken to ensure your safety and to prevent damage.

DRIVER INFORMATION CENTER (DIC)

The DIC displays the status of many of the vehicle's systems. It is also used to display driver personalization features and warning/status messages. All information will appear on the audio system display. If the vehicle is equipped with the optional Navigation System, the audio display system will be used to display DIC messages.

Refer to Owner Manual for further information.

The following procedures are provided only to acquaint you with the DIC. It is strongly recommended that you refer to the Owner Manual to become familiar with the various messages and how to access and/or reset them.

DIC Main Menu

The DIC main menu serves the audio systems. To access the main menu:

- For the base audio system, press the TUNE/SEL knob once and turn the knob in either direction to scroll through the menu items. Refer to your Owner Manual for detailed descriptions and procedures for menu items.

Vehicle System Status

You can use the DIC to check the status of several vehicle systems.



DIC Controls

If the vehicle is equipped with the base audio system, use the following controls to access the vehicle status menu.

- 1. INFO (Information):** Use the UP or DOWN arrow on the button to scroll through the status information.
- 2. CLR (Clear):** Press this button to clear and/or reset DIC items to zero. You must acknowledge a message to clear it from the screen for further use.
- 3. TUNE/SEL:** Once a menu is displayed, turn the knob located to the lower right of the display to scroll through menu items. Press the knob to select a menu item.

DIC Menu

- BLANK LINE
- OUTSIDE TEMPERATURE
- MI TRIP A
- MI TRIP B
- MILES RANGE
- MPG AVG
- MPG INST

Reviewed with Customer (Please Check Box)

BAND

F1

F2

F3

F4

F5

F6

SOURCE

- GAL FUEL USED
- AVG MPH
- TIMER
- BATTERY VOLTS
- ENGINE OIL LIFE
- TRANS FLUID LIFE

You can view any item at any time (but only one item at a time) by pressing the INFO button. Refer to Section 3 of your Owner Manual for detailed descriptions of the menu items and how to reset them.

DVD NAVIGATION SYSTEM CONTROLS

If your CTS has the optional DVD Navigation/Audio system, use the following controls to access the vehicle status menu.

Note: You can now play DVD movies while your vehicle is in Park.

- 1. INFO (Information):** Press this button to access the menu.
- 2. TUNE/SELECT:** Turn the lower right knob to scroll through the menu. Press the knob to select a menu item.

- 3. Press the bulleted button (•) on the right side of the display to select a menu item or to acknowledge a prompt.**



Navigation System Menu

- OUTSIDE TEMPERATURE
- TRIP ODOMETER A
- TRIP ODOMETER B
- FUEL RANGE
- AVERAGE FUEL ECONOMY
- INSTANTANEOUS FUEL ECONOMY
- FUEL USED
- AVERAGE VEHICLE SPEED
- TIMER
- BATTERY VOLTAGE

- ENGINE OIL LIFE
- BLANK DISPLAY
- TRANSMISSION FLUID LIFE

Refer to Section 3 of your Owner Manual for additional information on Navigation menu items.

DIC Messages

These messages will appear if there is a problem sensed in one of your vehicle's systems. The navigation/audio system will also display an icon with the message.

You must acknowledge a message to clear it from the screen for further use. To clear a message:

- Press the bulleted button (to the right of the screen) next to the OK prompt.

Note: Removing the message does not remove the sensed problem or condition. Refer to your Owner Manual for a list of messages and accompanying icons, a description of the condition and the recommended action. Be sure to regard seriously any message that appears and take the appropriate action.

Comfort/Convenience

DAYTIME RUNNING LAMPS (DRL)

Your vehicle's Daytime Running Lamps (DRL) automatically illuminate the turn signal lights at reduced brightness when:

- It is still daylight and the ignition is in the On or Start position.
- The headlight lever is in the Off or AUTO position and the headlights are off.
- An automatic transmission is not in Park, or the parking brake is not set on a manual transmission.



The sensor that activates the DRL and the headlights automatically is located on top of the instrument panel. Avoid covering the sensor to ensure proper light operation.

WIPERS/WASHERS

The lever to operate the windshield wipers and washers is located on the right side of the steering column.

Wiper Controls

 **(Mist):** Pull the lever down and release for a single wiping cycle; hold the lever down for more cycles.

 **(Off):** Place the lever in this position to turn off the wipers.

 **(Delay):** Place the lever in this position to set a delay between wipes.

 **(Delay Adjustment):** Rotate the band on the lever to adjust the length of the delay between wipes. The closer you move the band toward Mist, the longer the delay.

 **(Low Speed):** Place the lever in this position for slow, steady wiping cycles.

 **(High Speed):** Place the lever in this position for rapid wiping cycles.

Washers: Press the button located on the end of the wiper lever to cycle the windshield washer.

Headlamp Washers (if equipped)

Standard with the high-intensity discharge (HID) headlamps, the headlamp washers are activated when the windshield washer is activated. This occurs only when the headlamps are on. To wash the headlamps, press the washer button located at the end of the windshield wiper lever.



Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver
Information

Comfort/
Convenience

Seats & Mirrors

Audio/
Personalization/
Communication

Powertrain &
Maintenance

Owner
Privileges™

POWER WINDOW CONTROLS

Express Down

All of your vehicle's windows are equipped with an "Express Down" feature. Press the switch's down arrow to the second position to activate the express-down feature. Press the up arrow to stop the window.

Express Up

This feature is on both front power windows. Press the switch's up arrow to the second position to activate the express-up feature. Press the switch again to stop the window.

Battery Drain

When using an accessory power outlet, always turn off any electrical equipment that is not being used. Leaving this equipment on for extended periods can cause battery drain. Also, leaving your keys in the ignition when the engine is turned off keeps the vehicle's electrical modules active and can drain the battery.


UNIVERSAL HOME REMOTE (if equipped)

The Universal Home Remote is a combined universal transmitter and receiver that can activate up to three devices, such as garage door openers, entry door locks, gates and security systems.

It's recommended that you read the instructions in your Owner Manual completely before attempting to program any of the three channels on the Universal Home Remote. The engine should be turned off when programming the remote.

Note: Do not use the Universal Home Remote with any garage door opener that does not have the "stop and reverse" feature or any opener manufactured before April 1, 1982.

SUNROOF

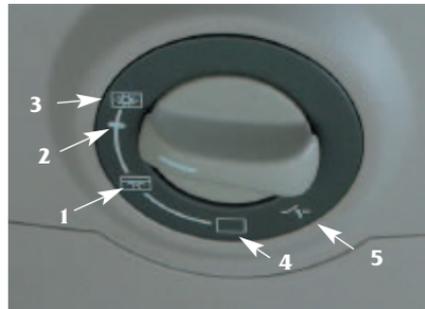

The sunroof control knob is located on the overhead console. The sunshade will always open with the sunroof, but must be closed manually.

1. Half-Open: Turn the control knob clockwise to this position to open the sunroof halfway.

2. **Comfort Stop:** Turn the control to this position to move the glass panel about three-quarters of the way open.
3. **Full Open:** Turning the control to this position opens the glass panel all the way.
4. **Vent:** Turn the control counterclockwise to this position to tilt the sunroof open. (The sunshade must be opened manually.)
5. **Close:** Turn the control to this position to close the sunroof.

DUAL CLIMATE CONTROL SYSTEM

Your vehicle's climate control system can be operated manually or automatically. With a dual climate control system, both you and your front seat passenger can choose different temperature settings.



AUTO: Press this button to automatically control the inside temperature, the air delivery mode and the fan speed.

Mode: Press this button to control the system manually. To clear fog from your windshield, press this button until the Floor/Defog icon (🌀) appears on the display. The Floor/Defog mode directs air between the windshield, floor outlets

and side windows. Press *AUTO* again to return to automatic operation.

PWR: Press this button on either side of the control panel to turn on the driver or passenger climate control system. Press the up or down arrow to increase or decrease the temperature for that system.

See your Owner Manual for complete operating instructions.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Seats & Mirrors

PASSENGER AIR BAG STATUS INDICATOR


Your vehicle is equipped with a Passenger Sensing System located in the front passenger seat for the front passenger frontal air bag, and a passenger air bag status indicator located on the rearview mirror.

Note: It is recommended that children not be placed in the front passenger seat, even with the Passenger Sensing System. All children should be secured in a rear seat, including an infant riding in a rear-facing infant seat, a child riding in a forward-facing child seat and an older child riding in a booster seat.

POWER SEAT ADJUSTMENT (if equipped)

The eight-way power seat controls are located on the outboard sides of the front seats.

1. Move the front or rear part of the control lever up or down to raise or lower the front or rear of the cushion.
2. Push down or pull up at the center of the control lever to raise or lower the entire seat.
3. Slide the control lever forward or rearward to move the entire seat in that direction.

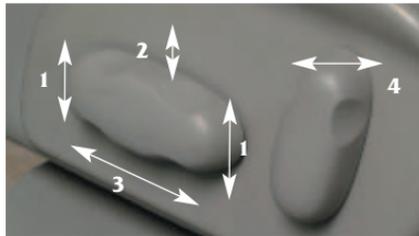

Power Recliner

The power recliner controls are located to the rear of the adjustment controls.


4. Move the top of the control lever forward or rearward to recline or return the seatback.

Power Adjustable Lumbar (if equipped)

The power adjustable lumbar feature is controlled by a two-way switch located rearward of the power seat switch. Press the switch in either direction to adjust the lumbar in the seatback to your most comfortable position.

HEATED FRONT SEATS (if equipped)

The buttons to heat the driver and passenger seats are located at each end of the top row of buttons on the Climate Controls panel. The ignition

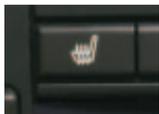

must be on to heat the seats. When the ignition is turned off, this feature is also turned off.

- To set the heat to LO (approximate normal body temperature), press the button twice for the selected seat. Press the button once for the HI setting. Press the button a third time to turn the heat feature off.
- Your selection will appear in the climate control system display panel.

ELECTROCHROMIC DAY/NIGHT REARVIEW MIRROR WITH OPTIONAL COMPASS

Mirror Operation

The electrochromic (automatic dimming) feature becomes active every time the vehicle is started.



1. To turn the electrochromic mirror off or back on while driving, press and hold the ON/OFF button for about three seconds. The symbol on the button will illuminate when automatic dimming is active.

Optional Compass Operations

If you have the mirror with the optional compass, the ignition must be on for the compass to operate.

1. Press the ON/OFF button once to turn the compass on or off.
2. When the compass is turned on, the upper-right corner of the mirror will display two characters for about two seconds, and then the compass heading.

Note: The compass feature may need to be adjusted for compass variance or calibrated if the reading is wrong or does not appear. Refer to your Owner Manual for procedures.

POWER OUTSIDE REARVIEW MIRRORS

The controls for both outside rearview mirrors are located on the driver's side armrest.

1. Press the left or right side of the rocker switch to operate the desired outside mirror. The neutral position will turn the power operation capability off.



2. Press the directional arrow on the control button to move the mirror in that direction.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

The mirrors can be folded manually inward to prevent damage in car washes or garages. Return the mirrors to their normal positions before driving. The mirrors also are heated to clear fog, snow or ice when the rear defogger is on. Refer to the Comfort/Convenience section of this guide.

CURB VIEW ASSIST MIRROR (if equipped)

If your CTS is equipped with the Memory Seat and Mirrors option, it will also have the Curb View Assist feature. When activated through the Driver Information Center (DIC), the passenger's mirror will tilt to a pre-selected position when the vehicle is shifted into reverse to assist the driver when parallel parking. If further adjustment is needed, the standard power controls can be used. Five seconds after shifting out of reverse, the mirror will return to its original position. The Curb View Assist feature can be enabled/disabled through the DIC.

MEMORY SEAT AND MIRRORS

Setting Driver's Position

The buttons to set the seat and mirror memory are on the driver's armrest. To set the memory, first ensure that seats and mirrors are On in the Personalization section of the DIC. Then, adjust the driver's seat, including the seatback recliner and both outside mirrors.

1. Press and hold button 1 until two beeps are heard to confirm memory setting.
2. Repeat the procedure using button 2 to store memory for a second driver.



Setting Exit Position

1. Press button 1 or the unlock symbol on the keyless entry fob with number 1 on the back. Adjust the driver's seat to the desired exit position.
3. Press and hold the exit button until two beeps are heard to confirm exit memory setting. Repeat the procedure for a second driver using button 2 or the unlock symbol on the keyless entry fob with 2 on the back.

To recall stored exit positions, press and release the exit button. A beep will sound and the seat will move to the memory exit position for the identified driver. If no exit position is stored, the seat will move all the way back.

Vehicles with automatic transmissions must be in Park to recall exit positions. For manual transmissions, the parking brake must be set if the engine is running.

Audio/Personalization/Communication

AUDIO SYSTEMS

Your CTS is equipped with one of the following audio systems:

Base Audio System

This system includes an AM/FM stereo radio with RDS, and single-disc CD player.

1.5 Bose Audio System

This system includes a Bose AM/FM stereo radio with RDS & DSP, and integral six-disc CD changer.

DVD Navigation/Audio System

This system contains an integrated navigation system utilizing a DVD player, a Bose AM/FM stereo radio with RDS and DSP, integral 6-disc CD changer and available XM Satellite Radio.

The system also features an XM NavTraffic™ receiver. XM NavTraffic is a subscription service offered by XM Radio that provides real-time traffic information integrated into the CTS navigation system to display current traffic conditions along major roadways in select markets.

If your CTS is equipped with this system, a supplemental manual is provided for operating instructions.

Refer to Owner Manual for further information.

PROGRAMMING AND PERSONALIZATION

The audio system in your CTS features the latest technology and provides maximum listening pleasure. Many of its features can be



Navigation/Audio System

programmed and personalized through the audio system itself or via the configurable steering wheel controls. Specific functions for seats, mirrors, door locks and lights can be programmed and personalized to accommodate two different drivers when they enter, exit or drive the vehicle.

Because of the extensive range of features available with your audio system, the selection, activation and programming of these features could not be adequately covered within the pages of this Convenience Guide. It is strongly suggested that you spend time to familiarize yourself with the available audio, convenience and personalization features and the procedures to select, activate or program them. Please refer to your Owner Manual and/or the Personalization Instructional Guide provided with this Convenience Guide for detailed descriptions and instructions.



Base Audio System

Reviewed with Customer (Please Check Box)



XM SATELLITE RADIO

Two subscription service bands are available: XM1 and XM2. To access them on equipped radios, press the BAND button until XM1 or XM2 appears on the display. An extra-cost subscription to XM Satellite Radio service brings you the quality of digital audio and text reception from coast to coast. Available only in the continental U.S. and Canada (if available). XM offers more than 150 channels of music, news, sports, talk and children's programming. For more information, visit XM online at www.XMradio.com or call 1-800-852-XXMM (9696).

SIX-DISC CD CHANGER CONTROLS (without Navigation System)

Loading One Disc:

With the ignition on or off, do the following:

- Press and release the LOAD button. Please Wait will appear on the display.
- Load the disc when the display reads INSERT. Insert a disc partway into the slot, label side up. The player will pull the disc in.

Loading Multiple Discs:

With the ignition on or off, do the following:

- Press and hold the LOAD button for two seconds. A beep will be heard and Please Wait will appear on the display.
- When the display reads INSERT, load a disc partway into the slot, label side up. The player will pull it in.

If the radio is on, the last disc loaded will begin to play automatically. Use the SEEK, SCAN and EJECT buttons to operate the player.

Note: CDs with any affixed labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at one time, or if scratched or damaged CDs are played, the CD player could be damaged. When using the CD player, use only CDs in good condition without labels; load one CD at a time; and keep the CD player and the loading slot free of foreign materials, liquids and debris.



ONSTAR®

The OnStar system provides in-vehicle safety, security and phone services, available 24 hours a day, 7 days a week. With OnStar, you can enjoy such available services as:

- Automatic notification of air bag deployment
- Emergency services assistance
- Roadside assistance
- Stolen vehicle tracking

- GM Goodwrench remote diagnostics
- Remote door unlock
- Driving directions and location assistance*
- OnStar Hands-Free Calling, a hands-free, voice-activated phone service**

These services are easily accessed through the three OnStar buttons in your vehicle.

- Press the blue OnStar button to connect to an OnStar Advisor for services such as GM Goodwrench Remote Diagnostics or driving directions and location assistance.*
- Press the white Phone button to access OnStar Hands-Free Calling, a hands-free, voice-activated phone service.**
- Press the red Emergency button to connect to an OnStar Advisor who can contact a nearby emergency services provider to dispatch ambulance, police, fire, or other emergency services to your location.

For more information about OnStar features, refer to the OnStar Owner's Guide and enclosed Audio CD located in your glove box.

* Routing and location assistance may require service upgrade

** Available in most markets

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Powertrain & Maintenance

ENGINE

Fuel

Your CTS is equipped with a 17.5-gallon fuel tank. When approximately two gallons are remaining in the tank, a low fuel warning light will illuminate in the Driver Information Center.

Note: The grade of gasoline you use can affect the performance of your vehicle and may even cause damage. Please refer to your Owner Manual for complete information regarding suggested octane ratings for optimum performance.

The fuel door is located on the right side of the vehicle and can be opened by pressing the forward edge of the door with your fingers.

Coolant Heater (if equipped)

The engine coolant heater can make starting the engine easier at temperatures below 0°F (-18°C).

For best results, the coolant heater should be plugged in at least four hours before starting your vehicle.

TRANSMISSION


Automatic Overdrive

Automatic Overdrive is best used for normal driving. To activate passing gear when going less than 35 mph (56 km/h), push the accelerator about halfway down; when doing more than 35 mph (56 km/h), push the accelerator all the way down. For further information regarding gear selection for various driving conditions, refer to your Owner Manual.

Driver Shift Control (automatic transmission only)

The Driver Shift Control (DSC) mode allows you to change gears similar to a manual transmission. To use the DSC mode:

1. Slide the gearshift lever from Automatic Overdrive (D) to the right into DSC.

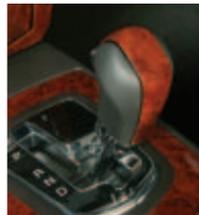

2. Press the gearshift lever forward to upshift or rearward to downshift.

Activation of the DSC mode is indicated by the illuminated sport mode light on the instrument panel cluster. Also, the odometer will change from the mileage to a number indicating the requested gear range.

When in DSC mode, if you do not move the gearshift lever forward or rearward to shift, the transmission will be in sport mode and will still shift automatically.



The transmission will only allow shifting into gears appropriate for the vehicle speed and engine rpm. The transmission will not automatically shift to the next higher gear if the rpm is too high.

TRACTION & STABILITY

Traction Control System

The Traction Control System is enabled every time you start your vehicle. When one or more of the drive wheels begin to spin from traction loss, the Traction Control System will apply braking to the spinning wheel(s) and may reduce engine power until traction is regained.

If your vehicle becomes stuck, and rocking the vehicle is required, the system should be turned off.

Press the button located in the glove box to turn the system off or back on.



StabiliTrak® – Stability Control System (if equipped with Sport Package)

StabiliTrak is an advanced computer-controlled system that assists with directional control of the vehicle during sudden maneuvers or low-traction situations. It is normal to hear the system working, and the system will automatically disengage cruise control when activated.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Owner Privileges™

To make your ownership experience as satisfying and rewarding as possible, we are proud to provide you with Cadillac's exceptional Owner Privileges, designed to accommodate you anytime and anywhere.

ROADSIDE SERVICE 1-800-882-1112

Roadside Service provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services:

- Towing Service
- Battery Jump-Starting
- Lockout Assistance
- Fuel Delivery
- Flat Tire Assistance
(covers change only)

Roadside Service and OnStar

When you press the blue OnStar button, the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Service and relay your

exact location so you will get the help you need.

Trip Interruption: If your trip is interrupted due to a component failure covered under warranty, incidental expenses may be reimbursed, including hotel, meals and rental car.

Courtesy Transportation may also be provided for warranted repairs, including shuttle service for same-day repairs and loaner transportation for overnight repair. Roadside Service is also available to Cadillac customers beyond the warranty period for a charge.

CUSTOMER ASSISTANCE 1-800-458-8006

In Canada, call 1-888-446-2000.

Should you need to ask a question, make a comment, or request additional information, the exclusive Cadillac Customer Assistance Center is staffed around the clock with professionals to serve you.

When you call Cadillac Roadside Service or Customer Assistance, when possible, please provide the

phone advisor with:

- Your telephone number
- Your location
- Your Cadillac's location
- A description of the problem
- Vehicle Identification Number
- Year and model of your Cadillac
- Delivery date
- Current mileage

CADILLAC ONLINE

For more information about your Cadillac, including access to the Cadillac Owner Center at My GMLink, visit www.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice.

CTS is a registered trademark of Cadillac Motor Car Division and General Motors Corporation. Copyright 2006 by Cadillac Motor Car Division. All rights reserved.



Driver
Information

Comfort/
Convenience

Seats & Mirrors

Audio/
Personalization/
Communication

Powertrain &
Maintenance

Owner
Privileges™

Cadillac



* 1 5 8 6 4 5 6 6 A *